

## Opening and Closing Umbrella

**Note: Damage to the steel cable and/or the frame as a result of operating the crank mechanism incorrectly is not covered under warranty.**

The crank model for this umbrella features a spring activated crank mechanism.

To open the umbrella, turn the handle clockwise until fully open.

To close the umbrella, continue to crank the handle clockwise until the runner reaches the spring ledge. This will disengage the spring and allow you to begin cranking counterclockwise to close the umbrella.