



INSTRUCTIONS

15 FT Backless Benches, Inground & Surface Mount



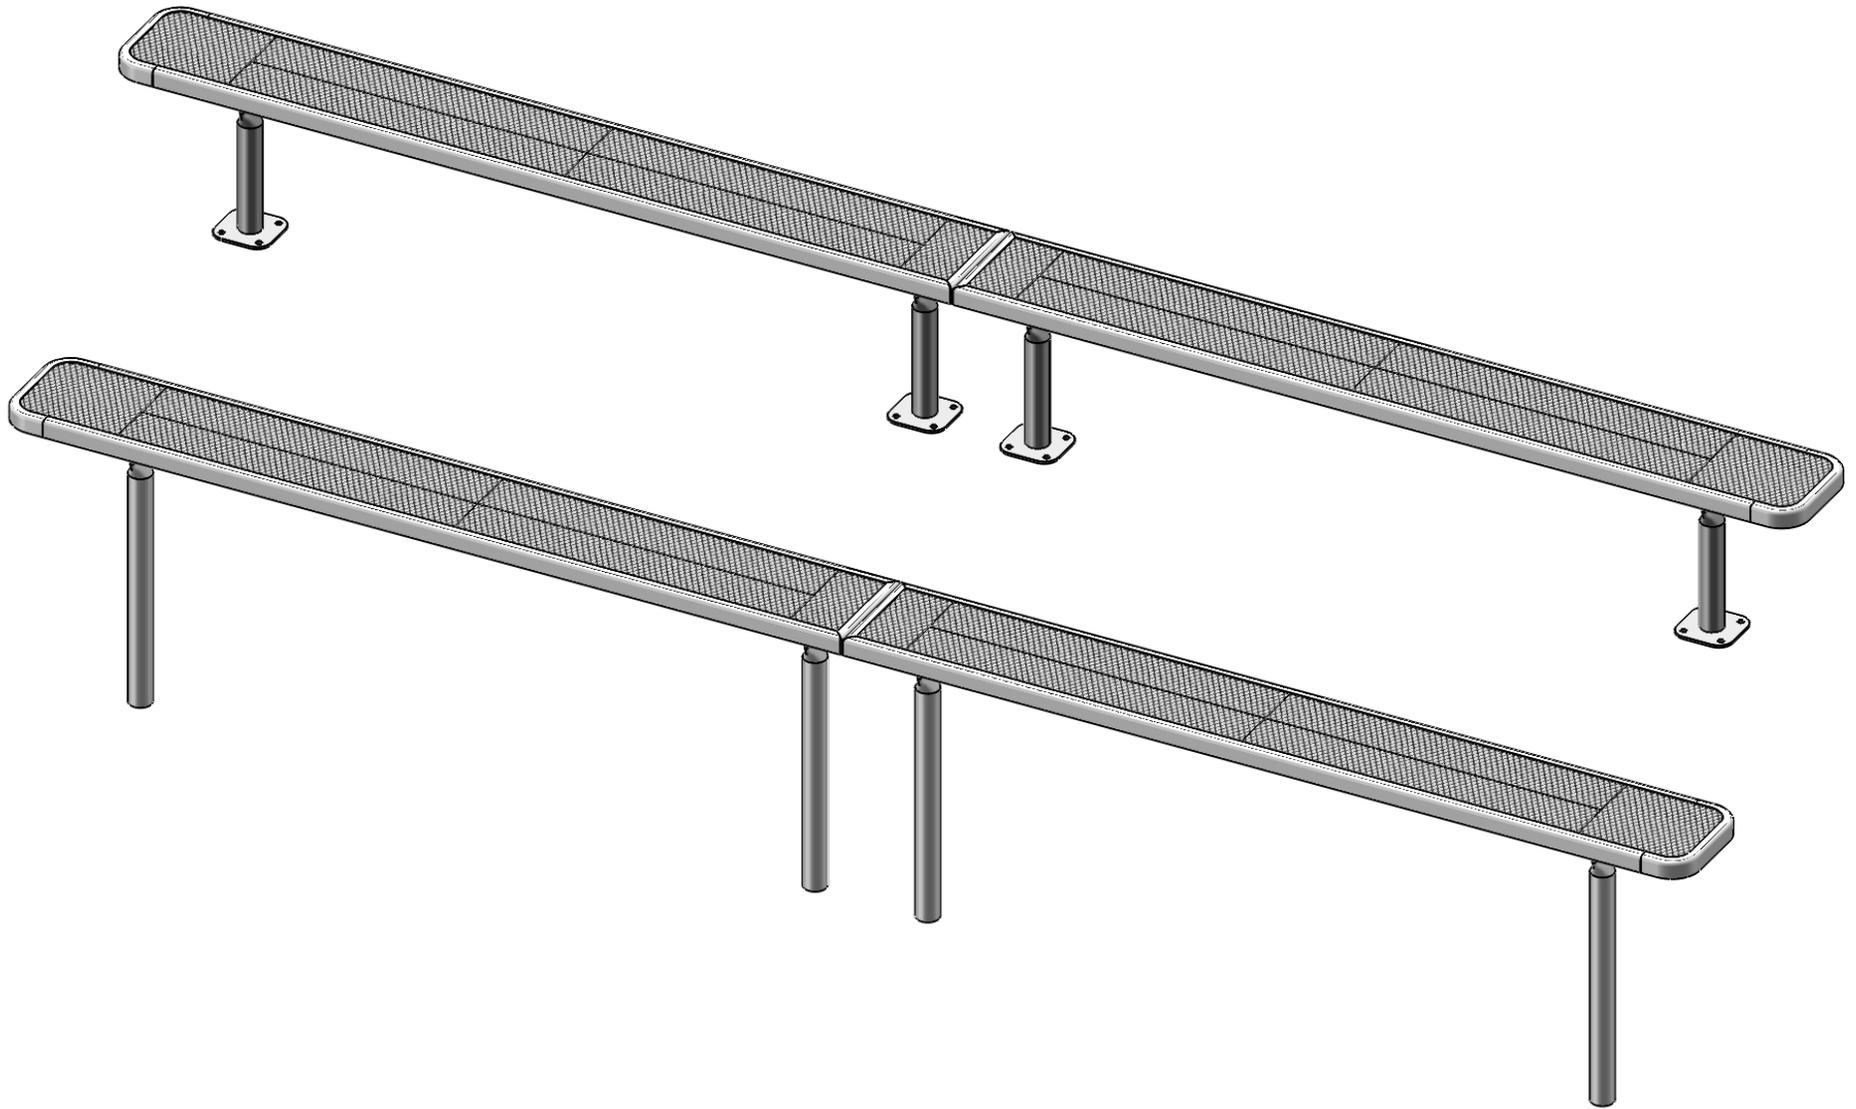


INSTRUCTIONS

Inground Mount

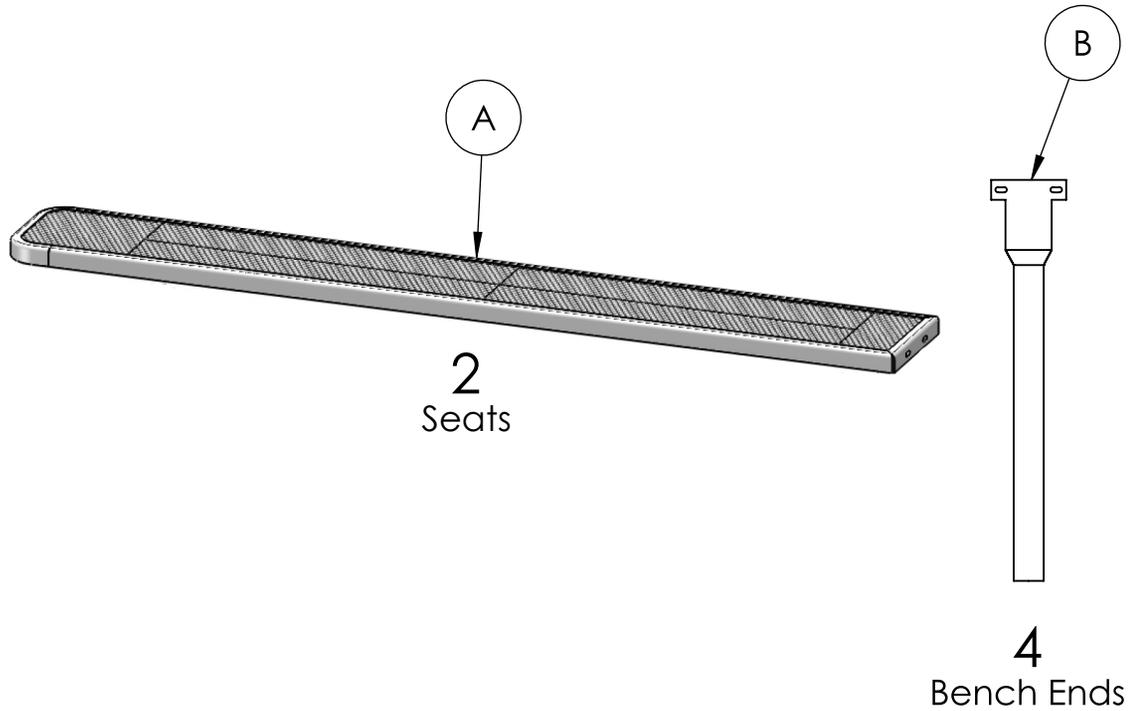

HARDWARE

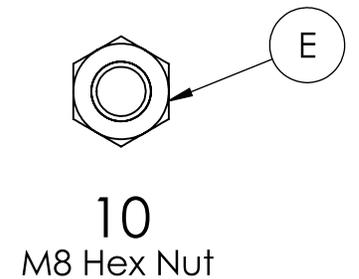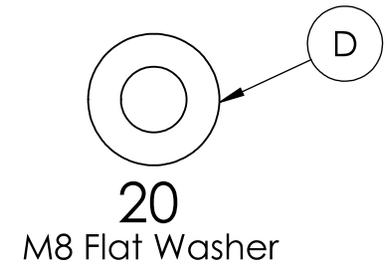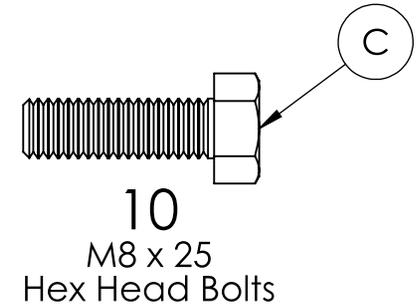

REQUIRED TOOLS (NOT INCLUDED)


- 1 - 13MM WRENCH
- 1 - 13MM SOCKET

NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/4

INSTRUCTIONS

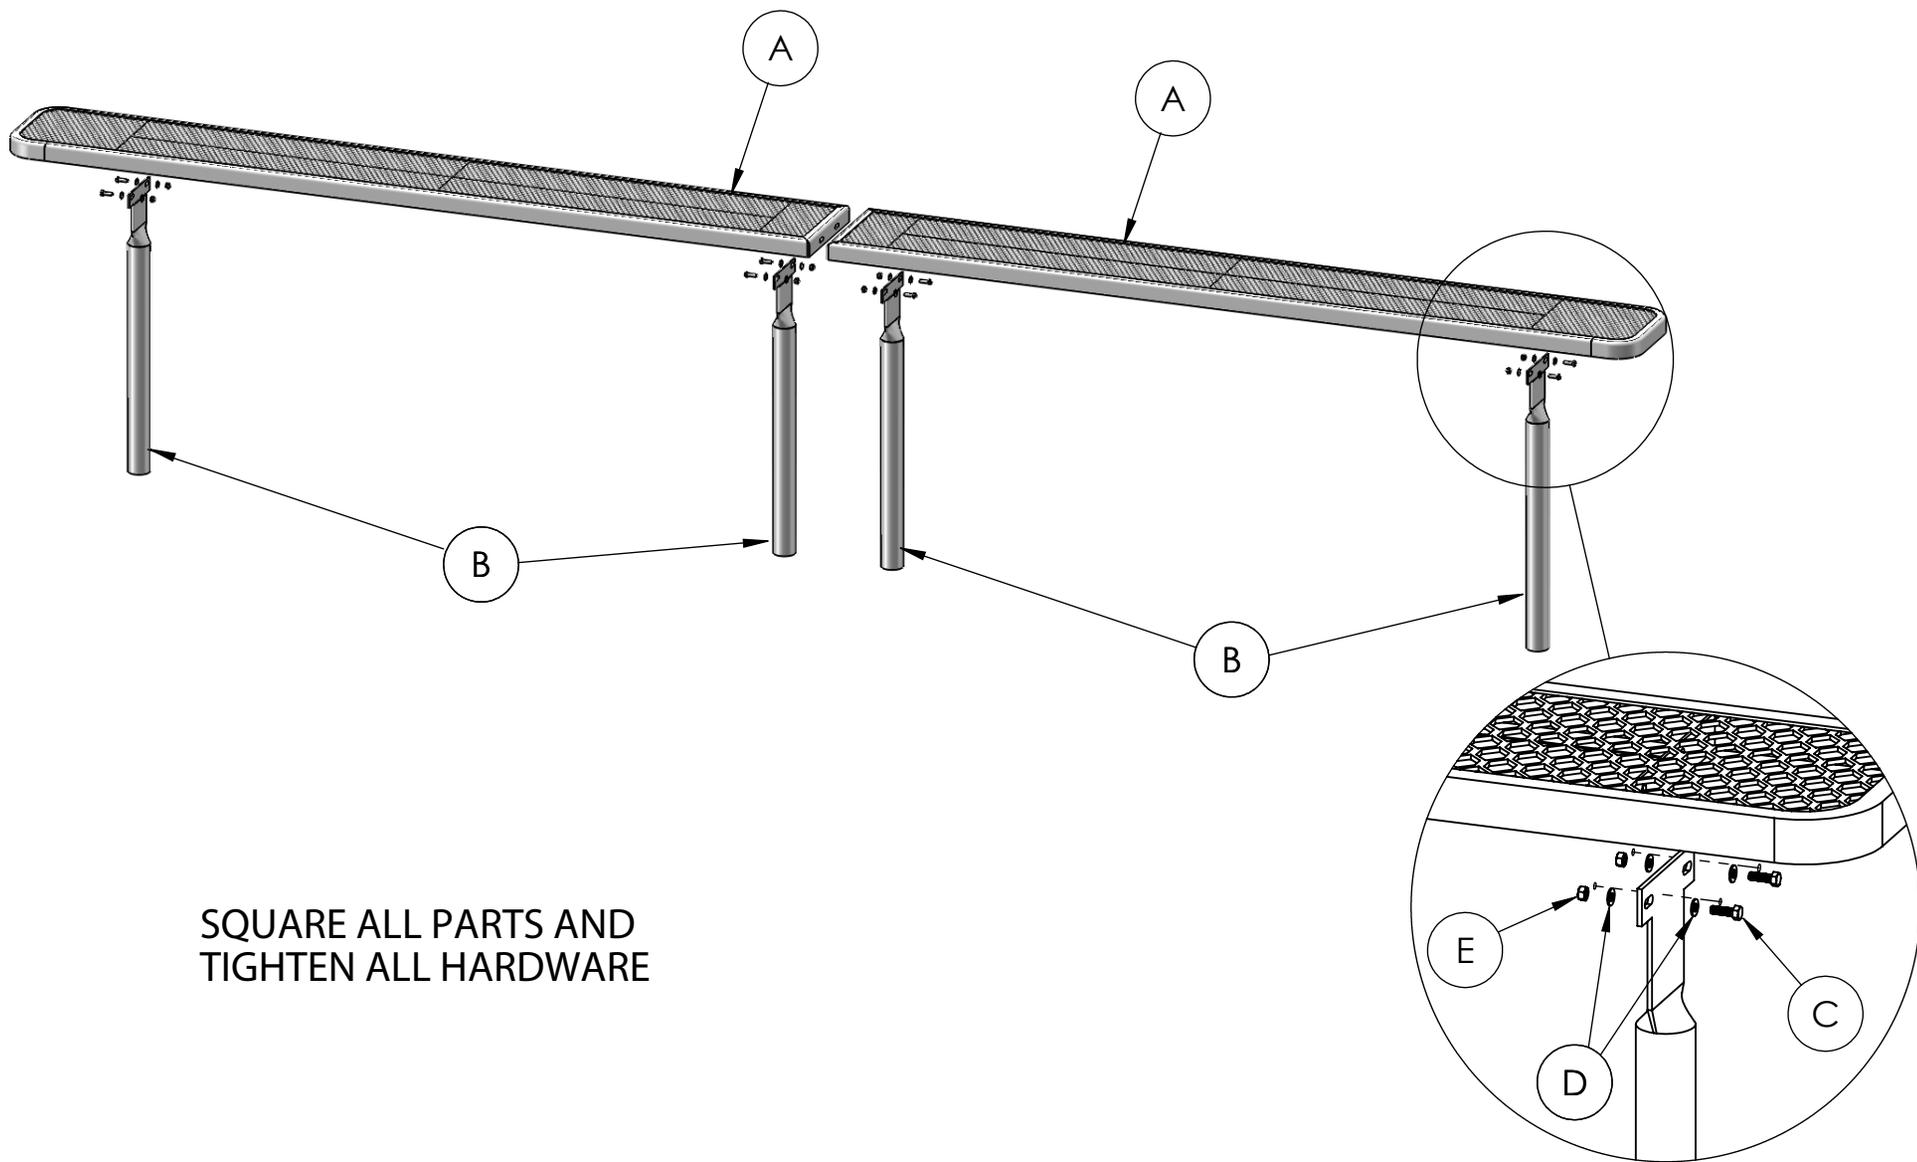



SQUARE ALL PARTS AND
TIGHTEN ALL HARDWARE

**ATTACH SEATS
TO BENCH ENDS**




3/4

INSTRUCTIONS

Surface Mount

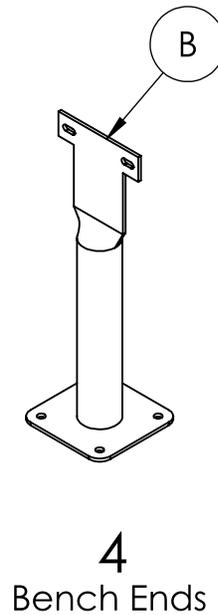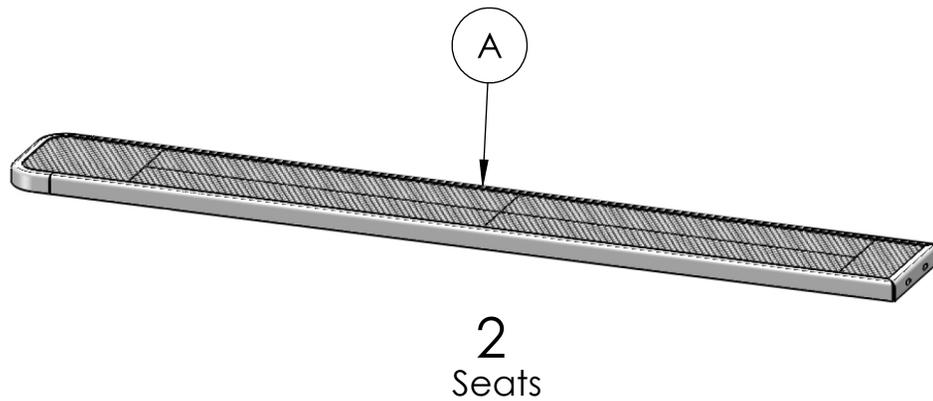

HARDWARE

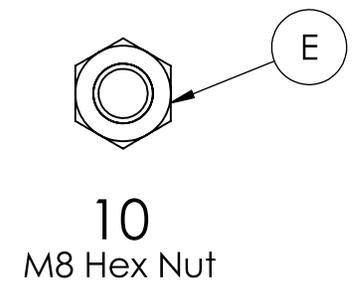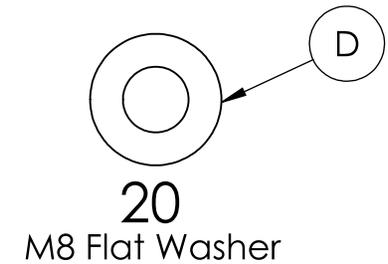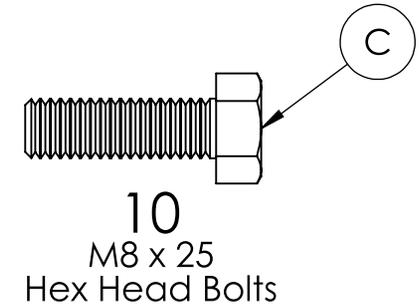

REQUIRED TOOLS (NOT INCLUDED)


- 1 - 13MM WRENCH
- 1 - 13MM SOCKET

NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/4

INSTRUCTIONS

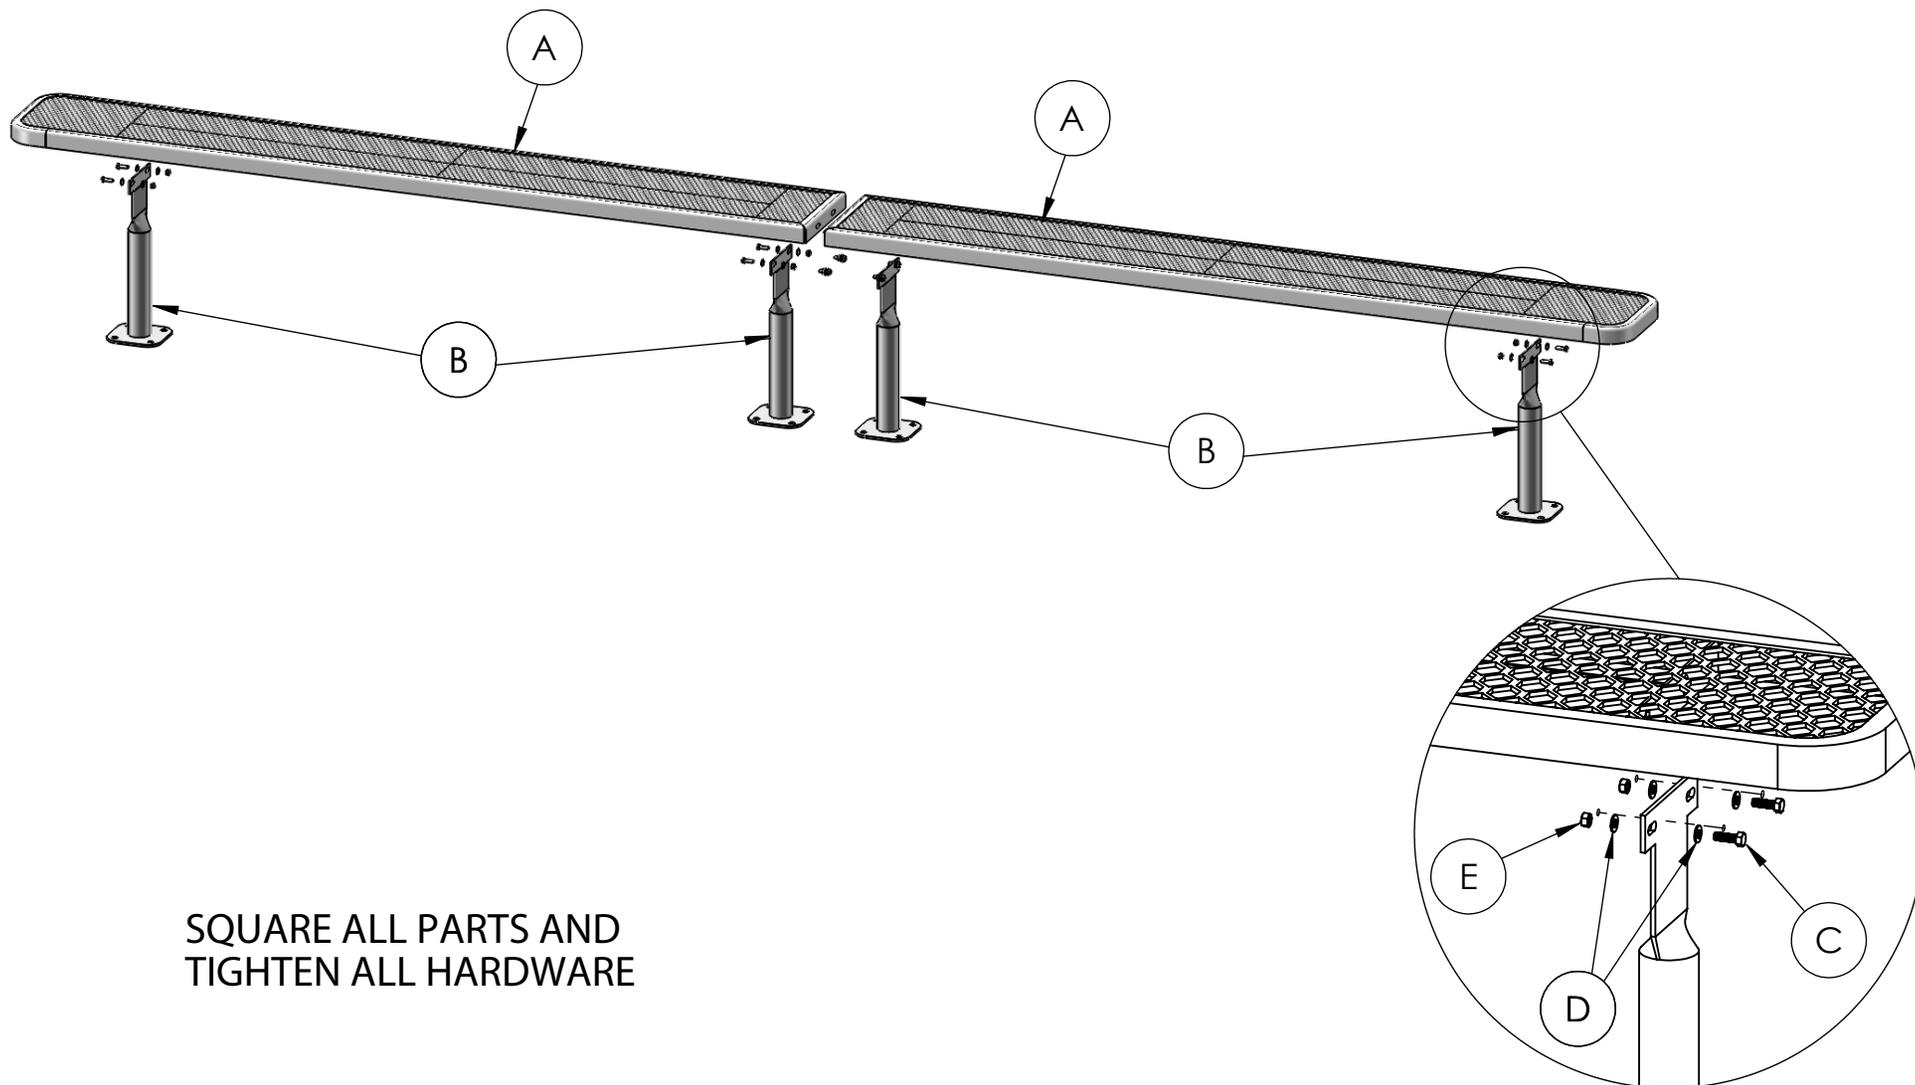

SQUARE ALL PARTS AND
TIGHTEN ALL HARDWARE

**ATTACH SEATS
TO BENCH ENDS**

3/4