




**6' CARLTON BENCH  
ASSEMBLY  
INSTRUCTIONS**

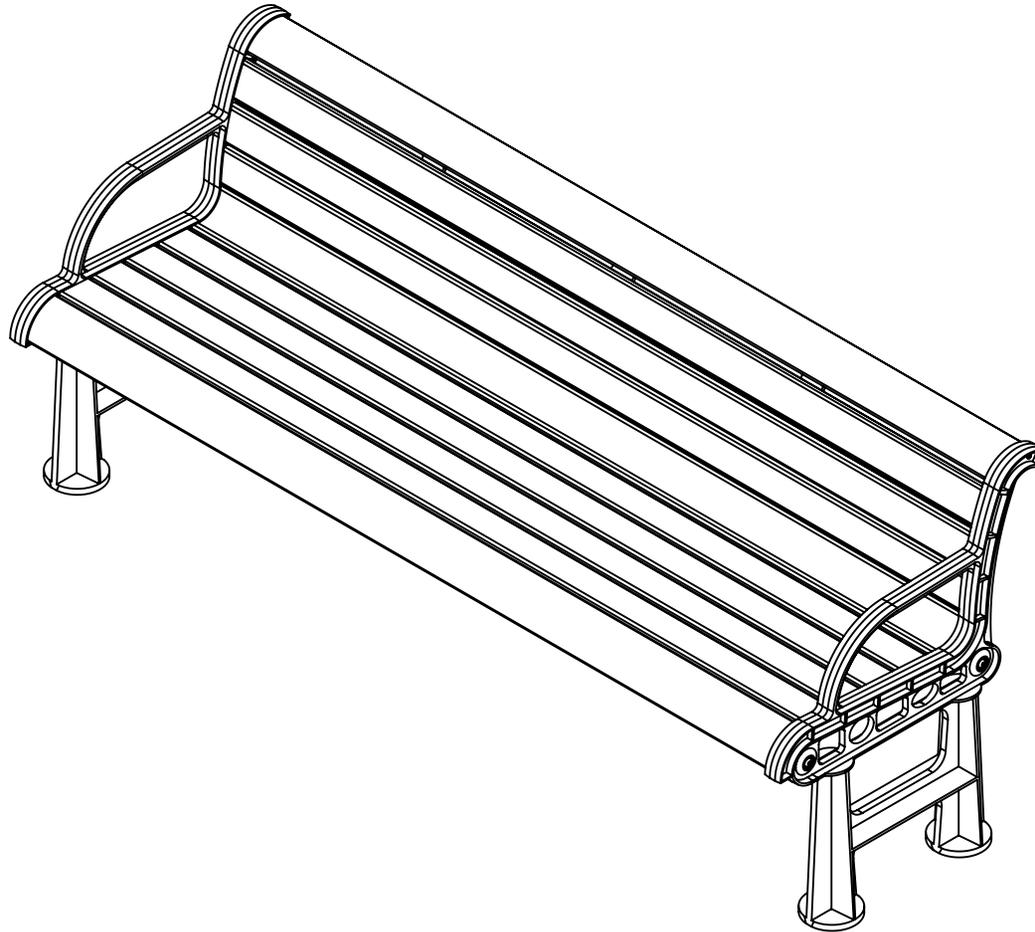


# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

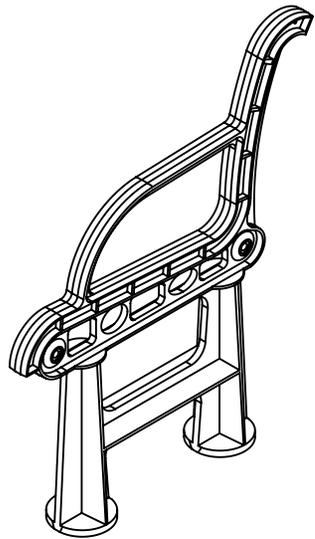


BENCH END  
2X

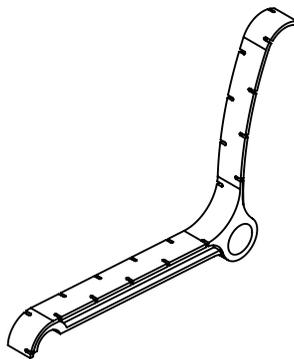


SEAT SUPPORT  
3X

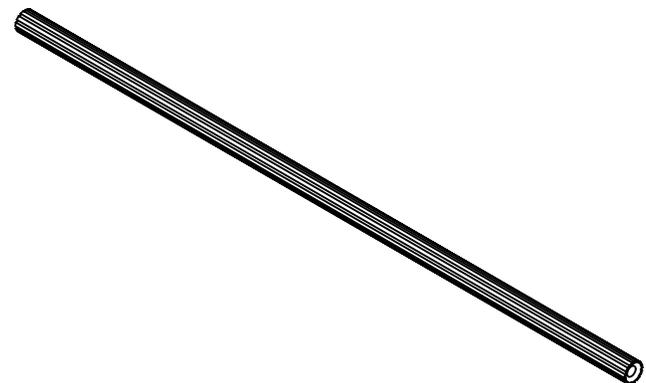

PIPE SUPPORT  
2X

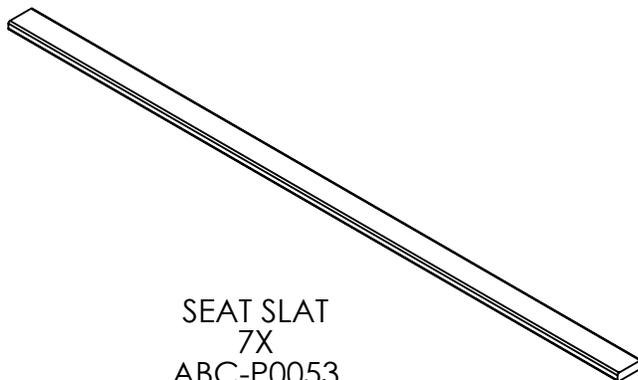

SEAT SLAT  
7X  
ABC-P0053

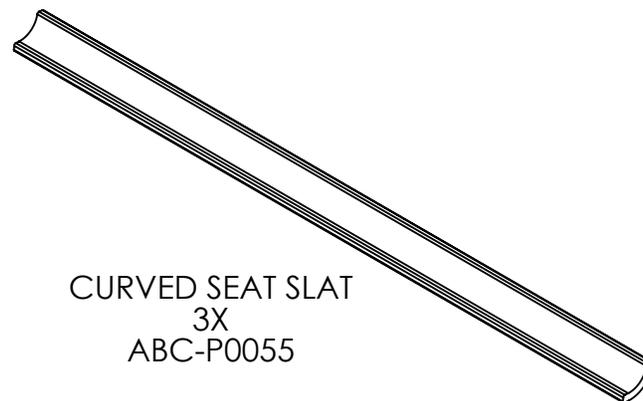


CURVED SEAT SLAT  
3X  
ABC-P0055


**COMPONENTS  
REQUIRED FOR  
ASSEMBLY**

**1/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

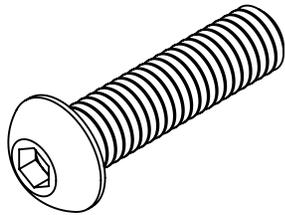

3/8-16 X 1.5"  
SOCKET BUTTON CAP SCREW  
4X  
F0001

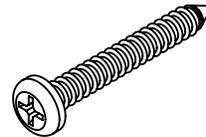

#10-1.25" PAN HEAD SCREW  
2X  
F0002



#10-.75" PAN HEAD SCREW  
60X  
F0003


## REQUIRED TOOLS:

- SCREW GUN
- PHILIP DRIVE BIT
- 9mm ALLEN WRENCH
- A FRIEND TO HELP

**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**


**2/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

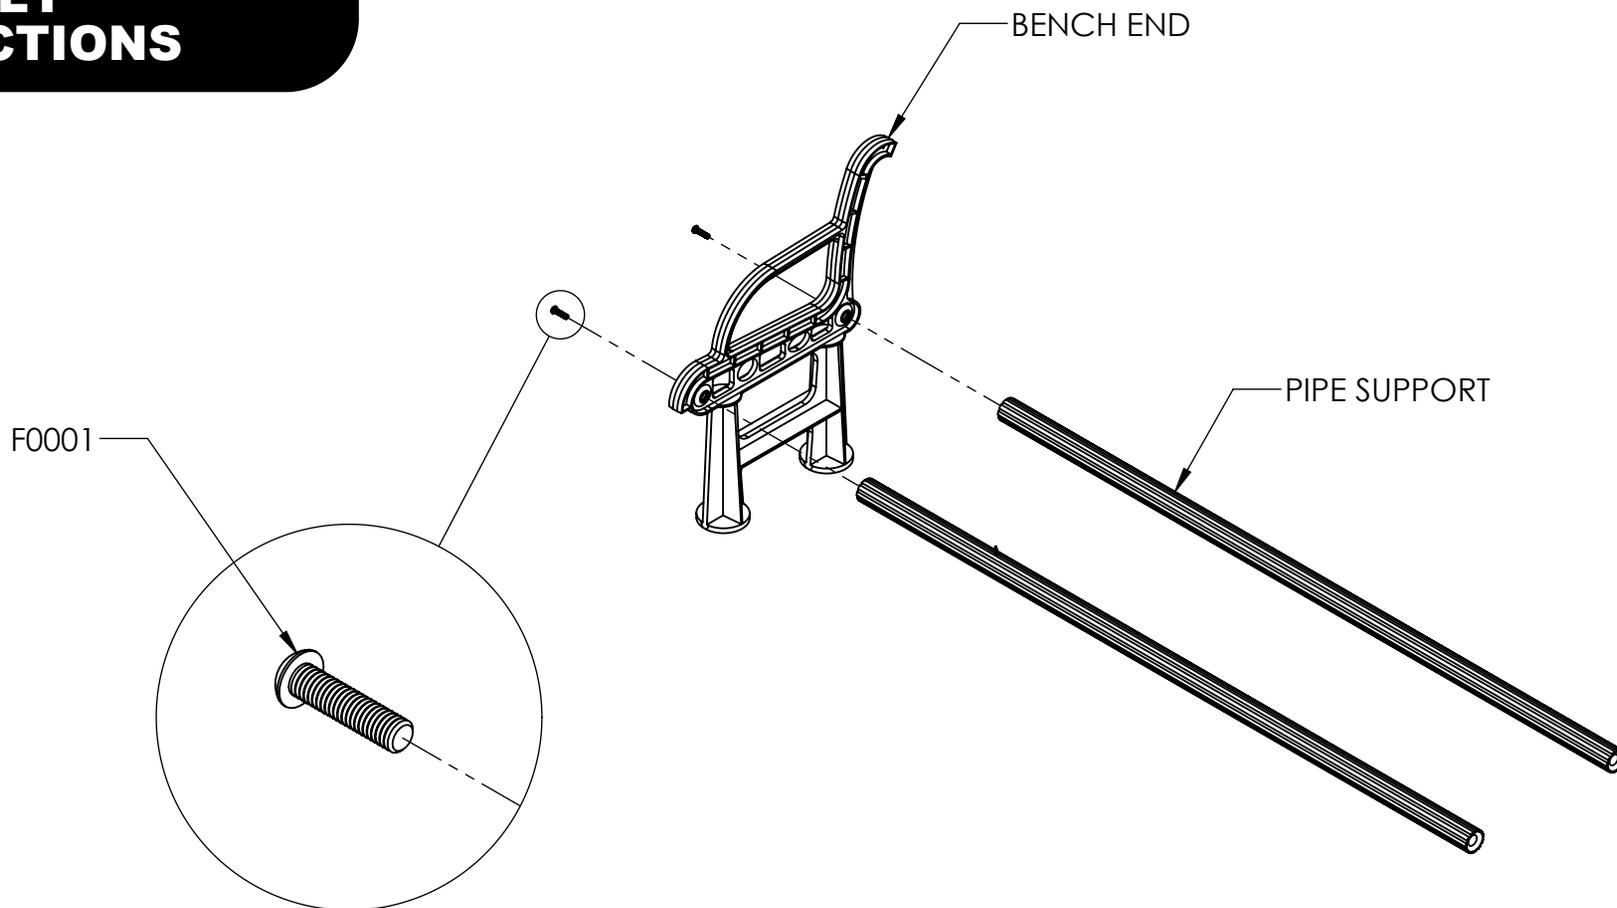


**NOTE: LOOSELY TIGHTEN HARDWARE**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

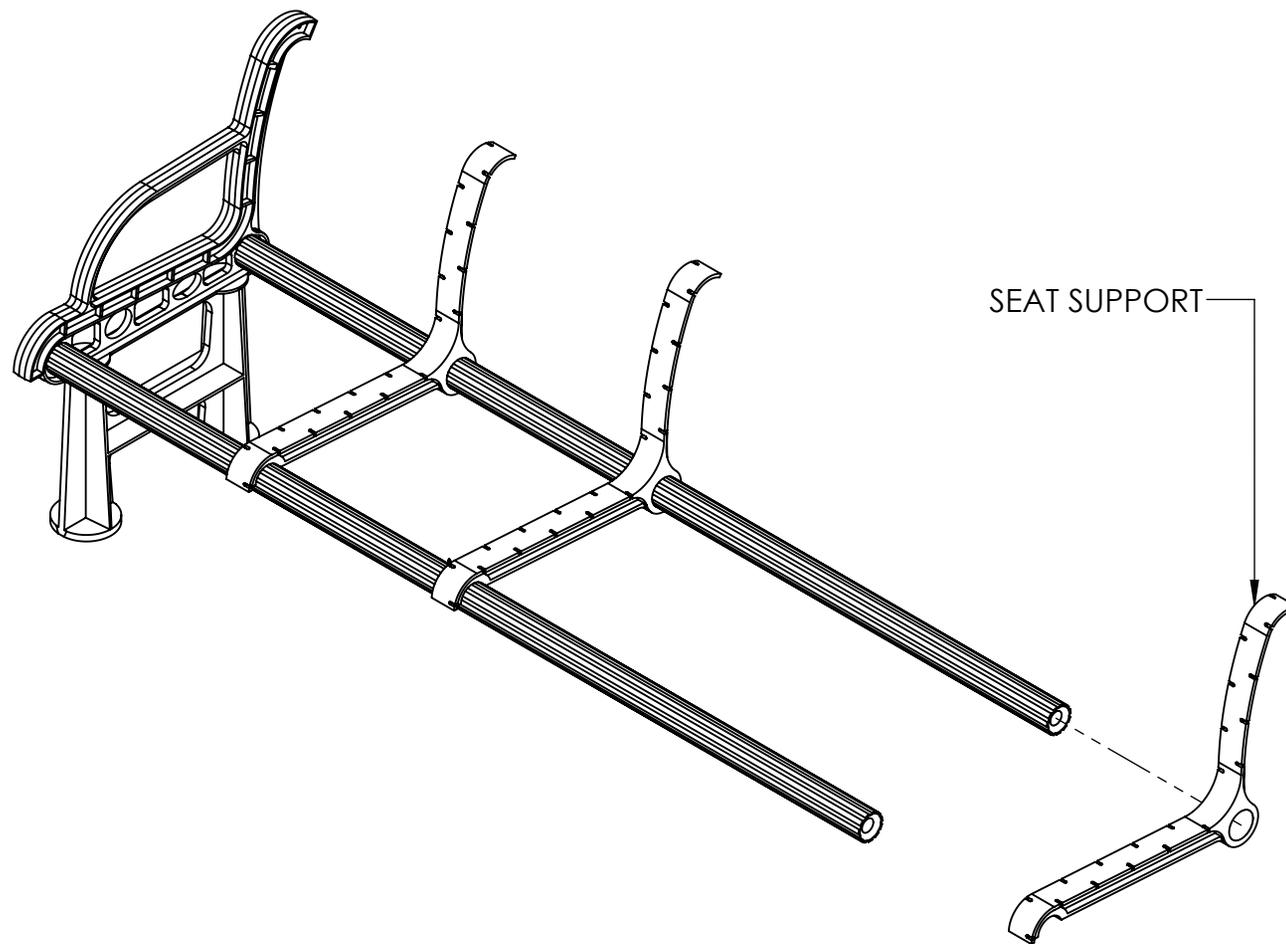


# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

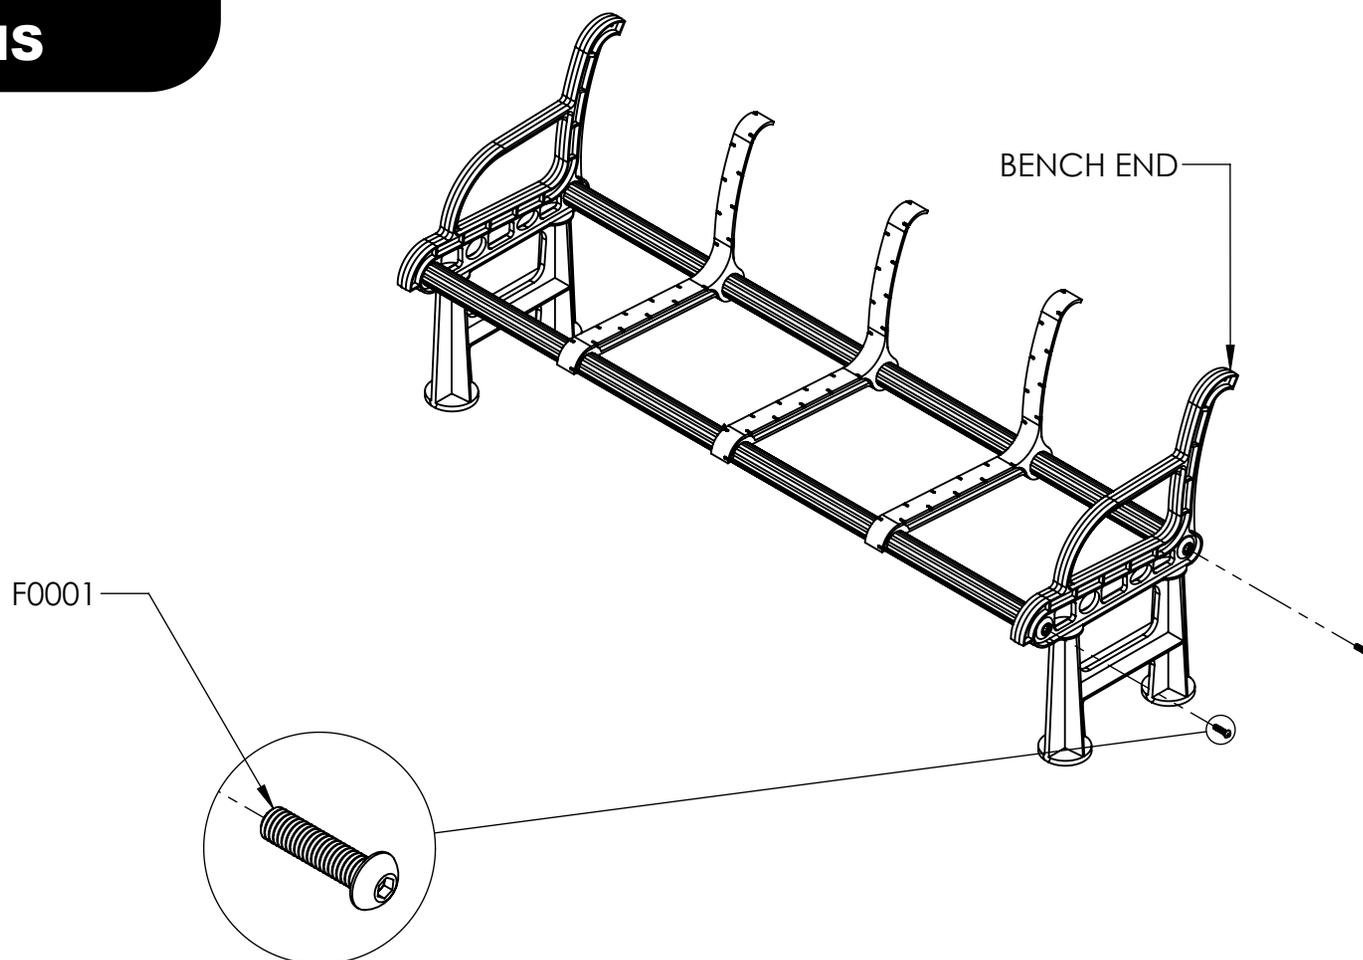

**NOTE: LOOSELY TIGHTEN HARDWARE**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

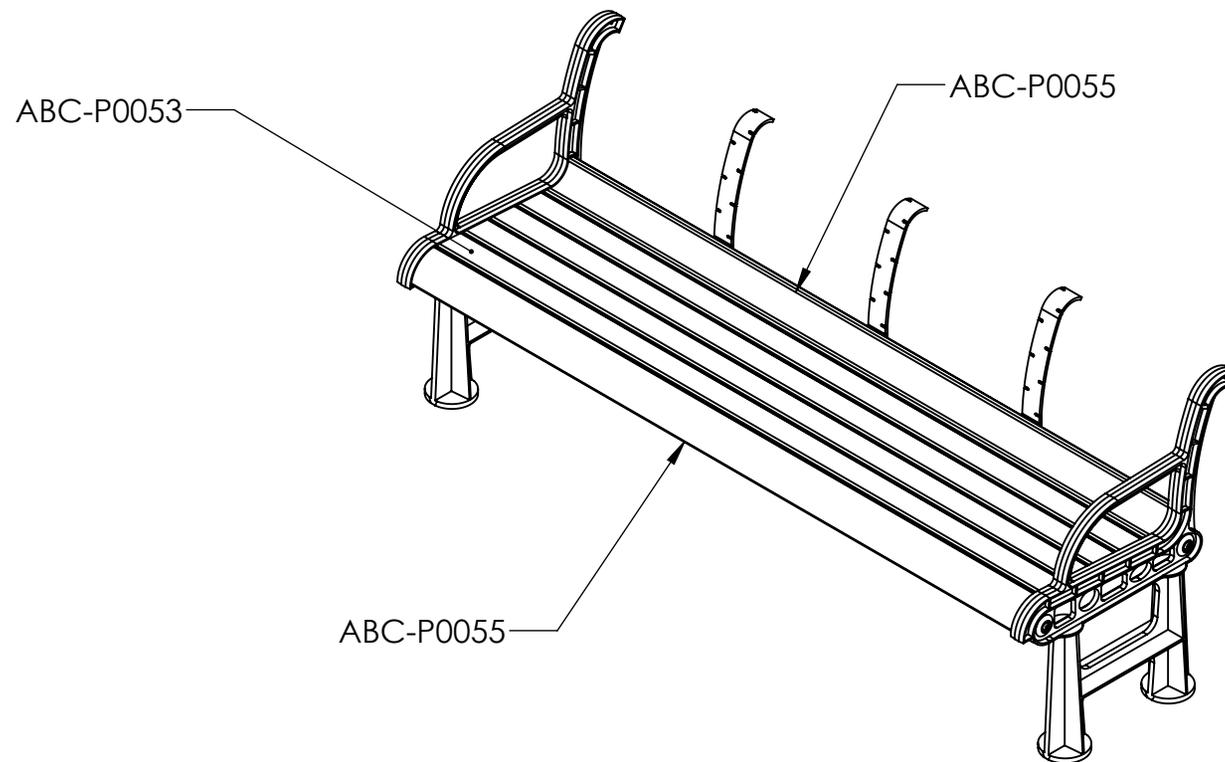


**INSERT SEAT  
SLATS**

**6/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS


COMPLETELY  
TIGHTEN THESE SCREWS ONLY

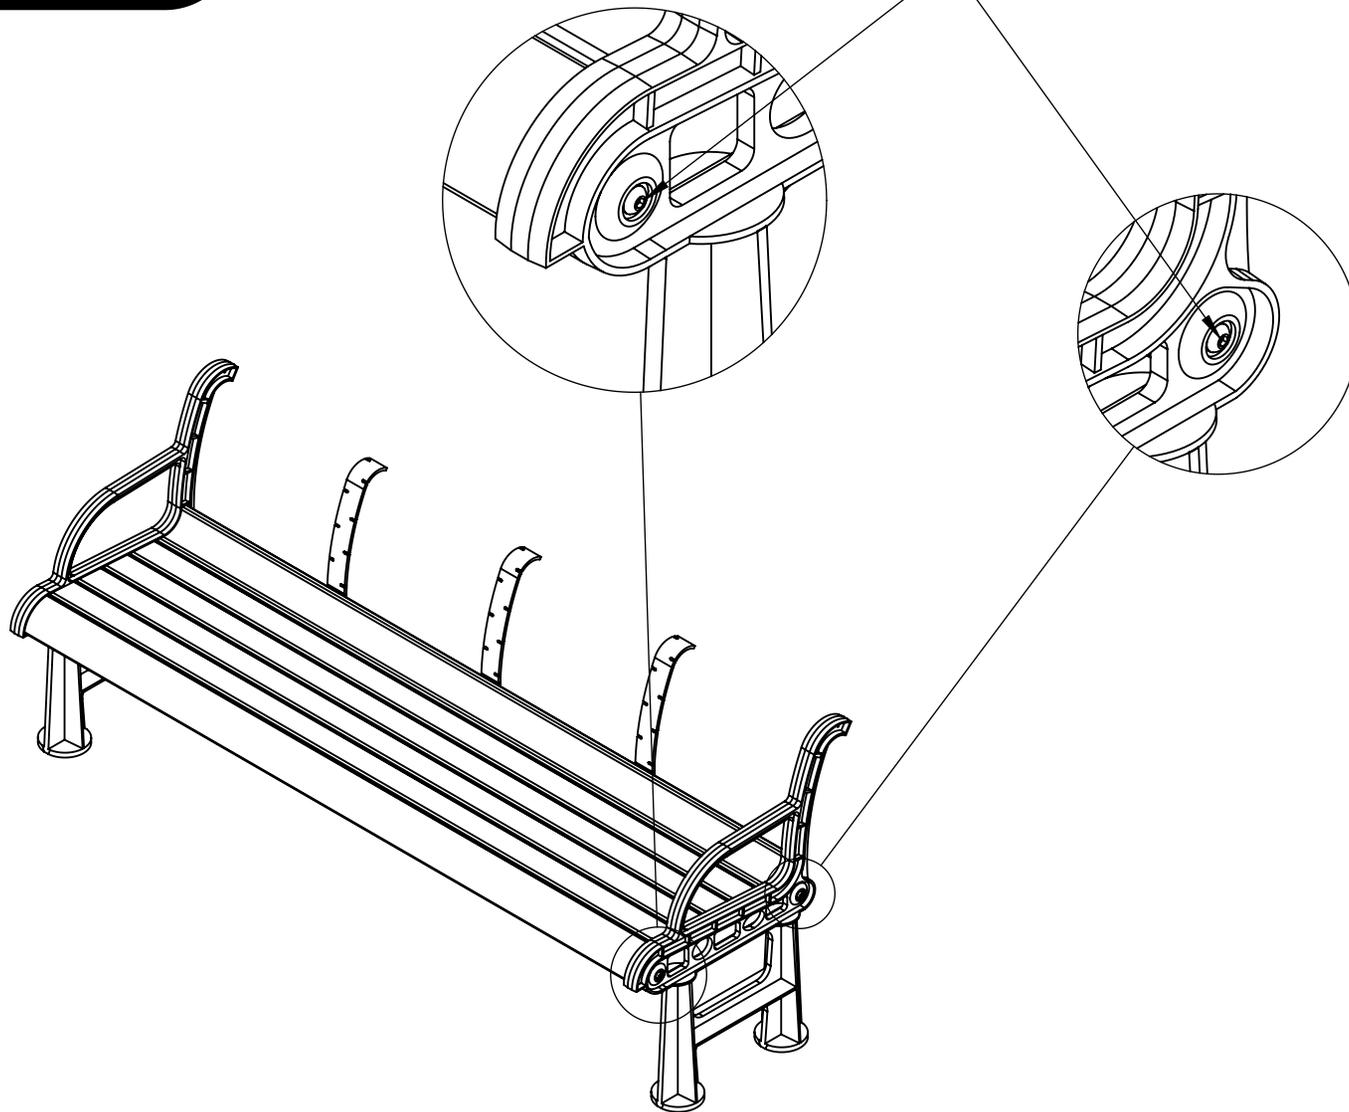

**TIGHTEN  
SCREWS**

**7/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

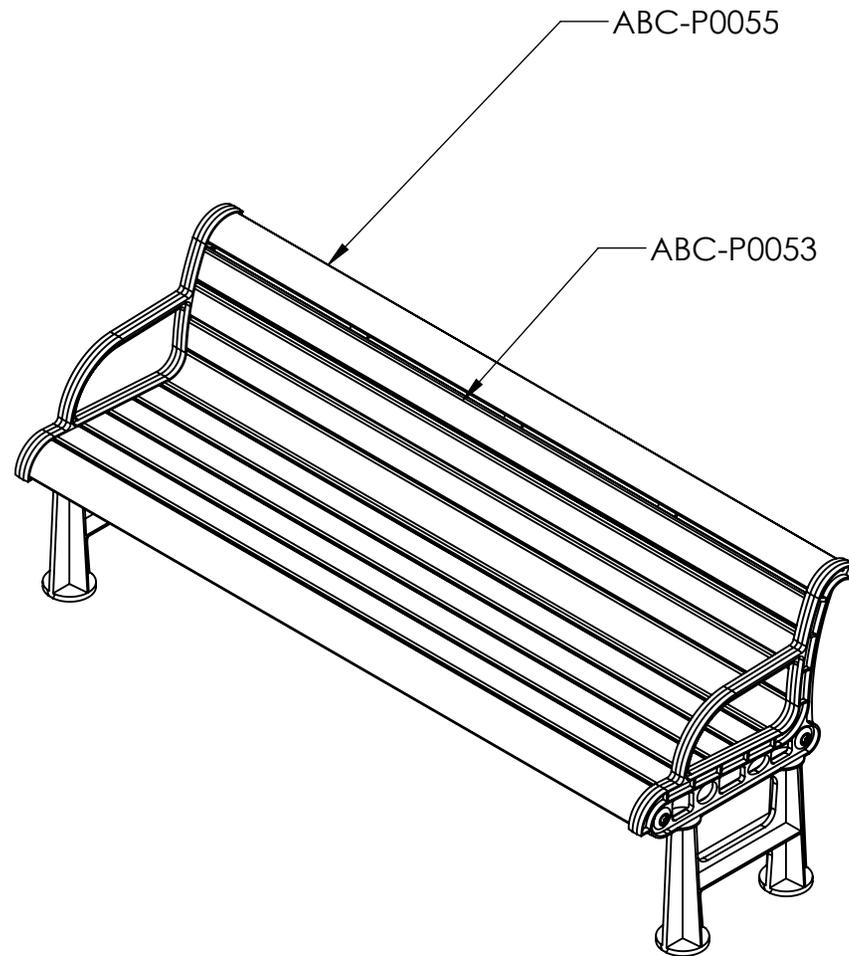


**INSERT BACK  
SLATS**

**8/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS


COMPLETELY TIGHTEN  
THESE SCREWS

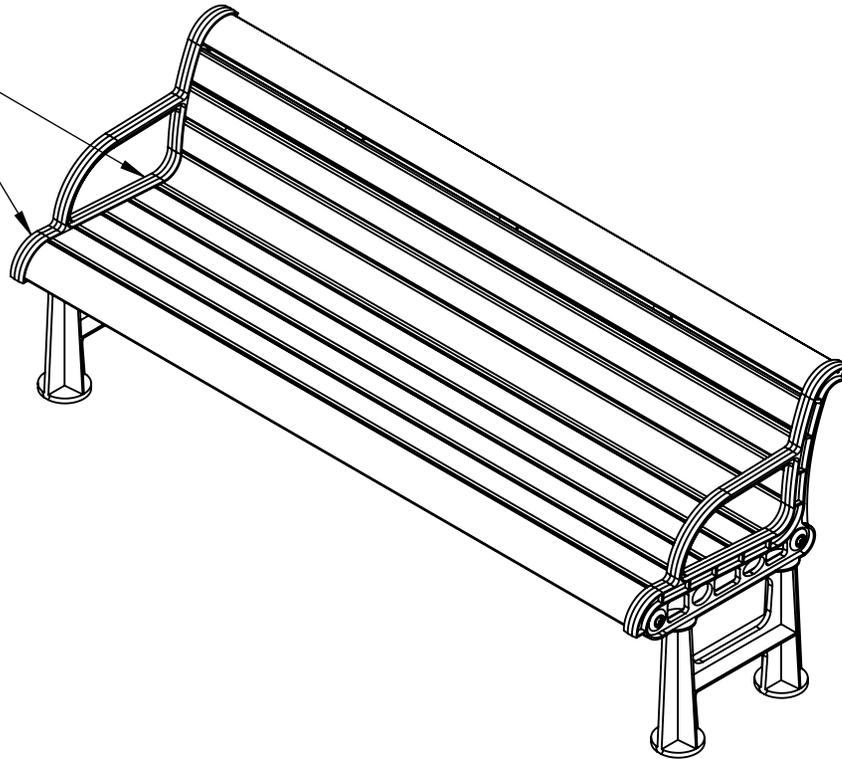

**TIGHTEN  
SCREWS**

**9/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

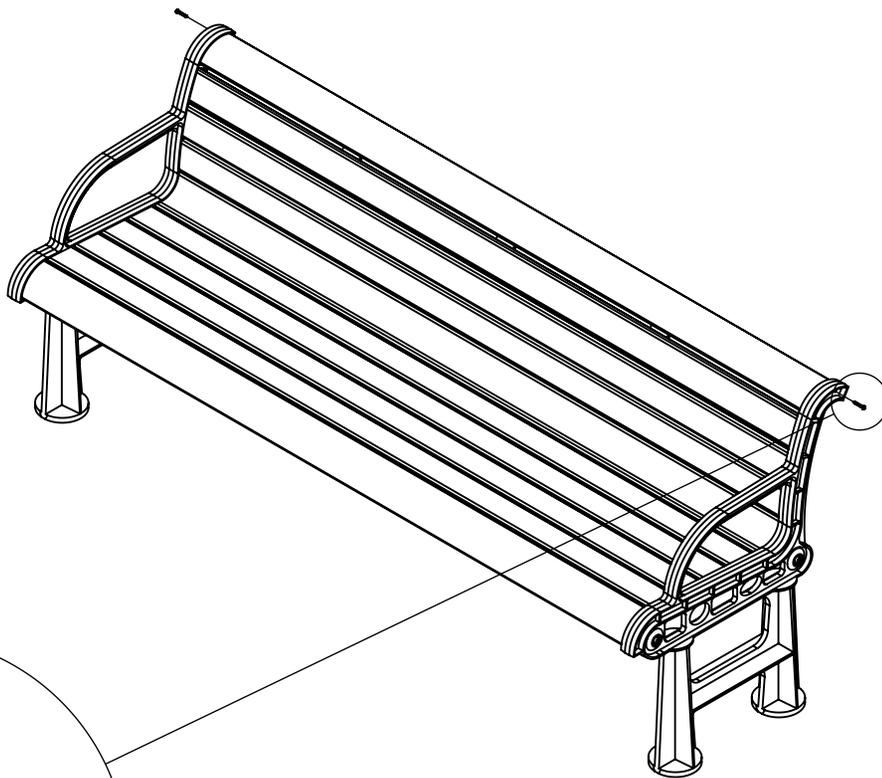


F0002

**FASTEN  
BACK SLAT**


**10/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

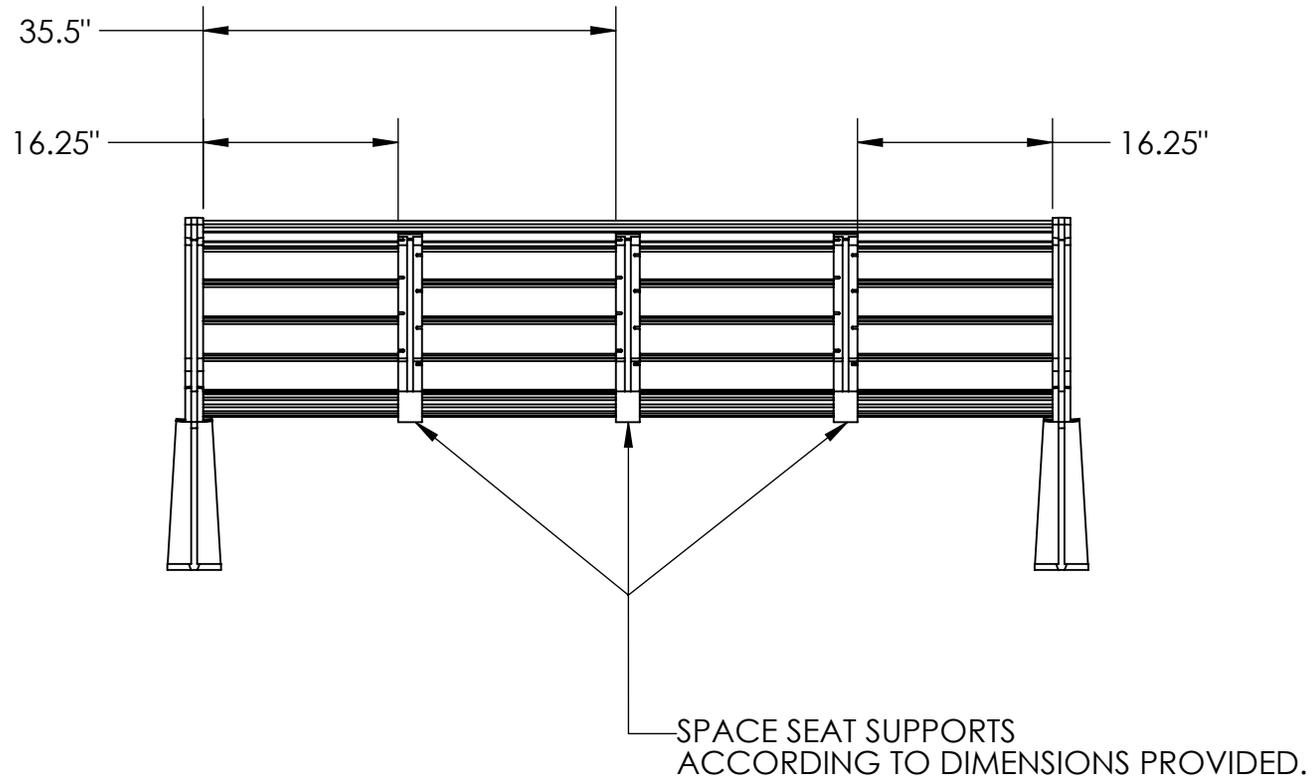

**(BACK VIEW)**



# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

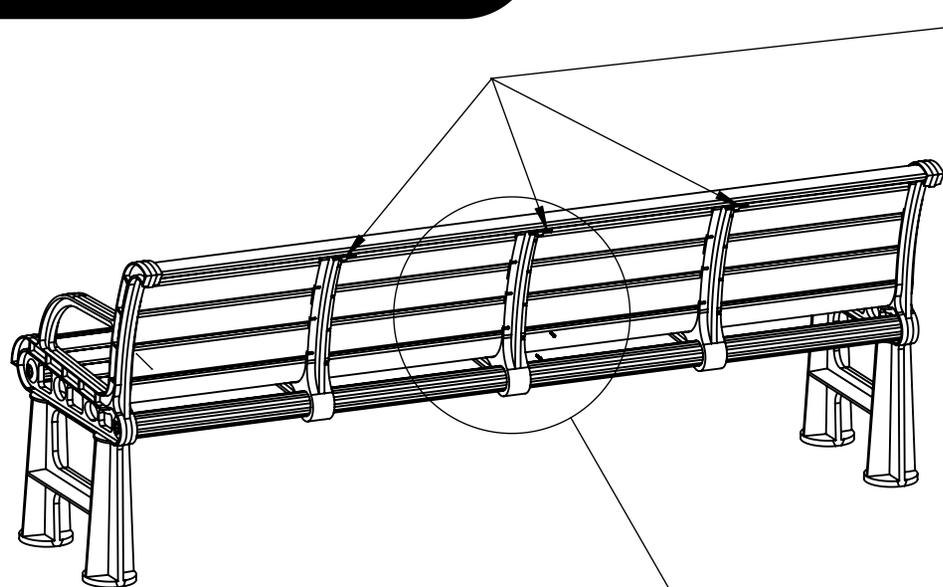

FASTEN EACH  
SEAT SUPPORT TO  
BACK SLATS USING  
INDICATED SCREWS.

BE SURE TO USE (2) SCREWS  
**PER** BACK SLAT AS SHOWN.

BACK SLAT

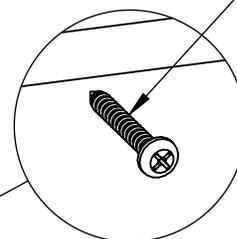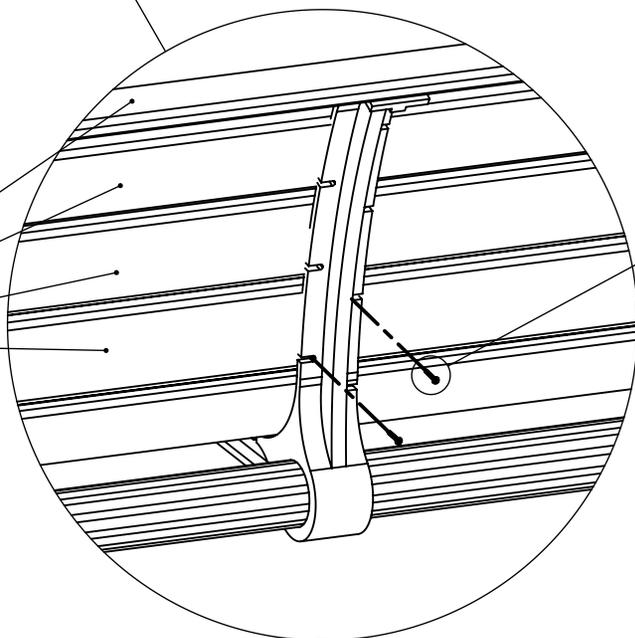

F0003




**FASTEN SEAT  
SUPPORTS**

**12/15**

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

FASTEN EACH SEAT  
SUPPORT  
TO SEAT SLATS USING  
INDICATED SCREWS.


BE SURE TO USE (2)  
SCREWS PER SLAT  
AS SHOWN

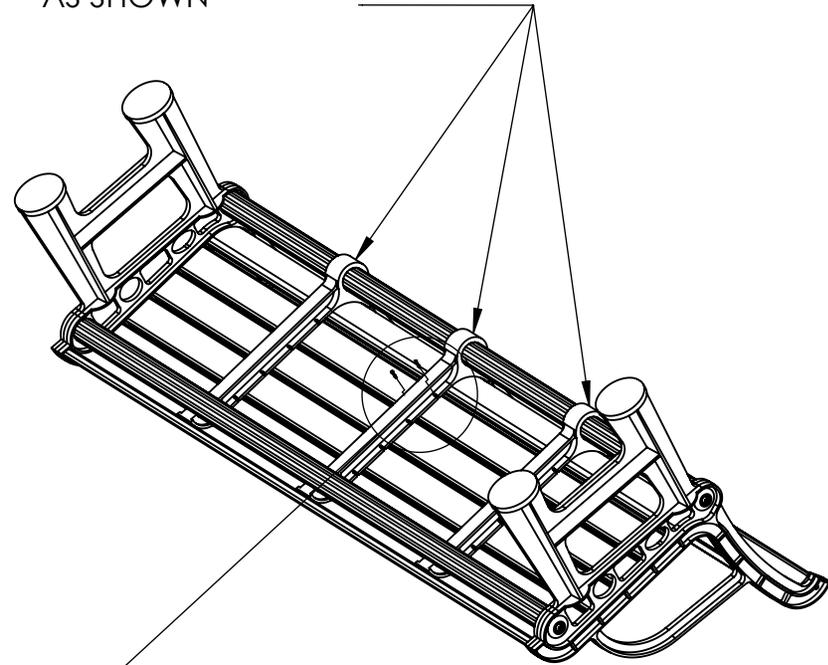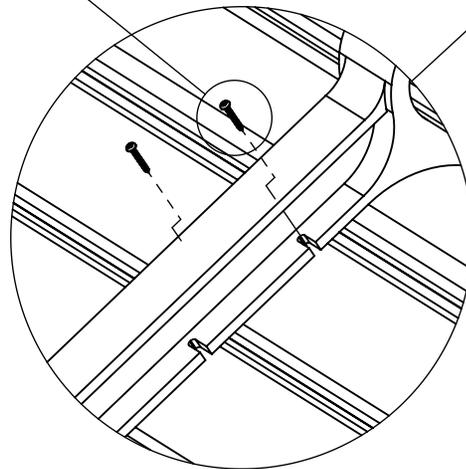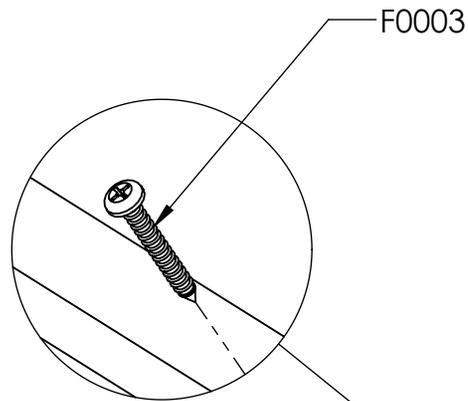

**FASTEN SEAT  
SUPPORTS**

**13/15**


# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

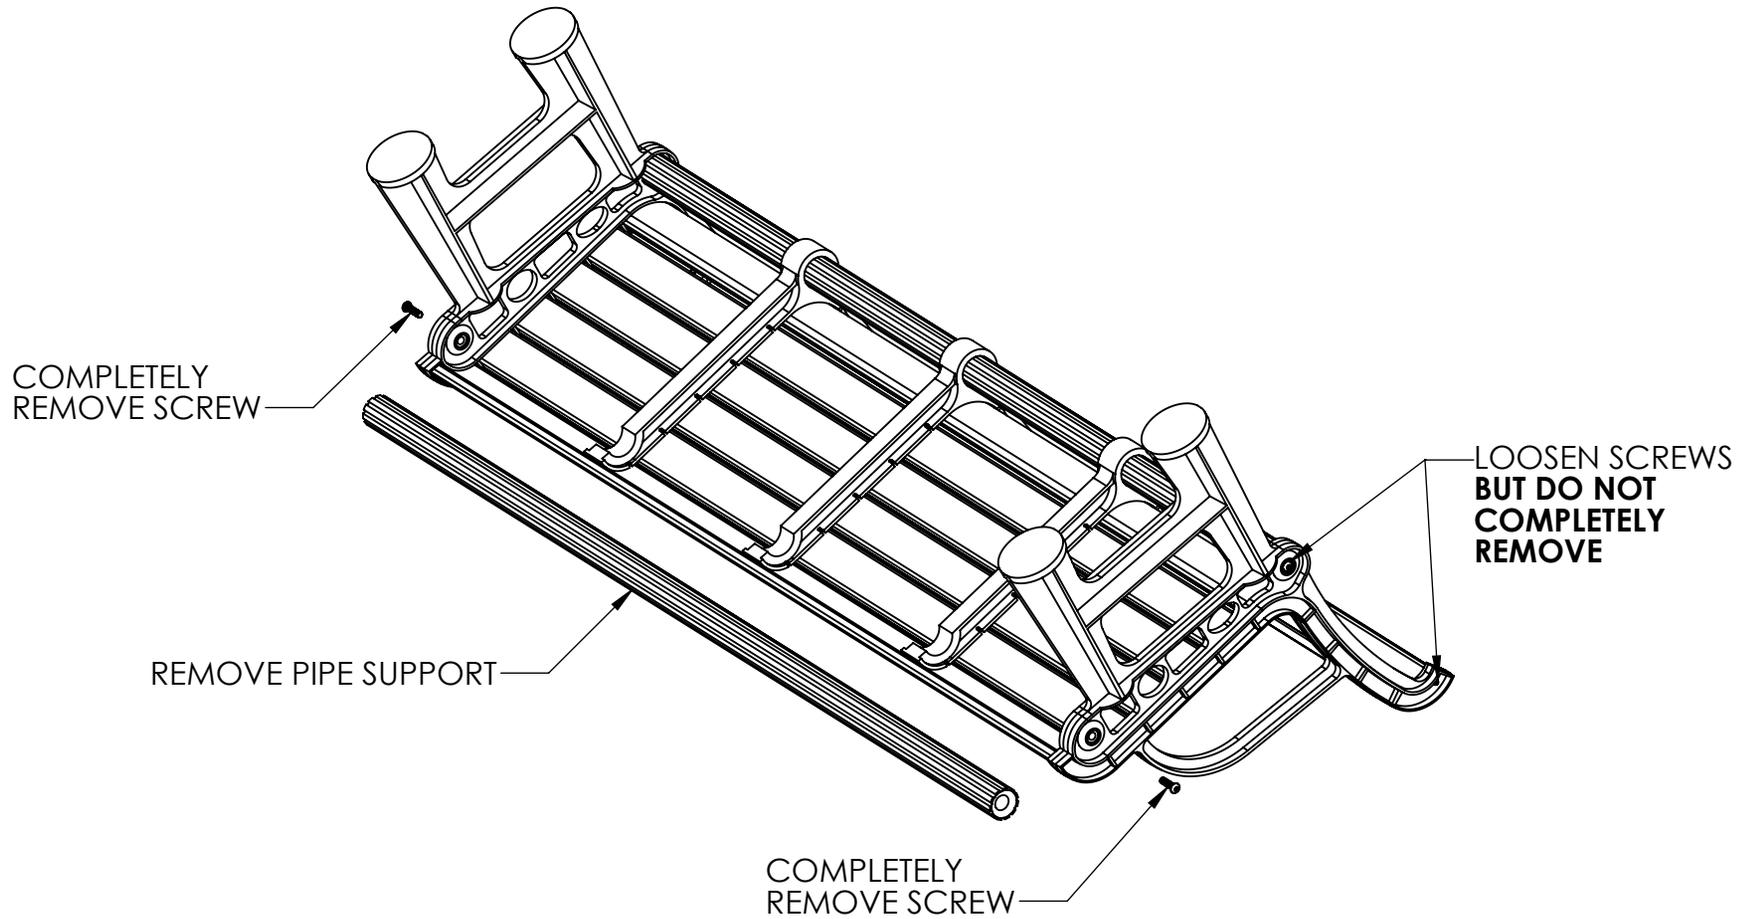

# 6' CARLTON BENCH ASSEMBLY INSTRUCTIONS

FASTEN EACH SEAT SUPPORT  
TO FRONT SEAT SLATS USING  
INDICATED SCREWS.

BE SURE TO USE (2) SCREWS  
PER SLAT AS SHOWN

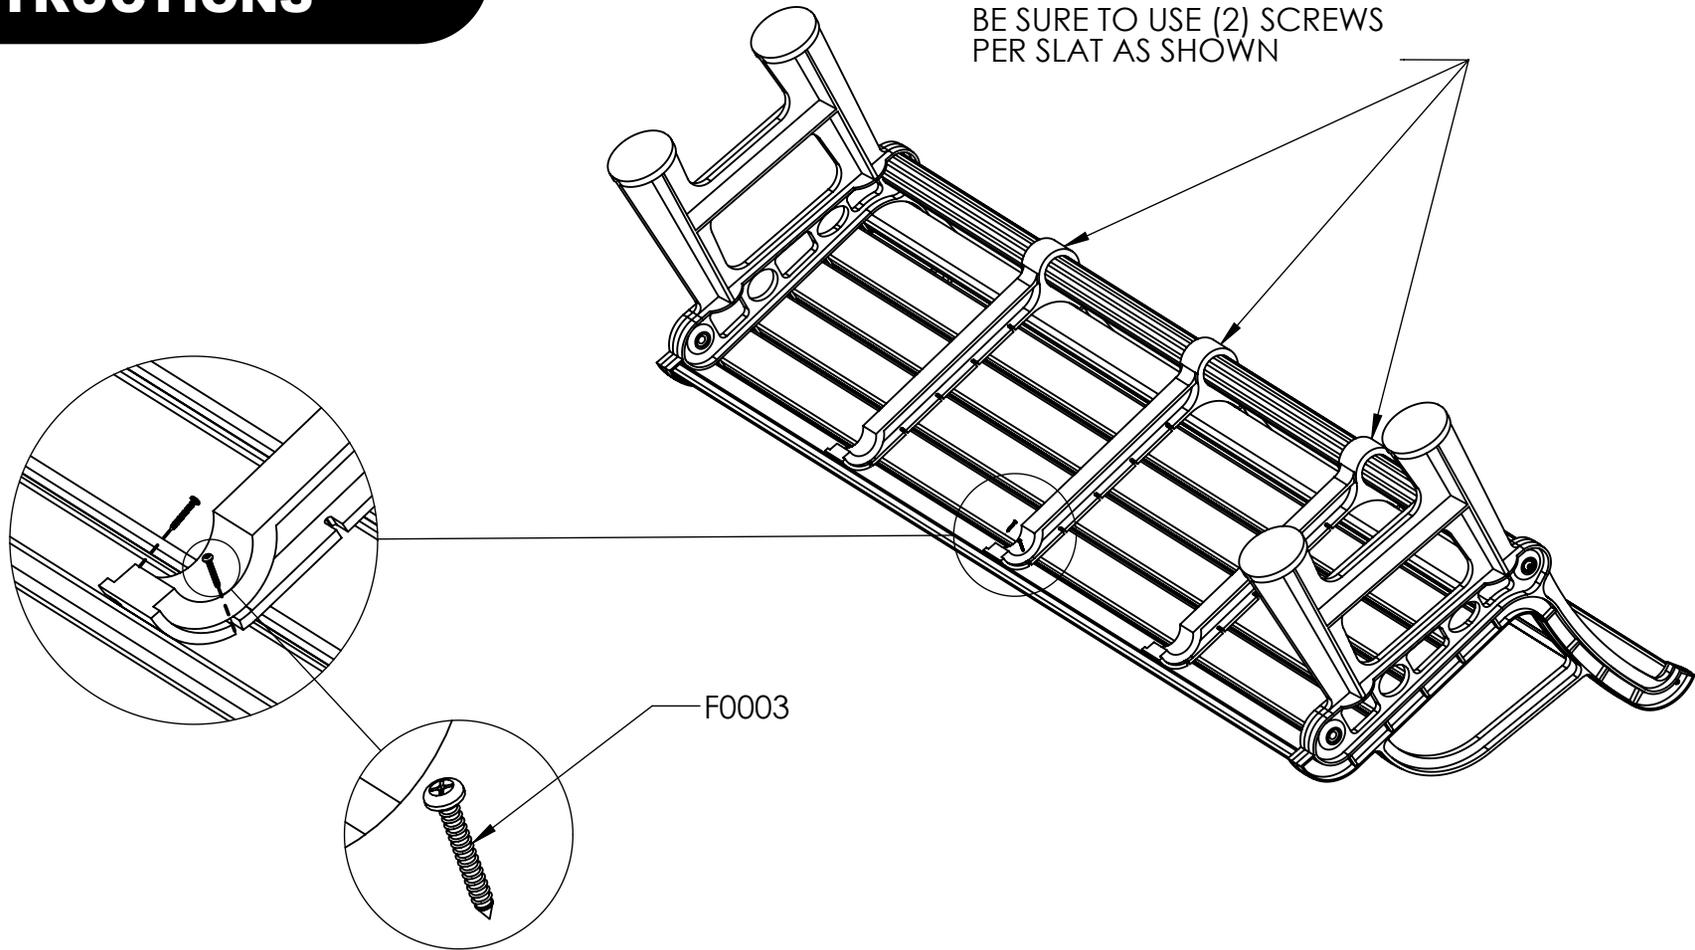

WHEN FINISHED FASTENING SEAT SUPPORT,  
REATTACH FRONT PIPE AND RETIGHTEN  
ALL HARDWARE

**FASTEN SEAT  
SUPPORTS**

**15/15**