


3/8" X 6.50" HEX HD BOLT

Χ4

F0003



3/8" X 5.00" HEX HD BOLT X2 F0004



Χ4

F0001

1/4" X 3.50" HEX LAG SCREW X7 F0005

1/4" X 1.50" HEX LAG SCREW

Χ8

F0009

3/8" FLAT WASHER X20 F0006

REQUIRED TOOLS

(NOT INCLUDED)

1 - 9/16" SOCKET

1 - 7/16" SOCKET

1 - 9/16" WRENCH

1 - POST HOLE DIGGER

1 - SCREW GUN



3/8" NYLOCK NUT X8 F0008

2/10

REQUIRED MATERIALS (NOT INCLUDED) -READY-TO-MIX CONCRETE -LOOSE GRAVEL


-WIRE & BRACING MATERIAL

BEFORE INSTALLING PRODUCT, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL PRODUCT. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

INCLUDED HARDWARE & REQUIRED TOOLS FOR ASSEMBLY

CONTACT A PROFESSIONAL.


NOTE: SOME COMPONENTS HAVE BEEN REMOVED FOR CLARITY.

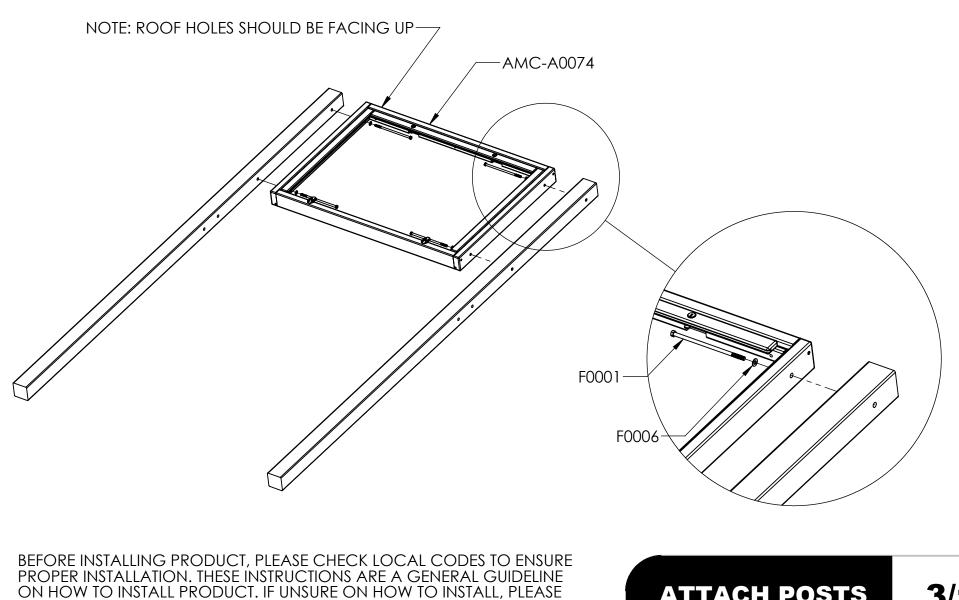


ATTACH POSTS

3/10

NOTE: SOME COMPONENTS HAVE BEEN REMOVED FOR CLARITY.

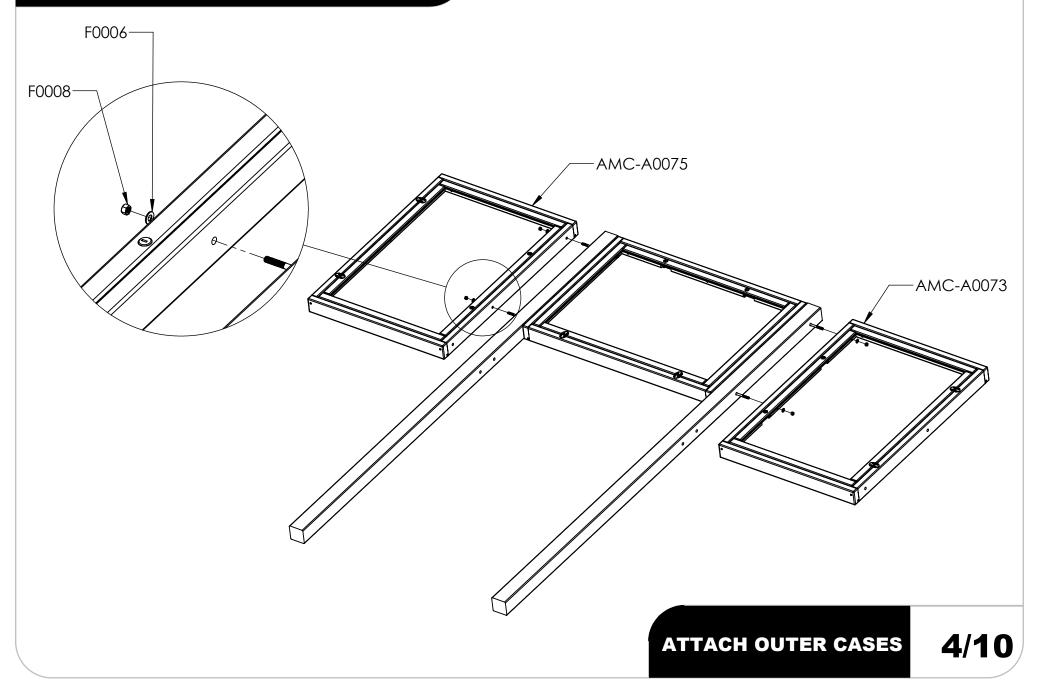



NOTE: SOME COMPONENTS HAVE BEEN REMOVED FOR CLARITY.

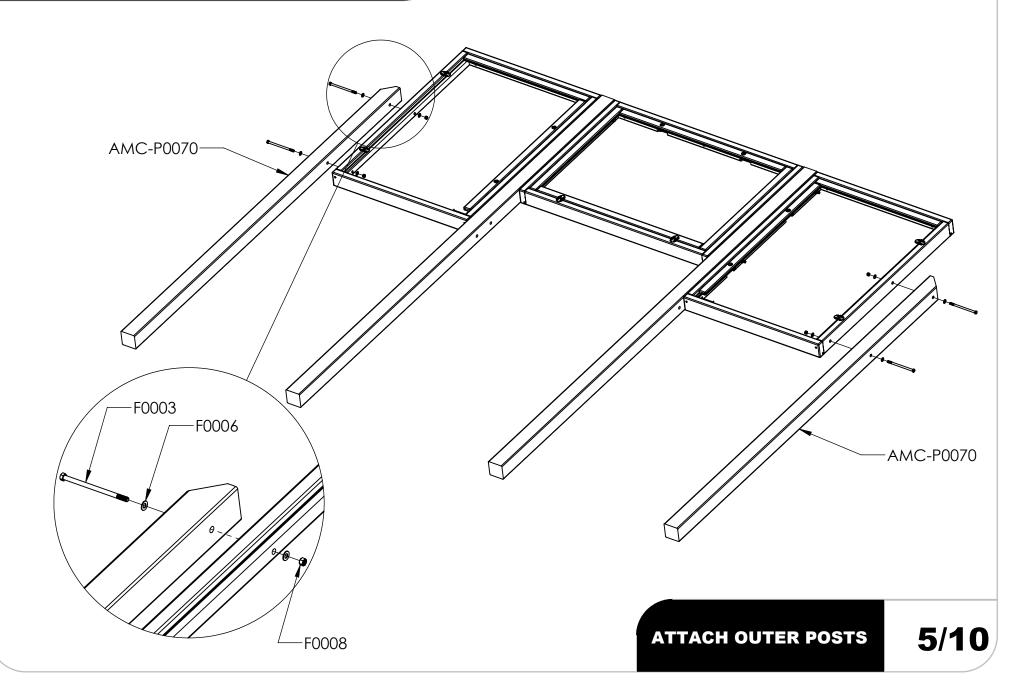

USING POST HOLE DIGGER, DIG FOUR HOLES IN A LINE AS SHOWN BELOW. FOR PROPER DRAINAGE, FILL EACH HOLE WITH APPROXIMATELY 4" OF LOOSE GRAVEL.

PLEASE NOTE POSTS HOLES MAY NEED TO BE DEEPER THAN 40" DEPENDING UPON LOCATION & SOIL TYPE. BE SURE TO CHECK LOCAL CODES BEFORE INSTALLING.

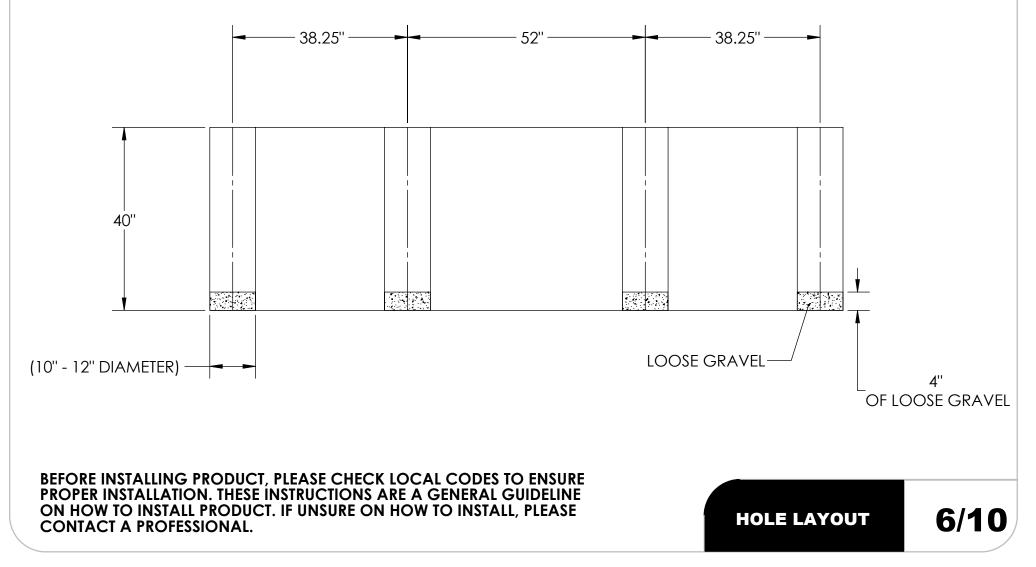

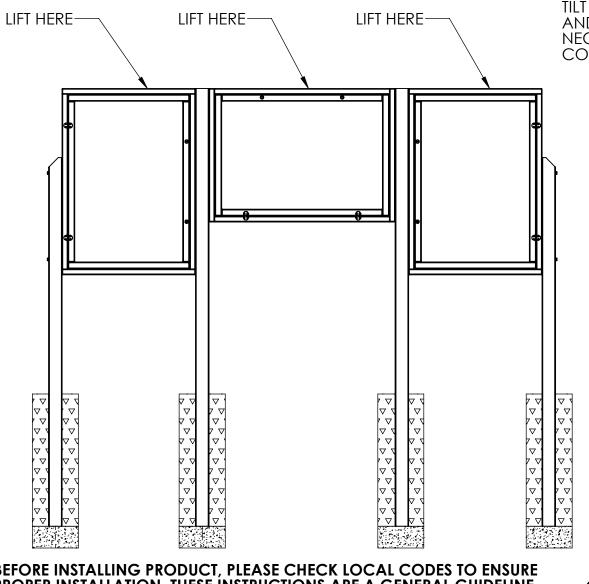


WITH HELP FRONT OTHER PEOPLE, CAREFULLY TILT MESSAGE CENTER ASSEMBLY INTO HOLES AND BRACE MESSAGE CENTER. LEVEL AS NECESSARY AND FILL HOLES WITH READ-TO-MIX CONCRETE. ALLOW TO DRY AND REMOVE BRACING.

BEFORE INSTALLING PRODUCT, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL PRODUCT. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

PLACE MESSAGE CENTER IN GROUND

7/10

ATTACH THE SURFACE MOUNT BASES TO THE ASSEMBLY

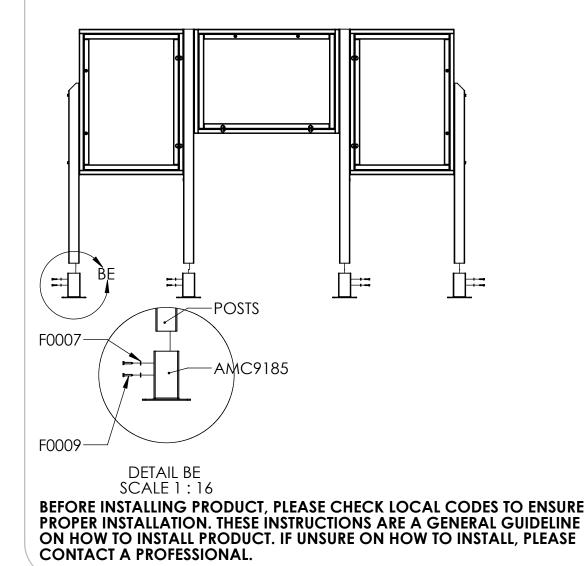

WITH HELP FRONT OTHER PEOPLE, CAREFULLY TILT MESSAGE CENTER ASSEMBLY UPRIGHT. LEVEL AS NECESSARY AND ATTACH SURFACE MOUNT BASES SECURELY INTO GROUND.

