
Assembly Instructions

Double 32Gal.Steel Slat Receptacle (64Gal.total capacity)



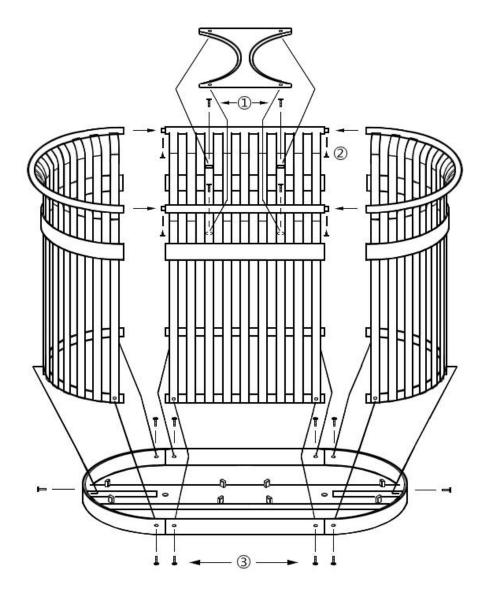

Step 1: On a firm, flat surface position the two flat receptacle panels across from each other with the two receptacle basket half circles at each end of the flat panels to form a complete basket. Line up the pre-drilled holes at the top (2) of the receptacle and insert the screws. Hand-tighten the screws.

Step 2: Place the receptacle base on a firm flat surface with the flange side up. Position the complete basket inside the receptacle base flanges.

- Step 3: Insert a bolt with a flat washer loosely into holes around the bottom to secure the basket to the base (3). Bolts will thread tightly into the pre-drilled holes, eliminating the need for nuts. The bolts are to be only finger tight at this point. Do not tighten the bolts completely in this step.
- **Step 4:** Line up the center divider piece (1) at the top of the receptacle and insert the screws. Hand-tighten the screws.
- **Step 5:** Adjust the position of basket if needed. Tighten all of the screws around the base and the top.
- **Step 6:** Insert the rigid plastic liners into the receptacle. Set the lids directly on top.