



ASSEMBLY INSTRUCTIONS


TR2600 REV# 2
08/2020

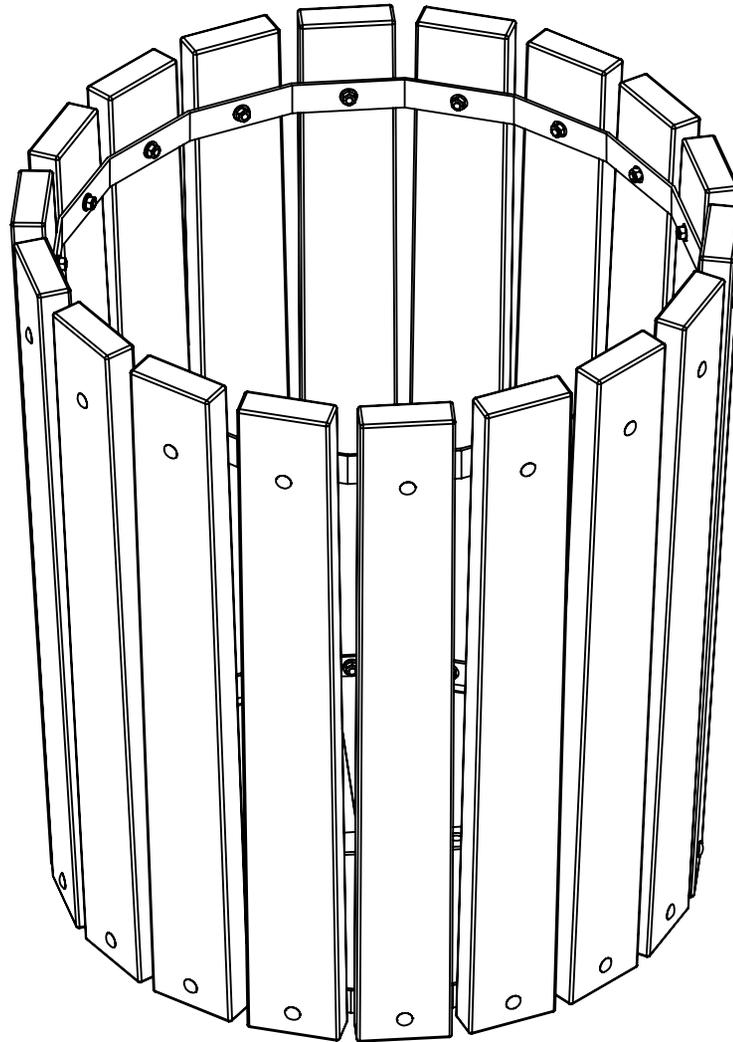


ASSEMBLY INSTRUCTIONS

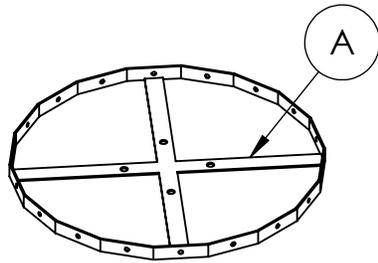


1
Bottom Ring

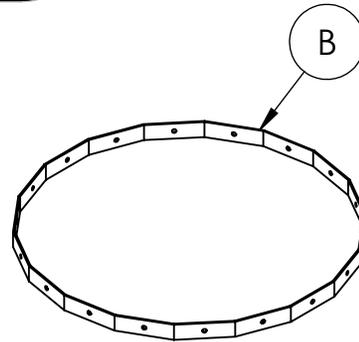


1
Top Ring

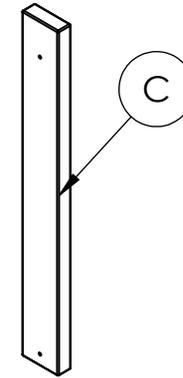

18
Slats

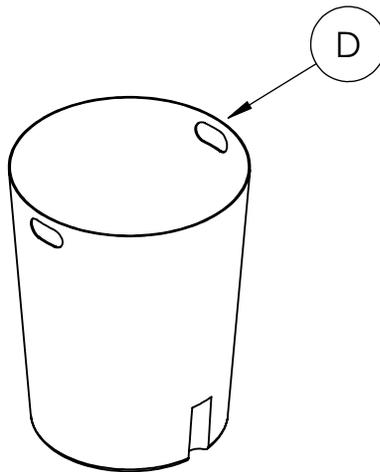


1
Trash Liner

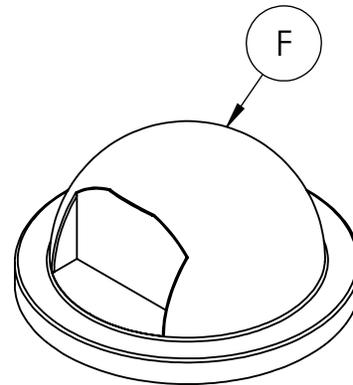


Optional Dome Lid


HARDWARE

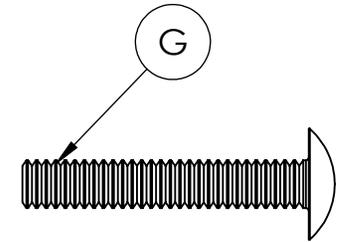

36
Carriage Bolts

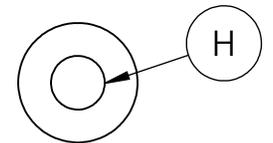

36
Flat Washers

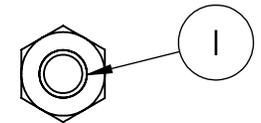

36
Hex Nuts


**REQUIRED TOOLS
(NOT INCLUDED)**
- 7/16 Wrench or Socket

**NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS LOOSE
DURING ASSEMBLY UNTIL ENTIRE UNIT IS ASSEMBLED**

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/5


ASSEMBLY INSTRUCTIONS

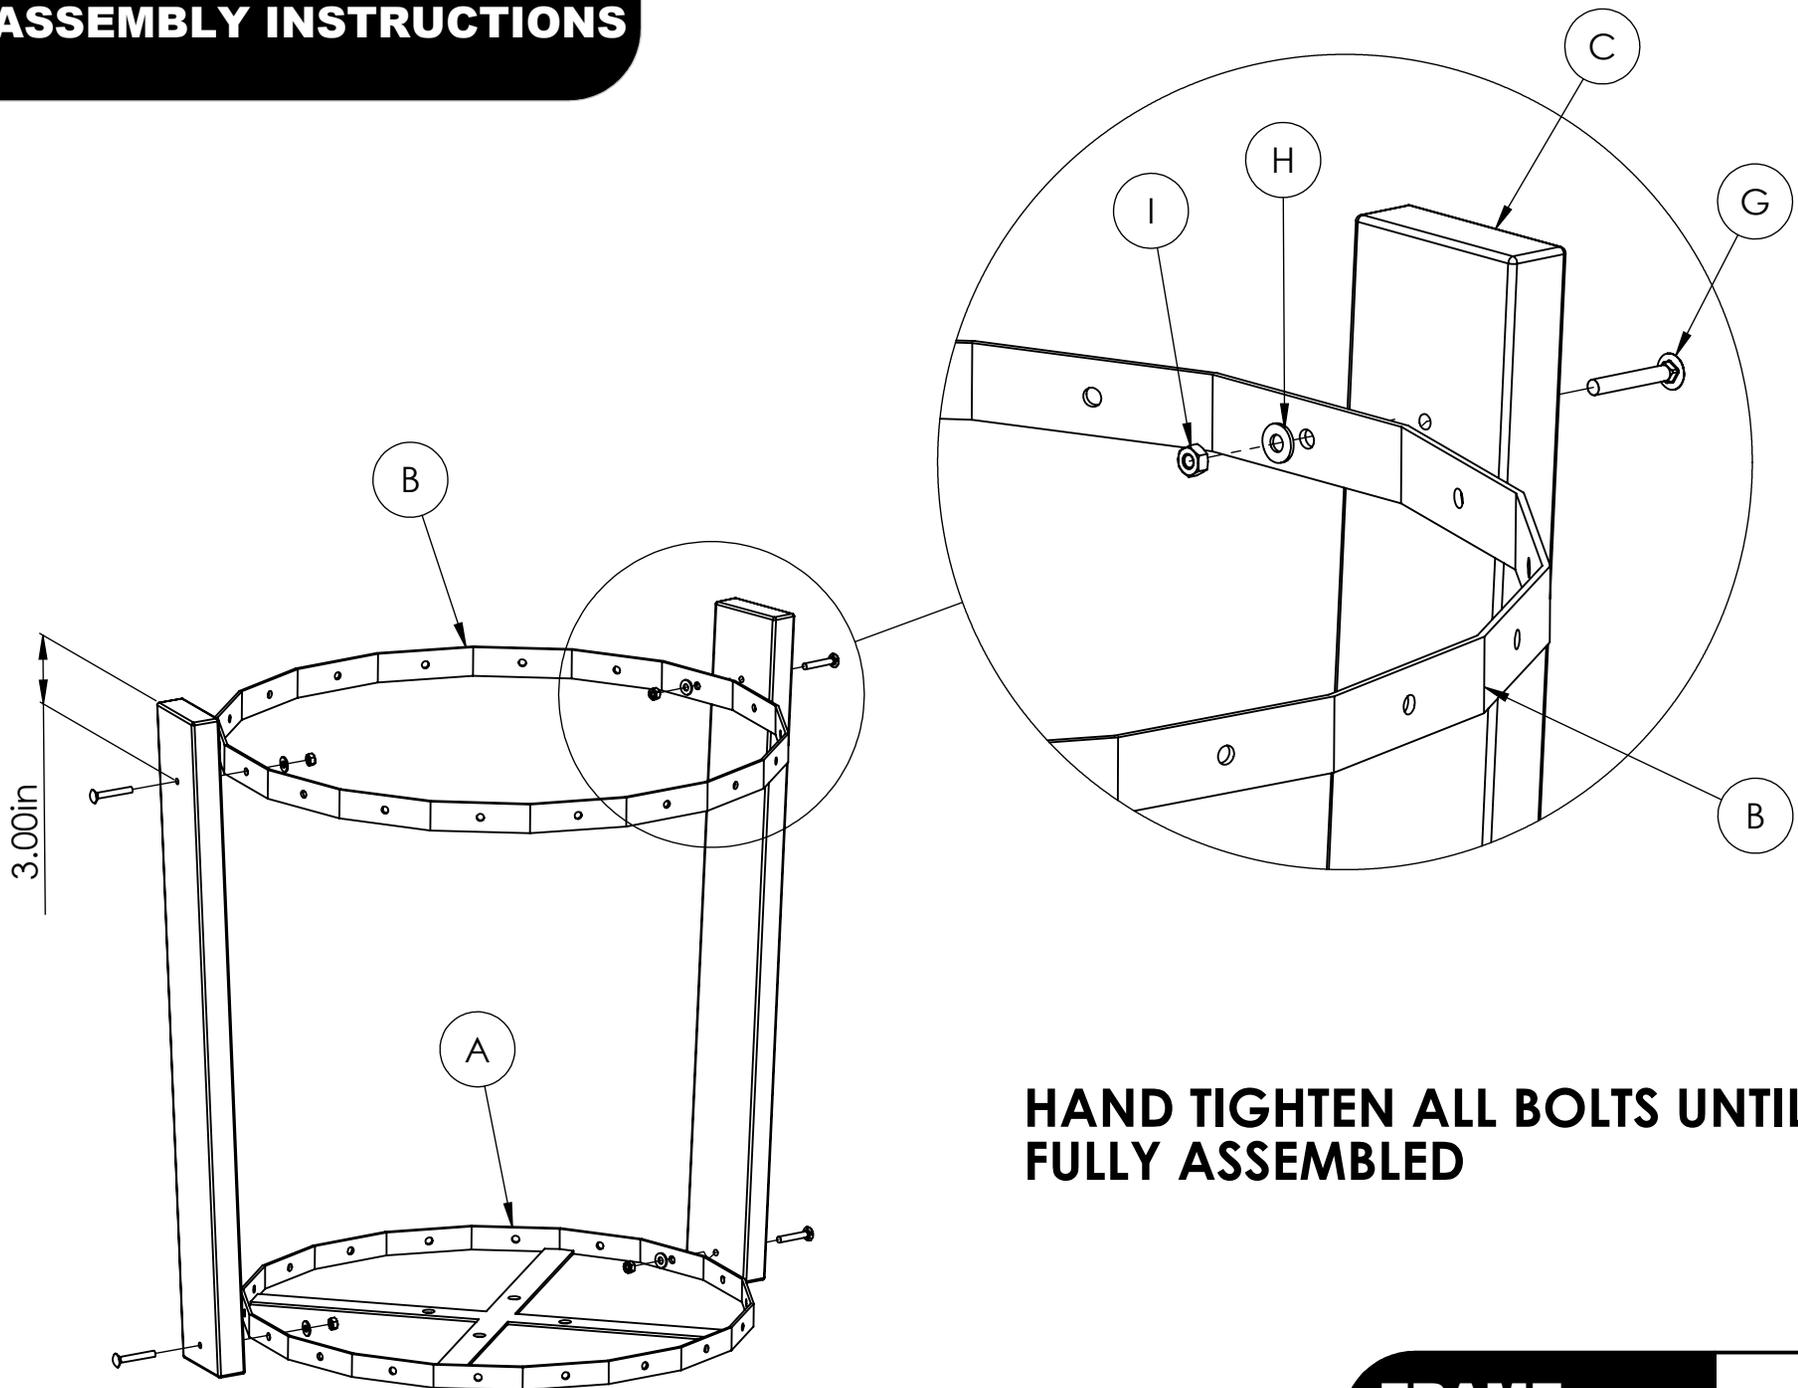


HAND TIGHTEN ALL BOLTS UNTIL FULLY ASSEMBLED

ASSEMBLY INSTRUCTIONS

OPTIONAL INGROUND MOUNT INSTRUCTIONS

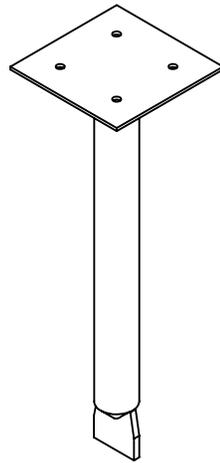

1
Inground
Mounting Base





4
M8 x 1.0"



4
M8 Nut



8
M8 Nut

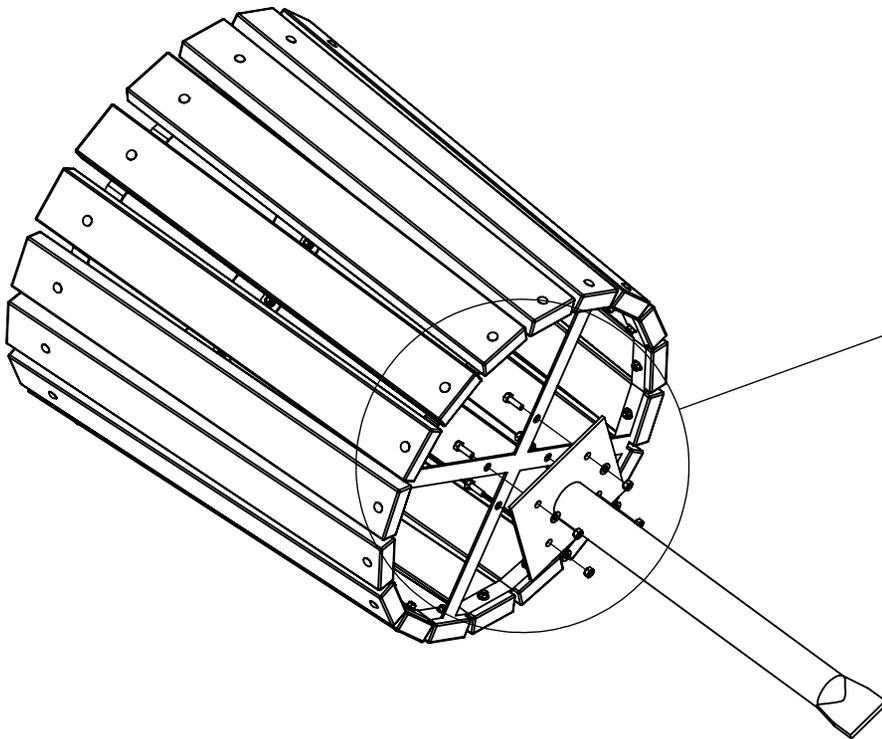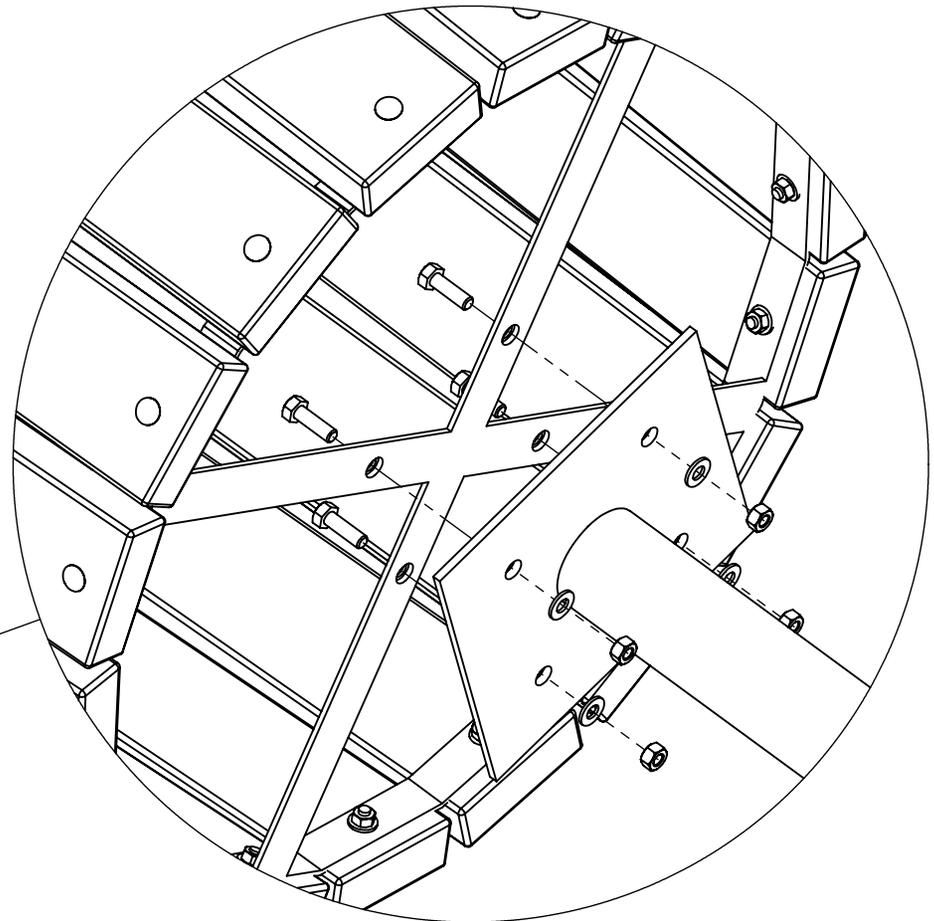

ASSEMBLY SPECS.

