


Installation Instructions

Park-It Bike Racks - Surface Mount

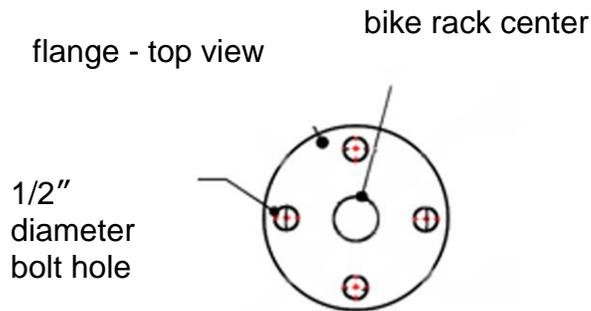

Note: Surface mounting hardware sold separately. Use 3/8" x 4" lag bolts and 1/2" x 3" anchors.
It is recommended that concrete cure 28 days prior to mounting.

Step 1: Place the bike rack in its desired location with the flanges in place. Mark the center of the holes in each of the flanges on the mounting surface.

Step 2: Move bike rack aside. Using a 1/2" masonry drill bit, drill holes where marked in cement, 4" deep.

Step 3: Blow the hole clean of dust and other material. Insert anchor shields into holes and gently tap into place with a hammer.

Step 4: Align holes in flange with anchors and secure with 3/8" x 4" lag bolts.