


TB1600 REV #1 4/16/2019

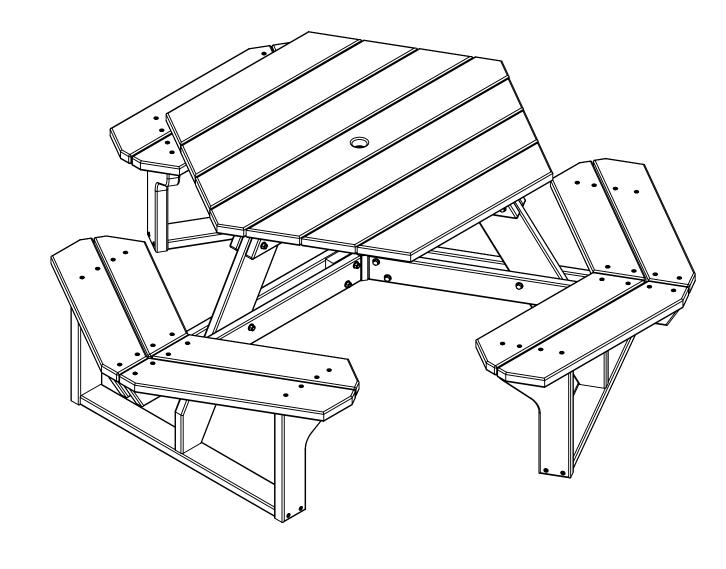

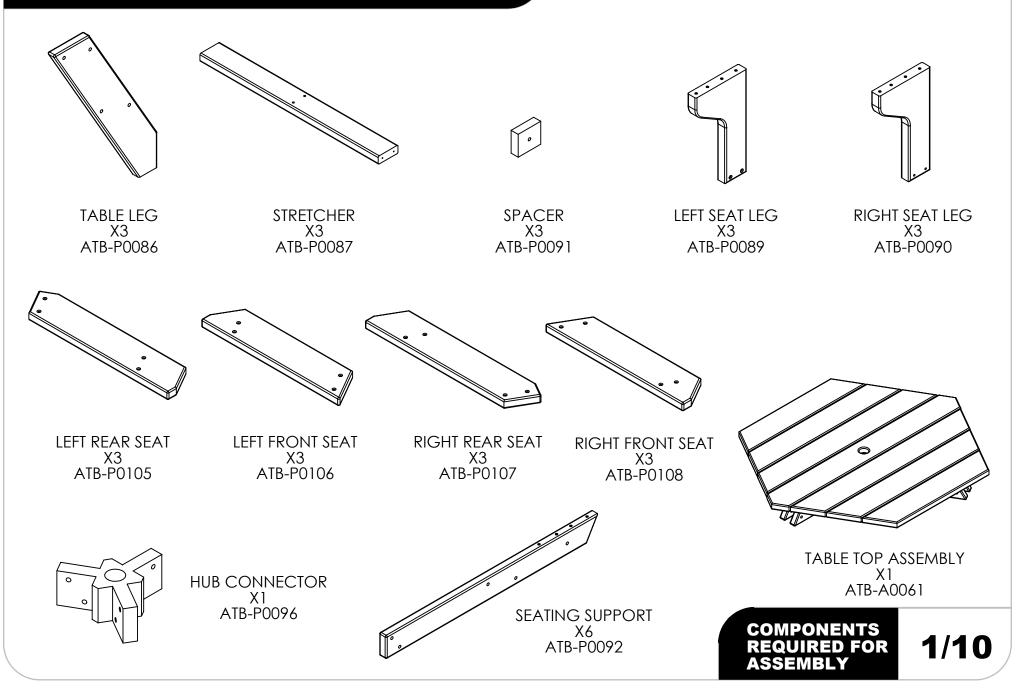


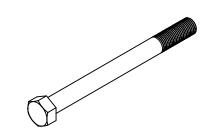

3/8" X 4.25" HEX HEAD BOLT X21 F0001



3/8" FLAT WASHER X42 F0003



#12 X 2.5" DECK SCREW X66 F0002



3/8" NYLOCK NUT X21 F0004


REQUIRED TOOLS (NOT INCLUDED)


- 1 9/16" WRENCH
- 1 9/16" SOCKET
- 1 SCREW GUN
- 1 RUBBER MALLET


1 - #3 SQUARE DRIVE BIT

NOTE: IT IS IMPORTANT TO KEEP ALL BOLTS FINGER TIGHT DURING ASSEMBLY UNTIL ENTIRE TABLE IS ASSEMBLED



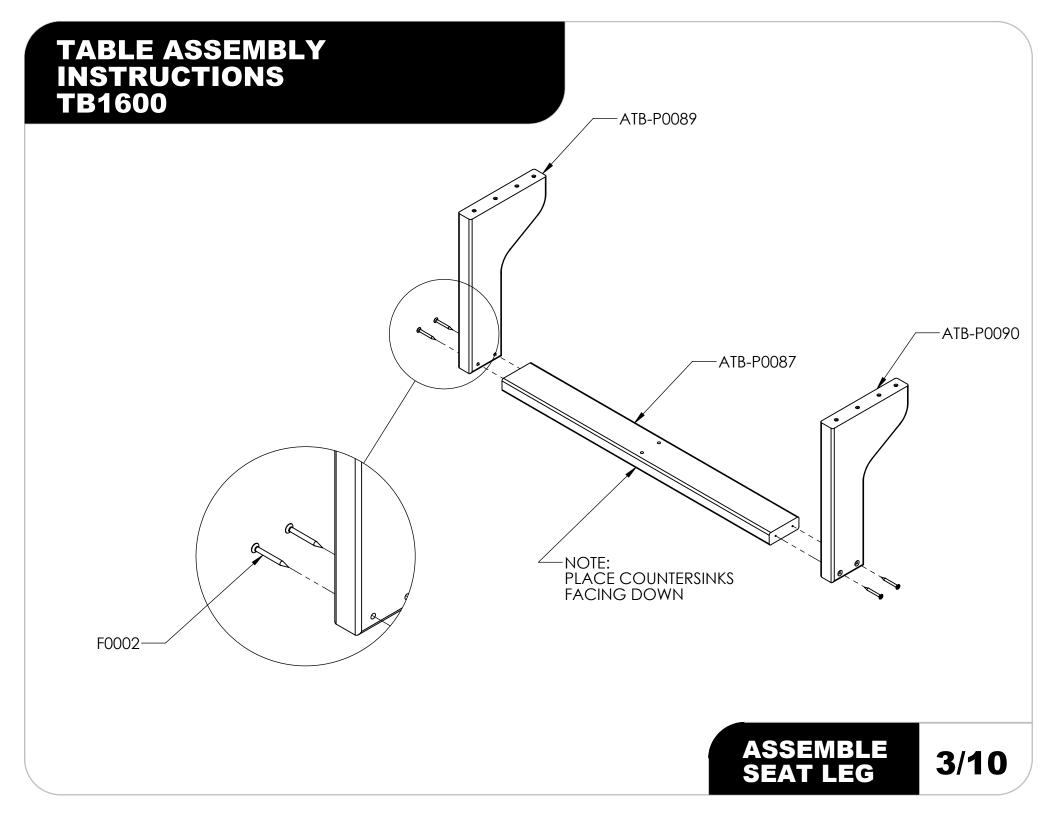

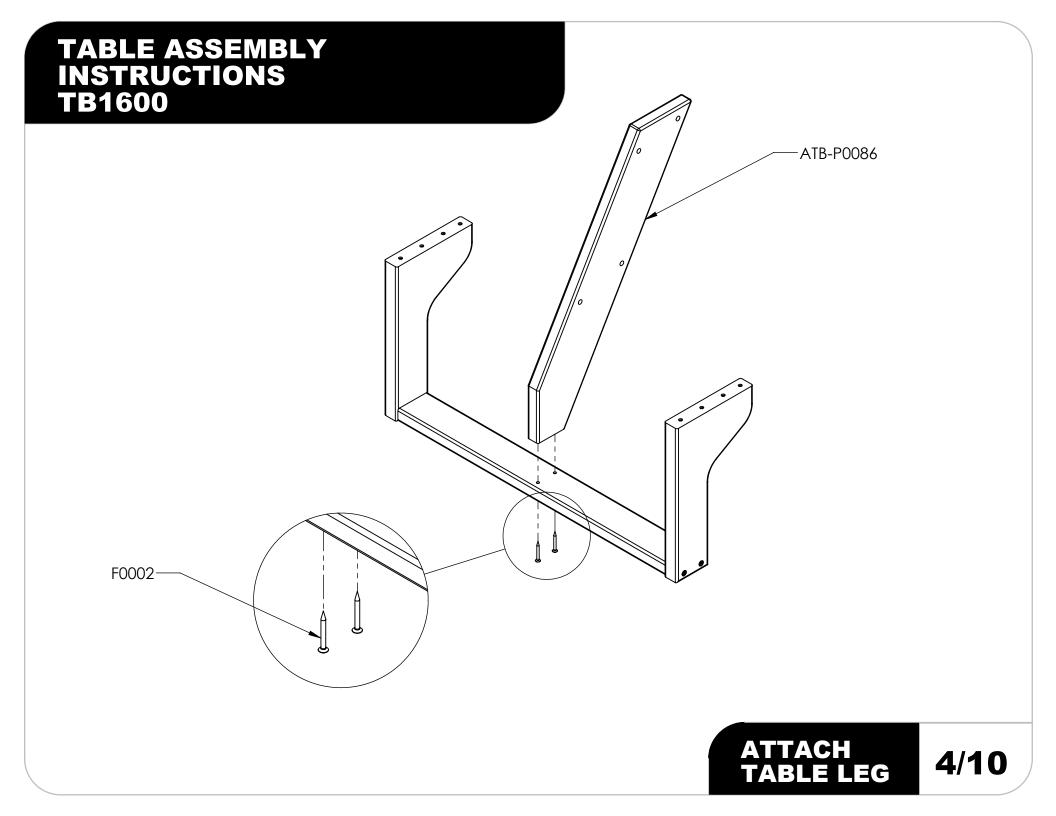

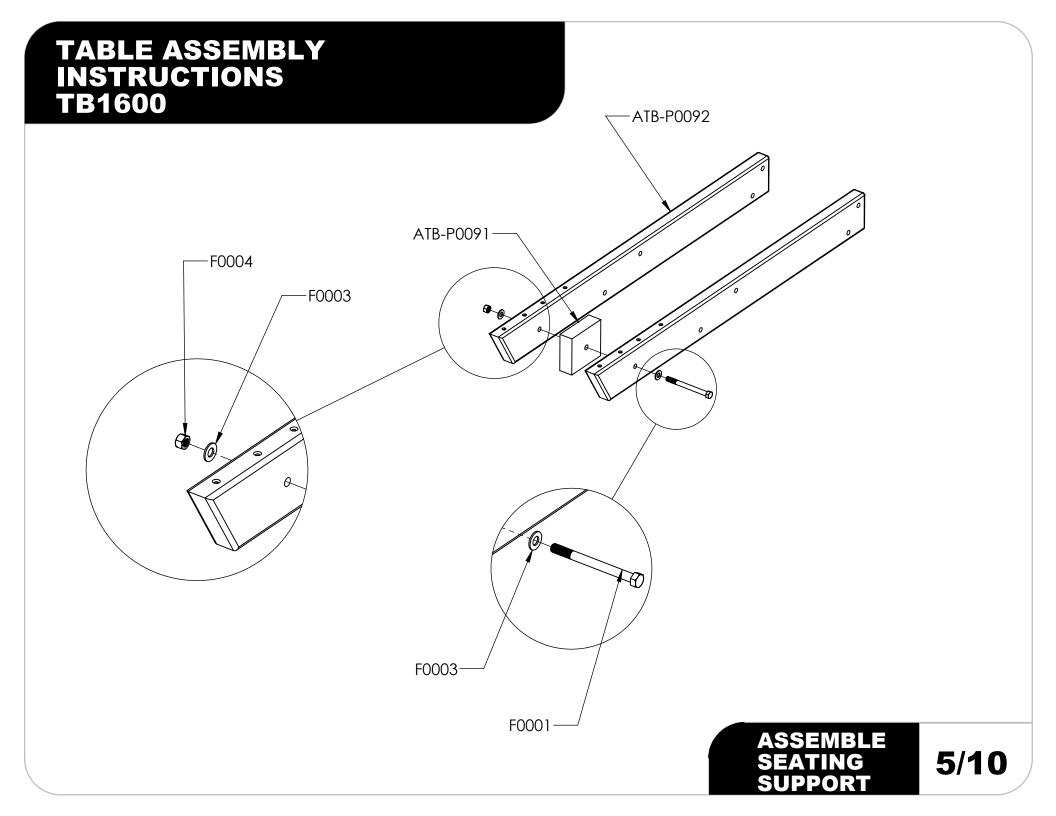





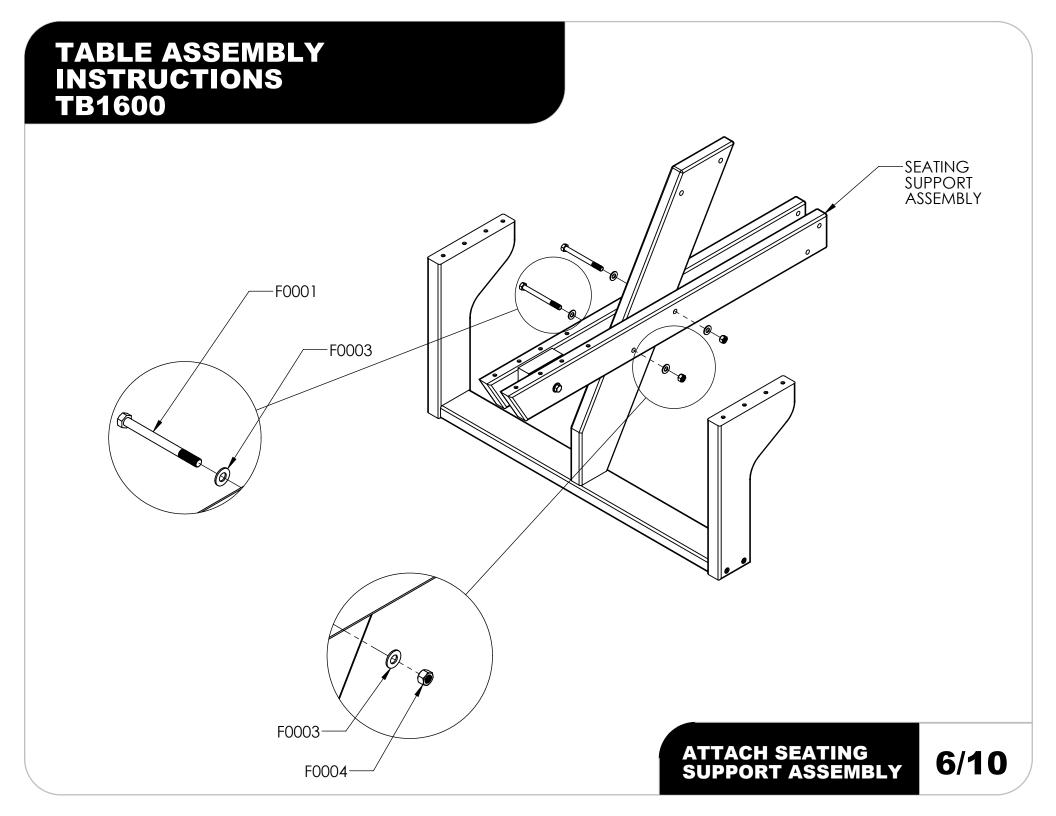


TABLE ASSEMBLY INSTRUCTIONS TB1600 -F0002 2 -F0002 ATB-P0106 ATB-P0108 ATB-P0105 -ATB-P0107 ATTACH Seats 7/10

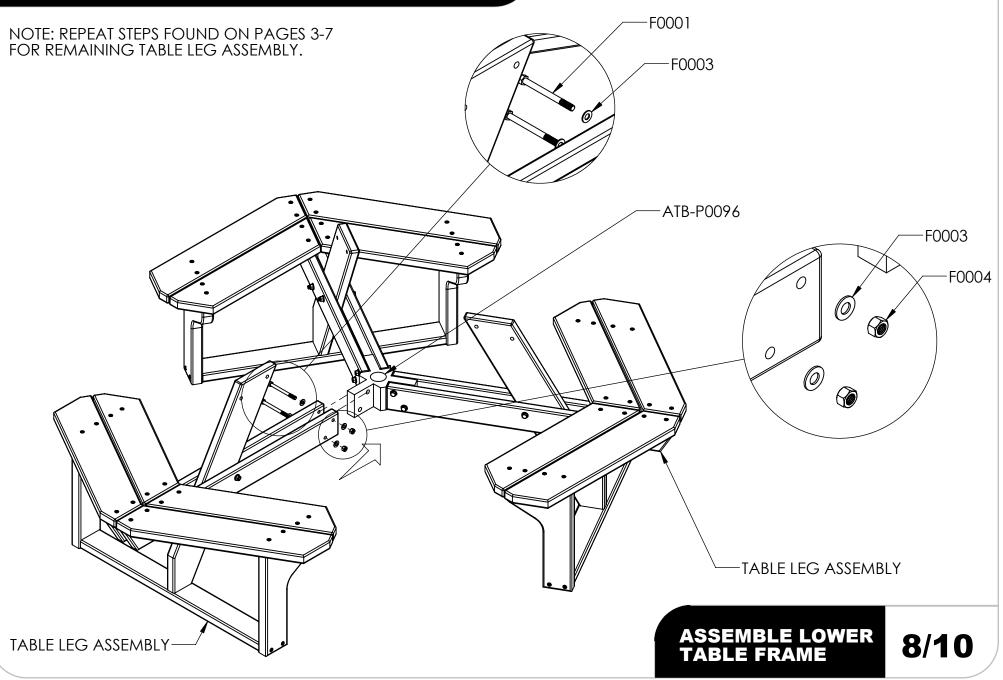

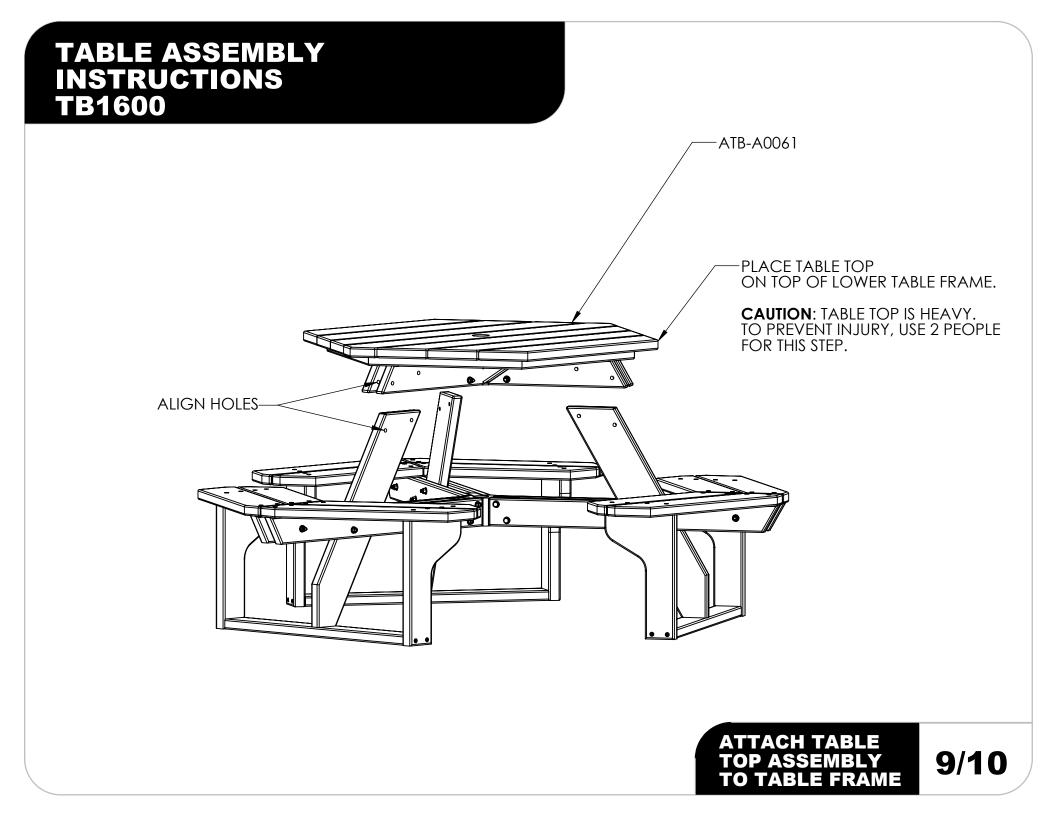

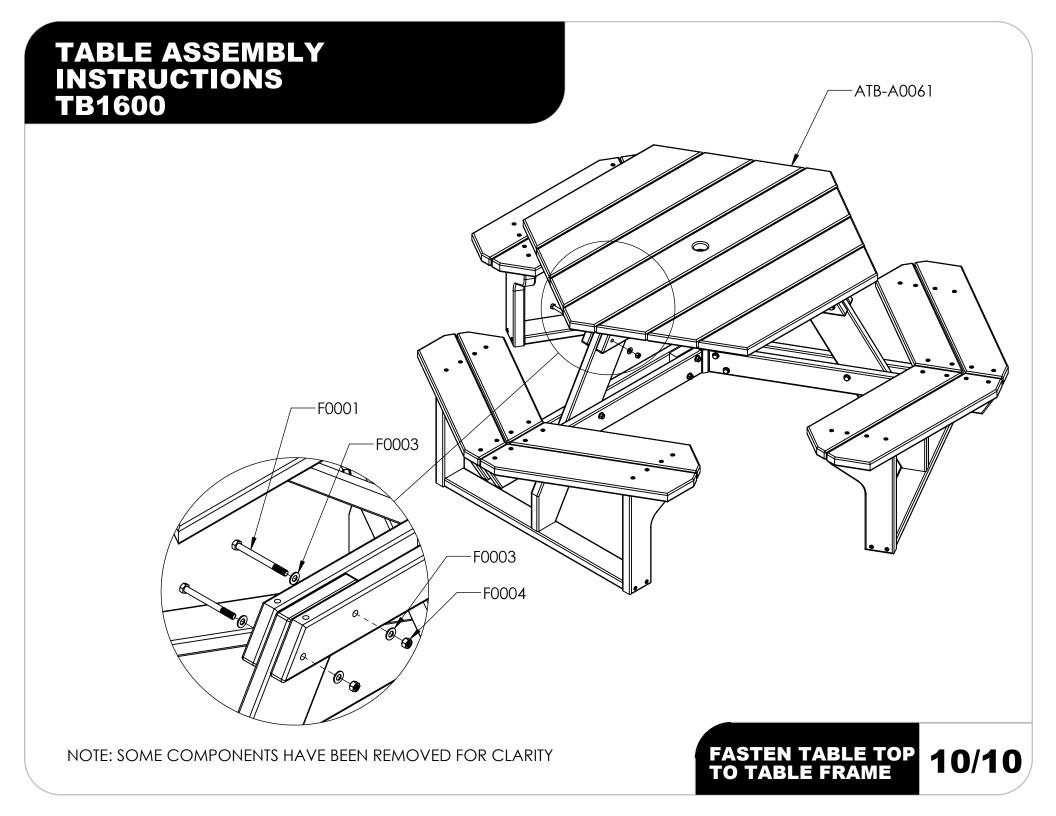

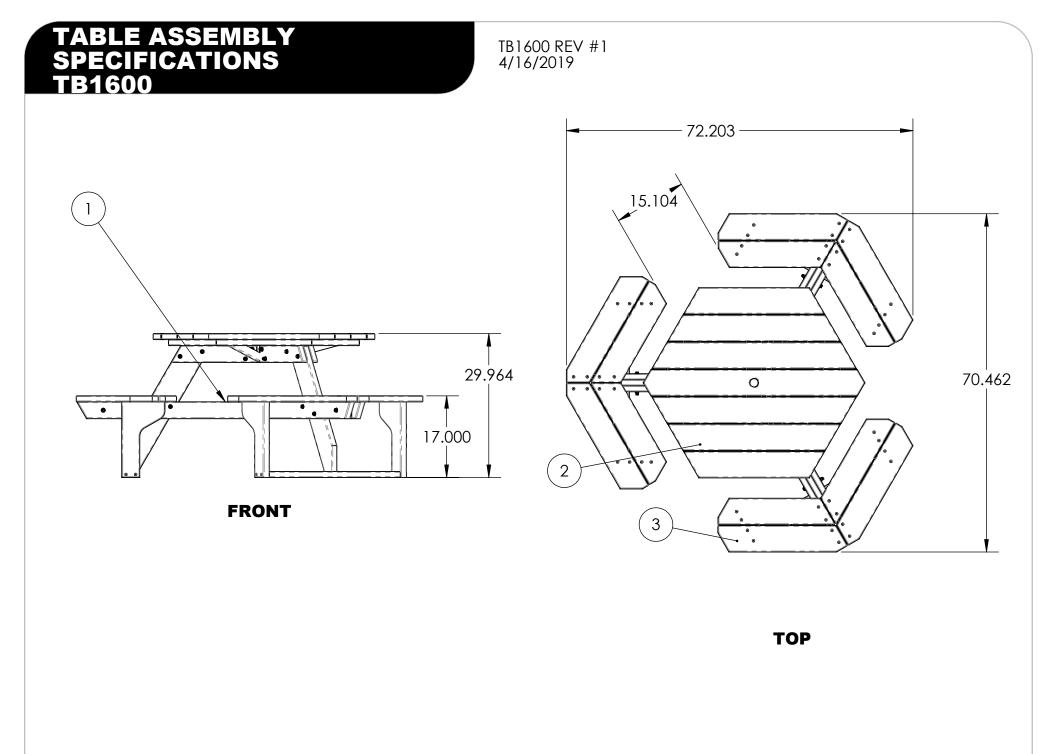

NOTE: ALL MATERIAL IS RECYCLED PLASTIC LUMBER UNLESS NOTED

