


KBC1475 KBC1495 KBC1500 KBC1515 KBC1520 REV# 4 9/9/2021

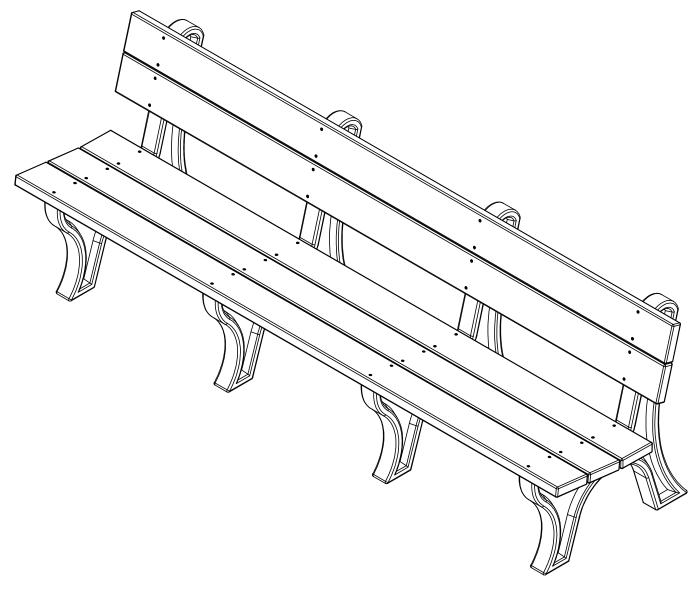

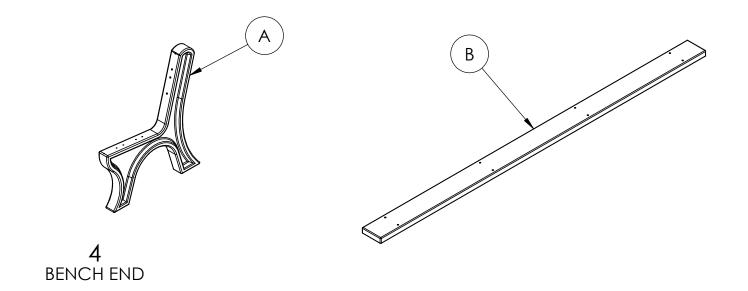



REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- #2 SQUARE DRIVE


NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED

HARDWARE & TOOLS REQUIRED FOR ASSEMBLY

2/5


STEP 1 Seat Assembly

- Stand two outer bench ends (A) upright
 Lay a plastic board (B) over the bench
 ends (A) closest to the end
 Align the holes in the plastic board with the
 predrilled holes in the bench ends
- Secure the board with the #10 x 2.5" screws (C)
- Repeat for each plastic board starting at the front seat board and working toward the back

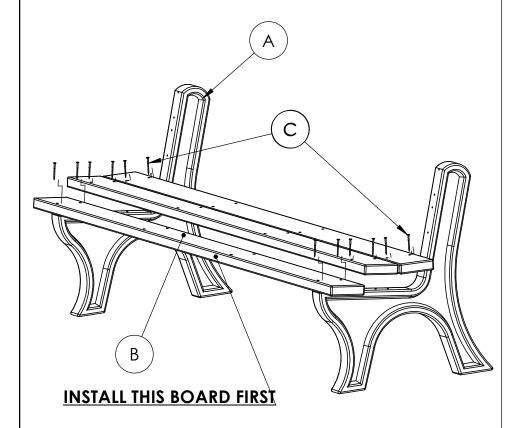

STEP 2 Seat Assembly

- Move the remaining bench ends (A) under the bench seat
- Align the predrilled holes in the bench ends with holes in the plastic board (B) Secure each plastic board to the bench ends with
- #10 x 2.5" screws (C)

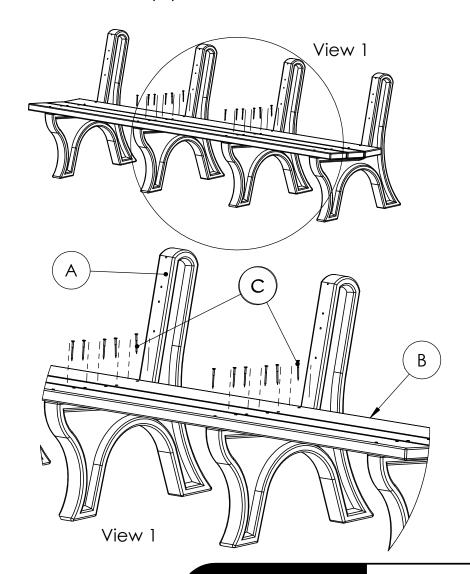

ASSEMBLY

- STEP 3 Backrest Assembly
 Hold a plastic board (B) up to the back rest portion of the bench end (A)
 Align the predrilled holes in the bench end (A) with holes in the plastic board (B)
 Secure each plastic board to the bench end with #10 x 2.5" screws (C)
 Square all components and tighten all screws

