







SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS

MC5386
8/19/22
REV #2

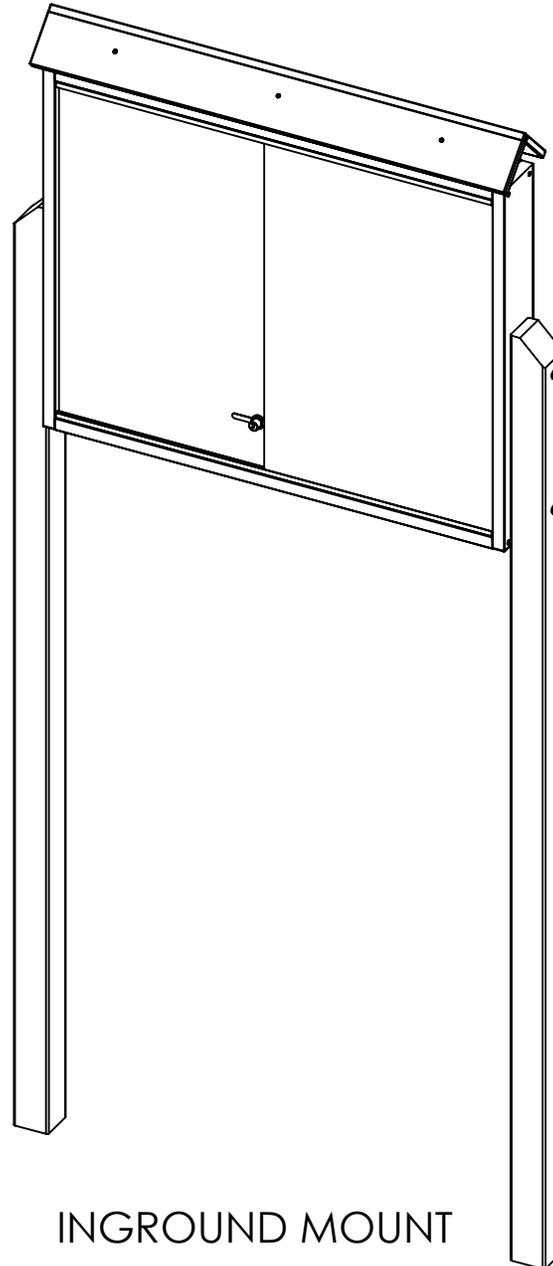


INGROUND MOUNT


SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS

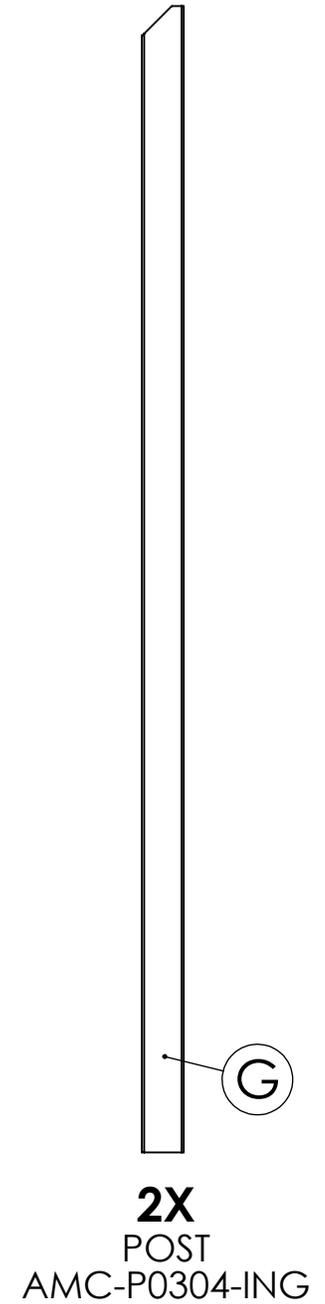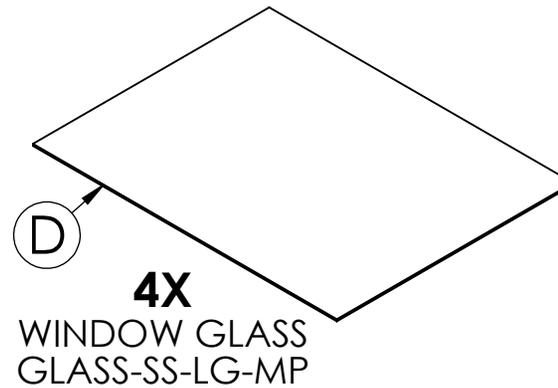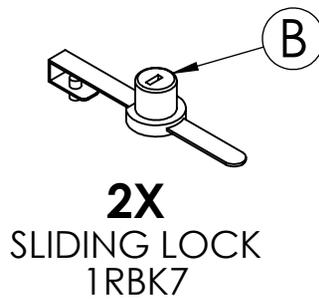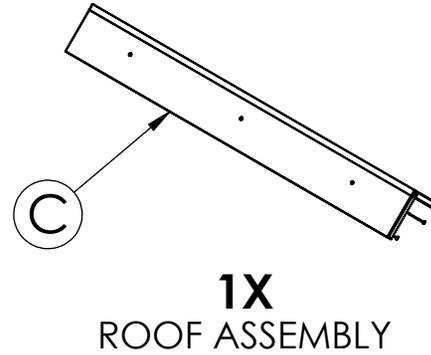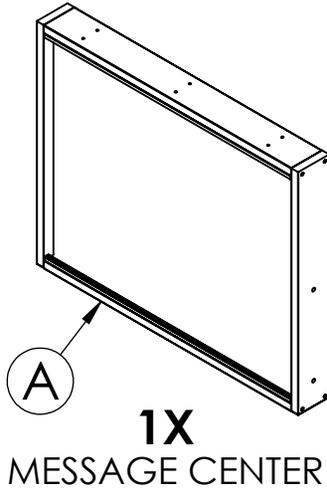


SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS

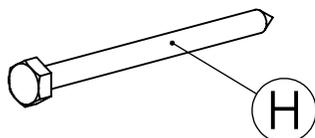

6X
1/4" X 4" LAG SCREW
HLAG025C400188

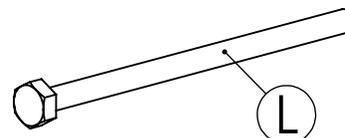

4X
3/8" X 5" HEX BOLT
HHCS037C500188



6X
1/4" FLAT WASHER
WUSS025WAS188



4X
3/8" FLAT WASHER
WUSS037WAS188

REQUIRED TOOLS (NOT INCLUDED)

- (1) 3/8" SOCKET
- (1) 1/4" SOCKET
- (1) #2 PHILLIPS BIT
- (1) LEVEL

OTHER REQUIRED MATERIALS FOR INGROUND MOUNTING (NOT INCLUDED)

- (2) 80lb BAG OF SAKCRETE
- (1) POST HOLE DIGGER
 - GUIDE WIRES
 - A FRIEND TO HELP



**COMPONENTS &
TOOLS REQUIRED
FOR ASSEMBLY**

3/8

SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS

STEP #1

- A. Lay Message Center (A) on the ground
- B. Lay Posts (G) on either side of the Message Center (A) and align the predrilled holes
- C. **Note: It may be helpful to prop up Posts about an inch to better align with holes on Message Center**
- D. Take 3/8" x 5" Hex Bolt (L), feed through a 3/8" Flat Washer (M), through an outside hole on one of the Posts (G), and screw into aligned hole on Message Center (A)
- E. Repeat for three other holes to complete attachment of Posts (G) to Message Center (A)
- F. **Note: Hand tighten bolts until all four have been placed, then tighten with socket wrench**

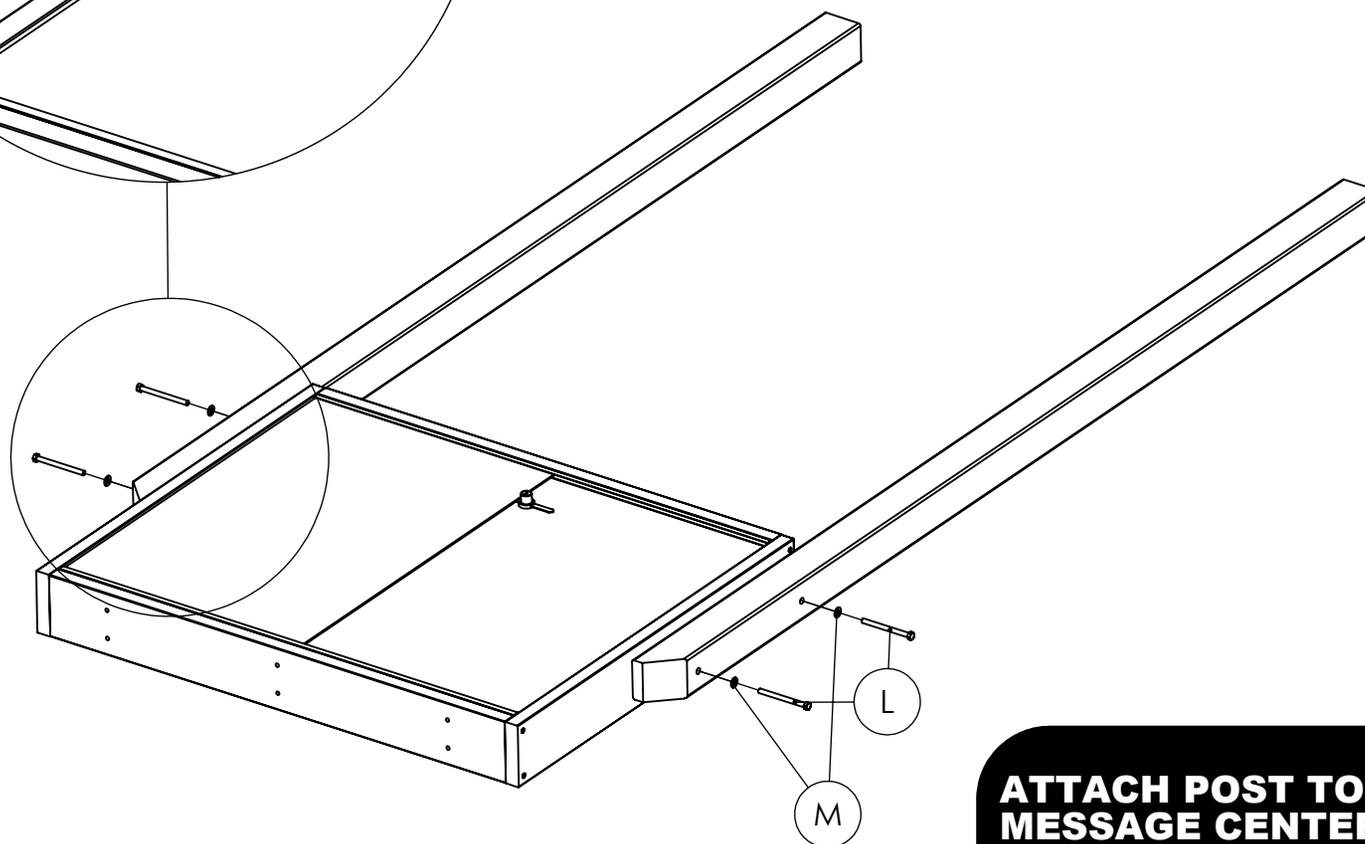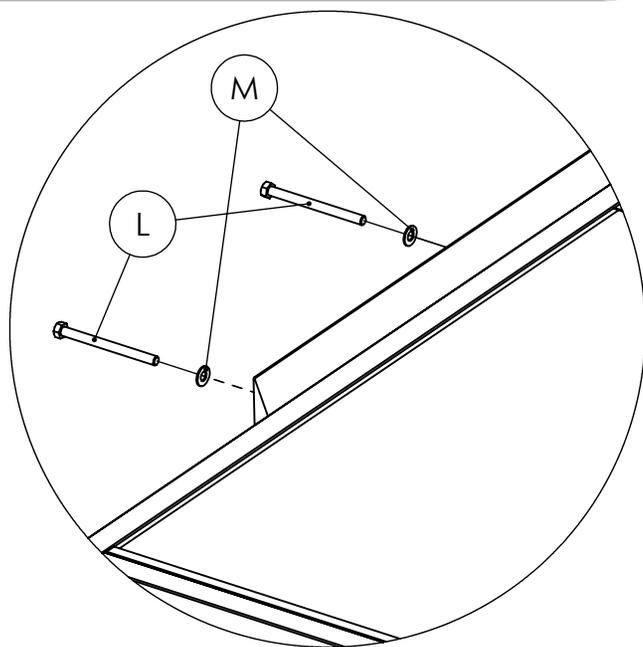




ATTACH POST TO MESSAGE CENTER

4/8

SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS

STEP #2-A

- A. Dig two holes, approximately 10" in diameter to a depth of 36" (or to building code / frost line)

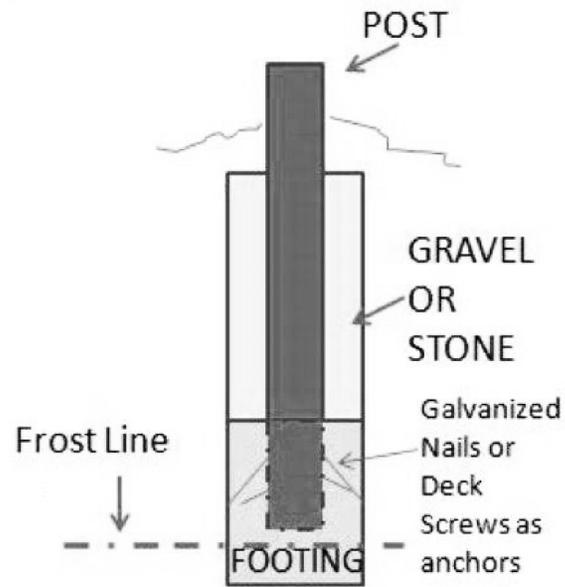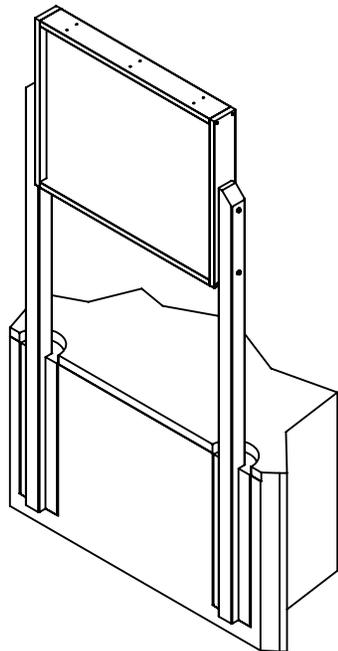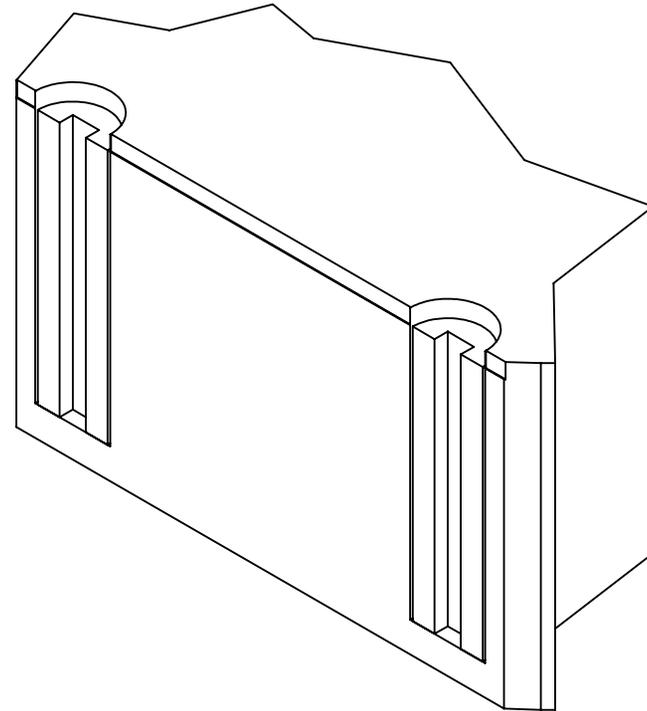

Post in Poured Concrete Footing



STEP #2-B

- A. Place post into holes.
B. Fill with Sakcrete to a level about 4" - 6" below ground level
C. Use guide wire to secure until Sakcrete is dry
D. Use a level to make sure Message Center is square and level

SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS

STEP #3


- A. Align predrilled holes on Roof Assembly (C) and top of Message Center (A)
- B. Take 1/4" x 3-1/2" Lag Screw (H), feed through 1/4" Washer (I), through a hole in the top of Message Center (A), and screw into Roof Assembly (C)
- C. Repeat for remaining 5 Lag Screws (H)
- D. **Note: Moderately tighten screws until all 6 are placed, then go back and securely tighten.**

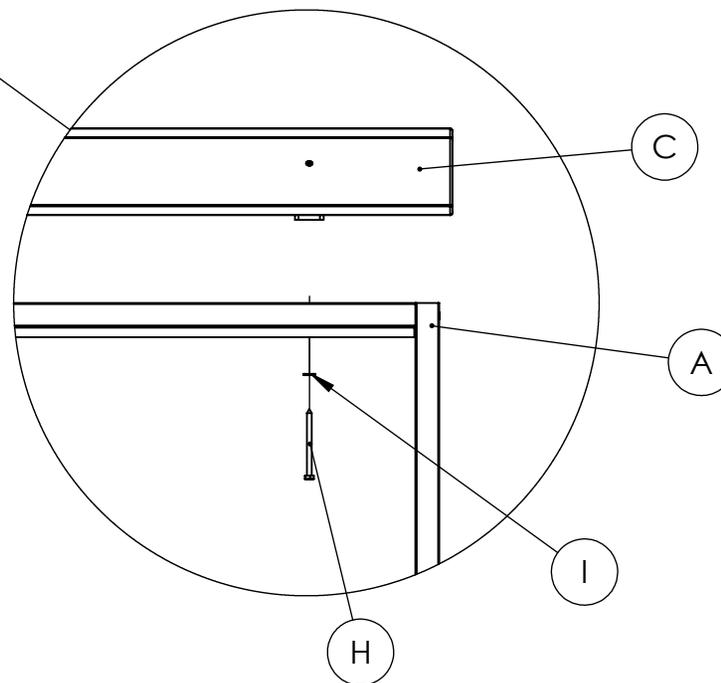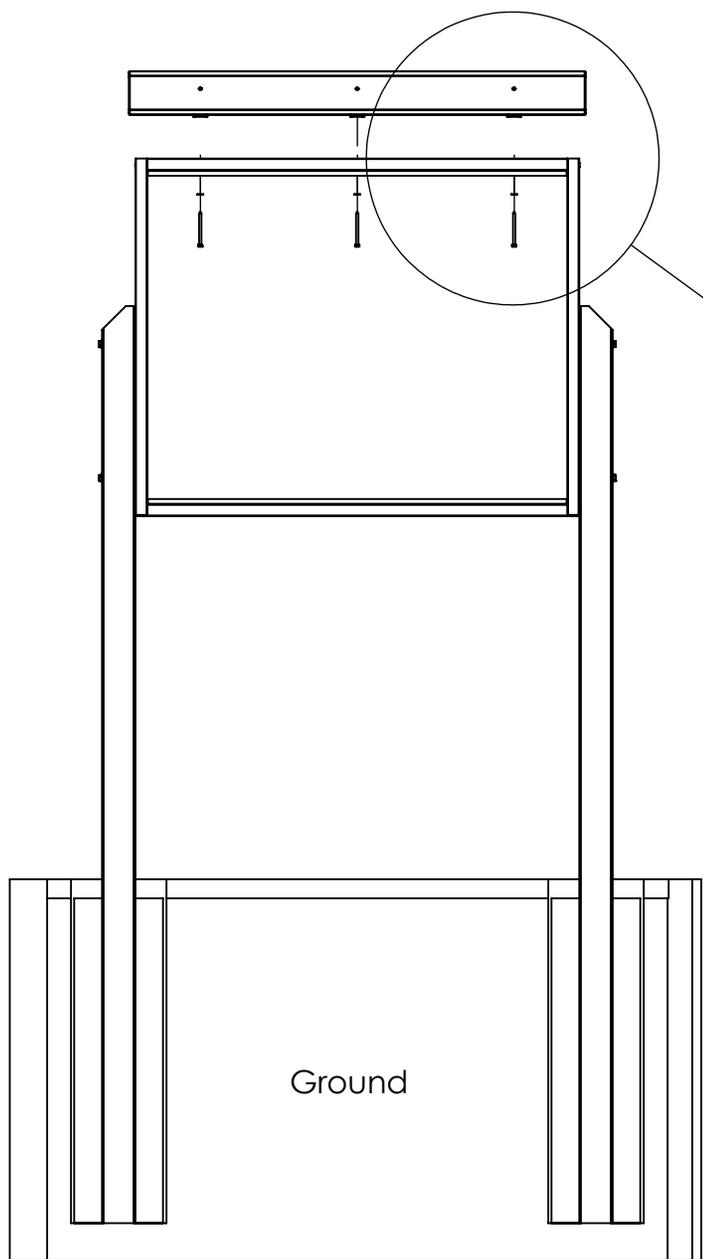

SUPERSAVER INGROUND MESSAGE CENTER INSTRUCTIONS




STEP #4

- A. Remove protective film from Window Glass (D)
- B. Gently Bend the Window Glass (D) into Door Track (E)
- C. Make sure one piece of Window Glass (D) is in the rear track, and one piece is in the front track**
- D. Attach Sliding Lock (B) set screw to Window Glass (D) by tightening in desired lock location
- E. Secure Windows by locking the Sliding Lock (B)
- F. Repeat all steps for other side of display

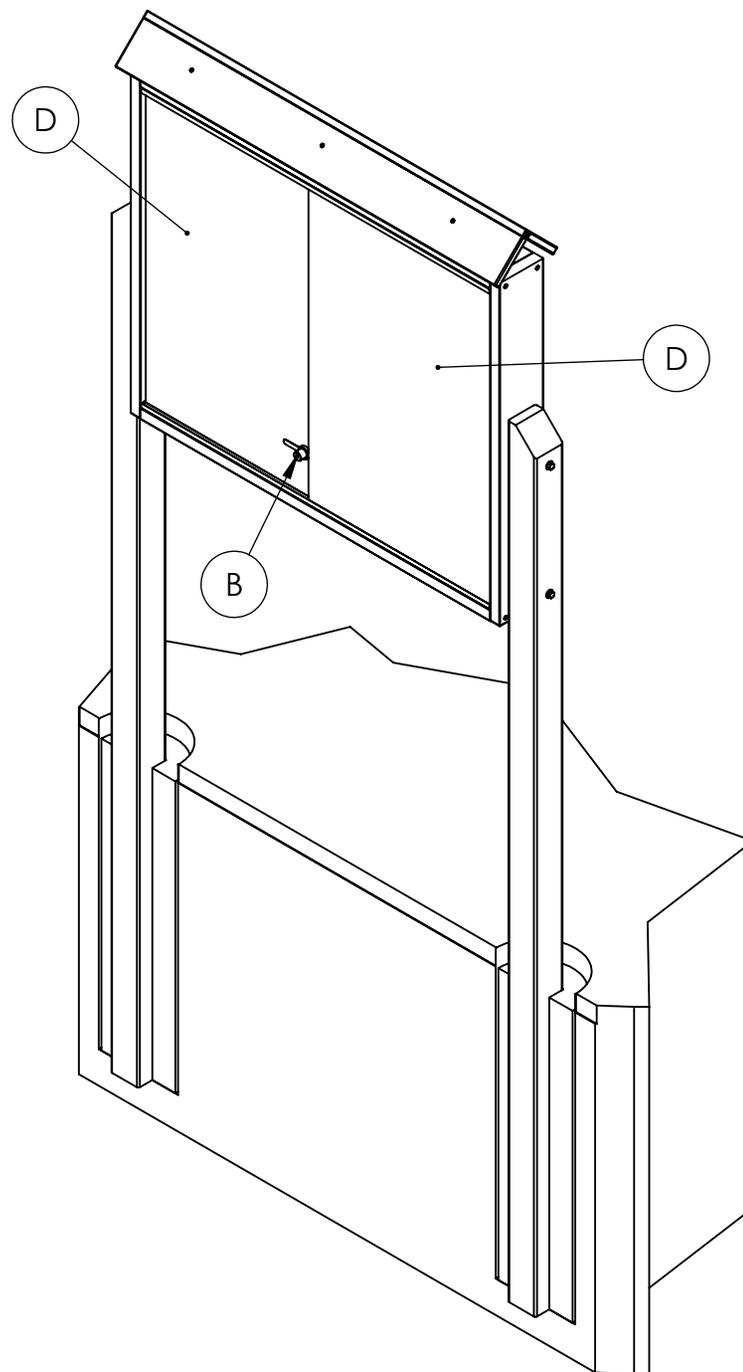

SUPERSAVER INGROUND MESSAGE CENTER SPECIFICATIONS

MC5386 INGROUND MOUNT
8/19/22
REV #2

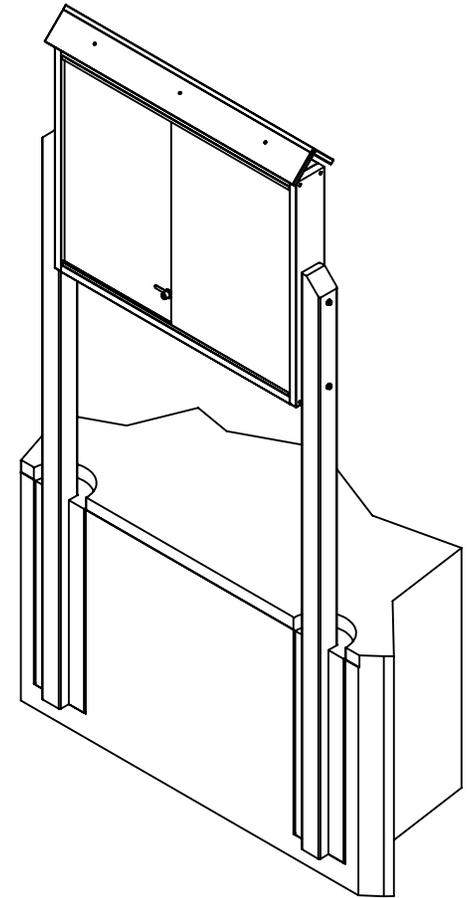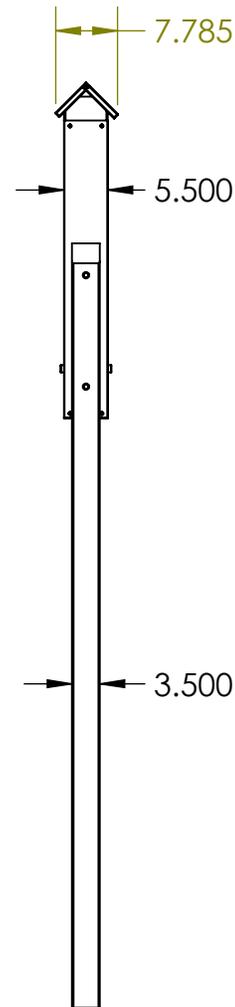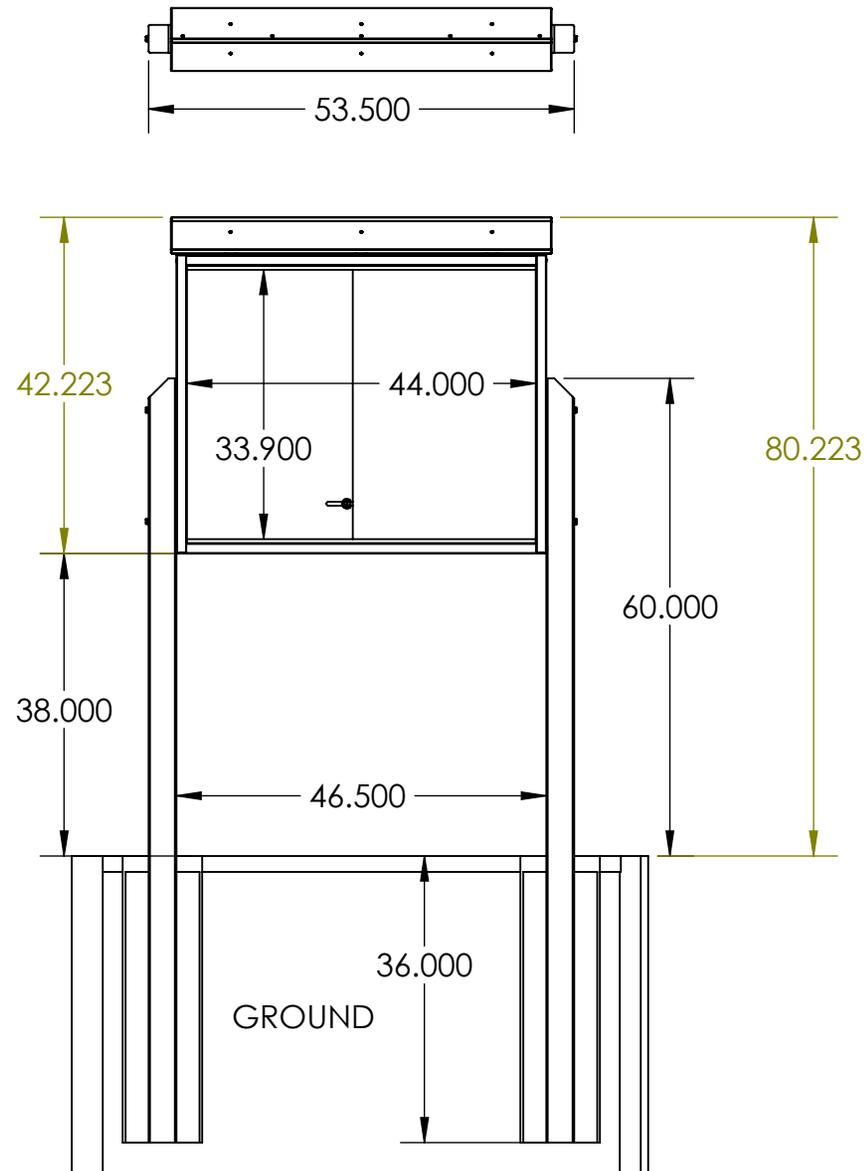

NOTE:
CHECK LOCAL CODES
FOR FROST DEPTH

ALL DIMENSIONS SHOWN IN INCHES