
ADIRONDACK SIDE TABLE INSTRUCTIONS BC1175

REV# 1 11/8/2017

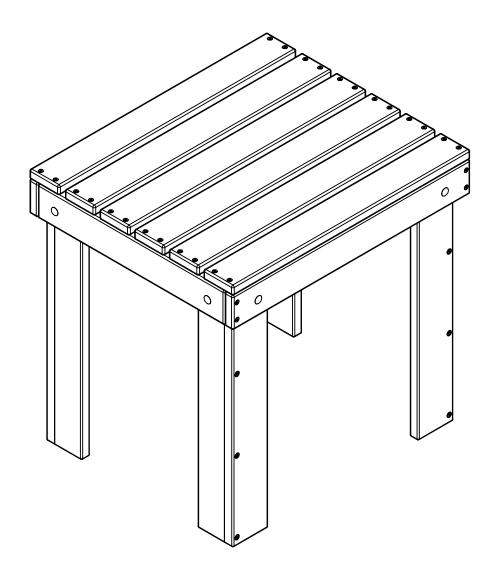


ADIRONDACK SIDE TABLE INSTRUCTIONS **BC1175** 8 1/4"-20 x 1.75" Carriage Bolt CARR025C175188 1/4"-20 Hex Nut NFHX025CNUT188 Table Top Assembly (B) Leg Assembly ABC-P0121 ΈÌ 8 1/4"-20 Flat Washer WUSS025WAS188 NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE **REQUIRED TOOLS** (NOT INCLUDED) DURING ASSEMBLY UNTIL ENTIRE ITEM IS ASSEMBLED - 7/16" SOCKET OR WRENCH **HARDWARE &** 2/4 **TOOLS REQUIRED** FOR ASSEMBLY


ADIRONDACK SIDE TABLE INSTRUCTIONS **BC1175**

STEP 1 Table Assembly

- Attach the table top assembly (A) to the leg assembly (B) with two 1/4"-20 x 1.75" carriage bolts (C) **NOTE:** Match leg assemblies to correct labeled corners on inside of table assembly Secure each bolt with a 1/4" flat washer (E) and a 1/4" hex nut (D) <PARA >Repeat for other three leg assemblies (B)
- ٠
- ٠

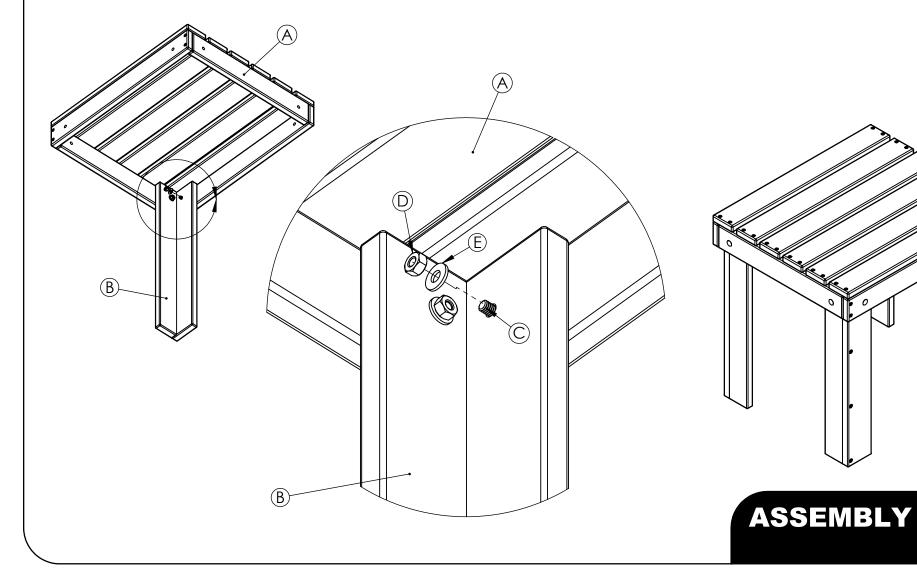

3/4

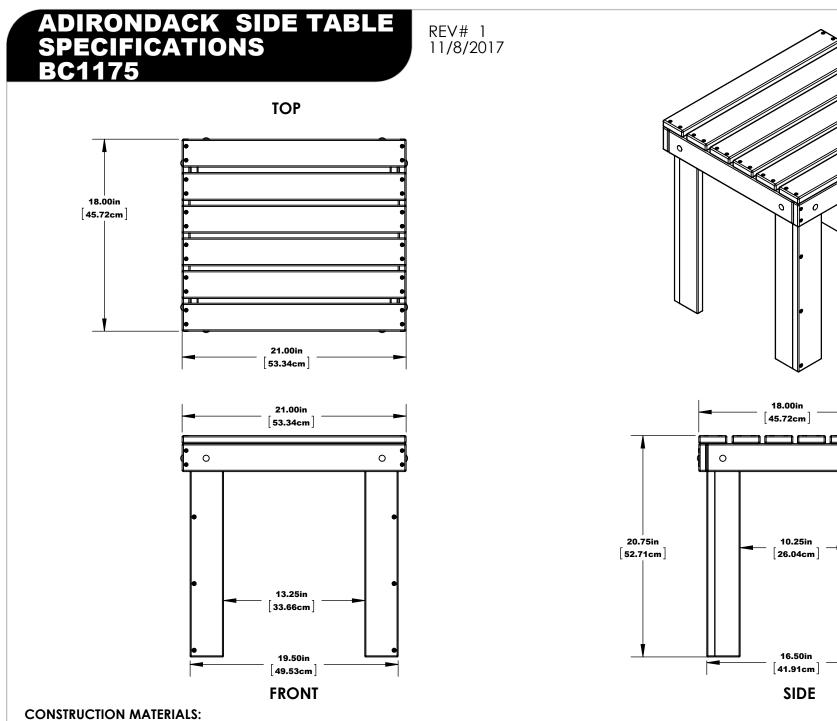

0

17.38in 44.13cm

3.13in

[7.94cm]

Recycled Plastic HARDWARE: Stainless Steel