




# VIEWING CENTER MC9000

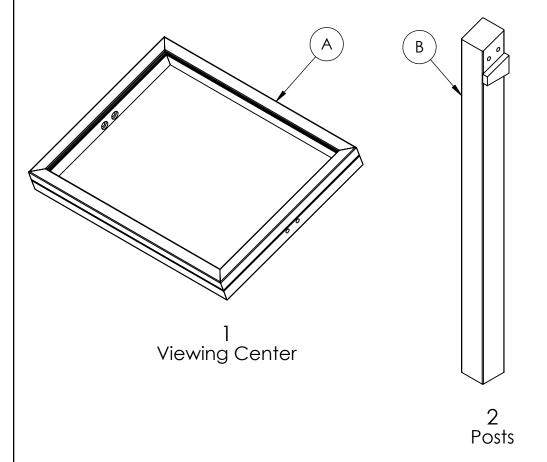

REQUIRED TOOLS (NOT INCLUDED) 1 - 9/16" SOCKET POST HOLE DIGGER


### **HARDWARE**

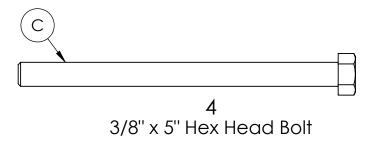




4 3/8" Flat Washer

## VIEWING CENTER MC9000

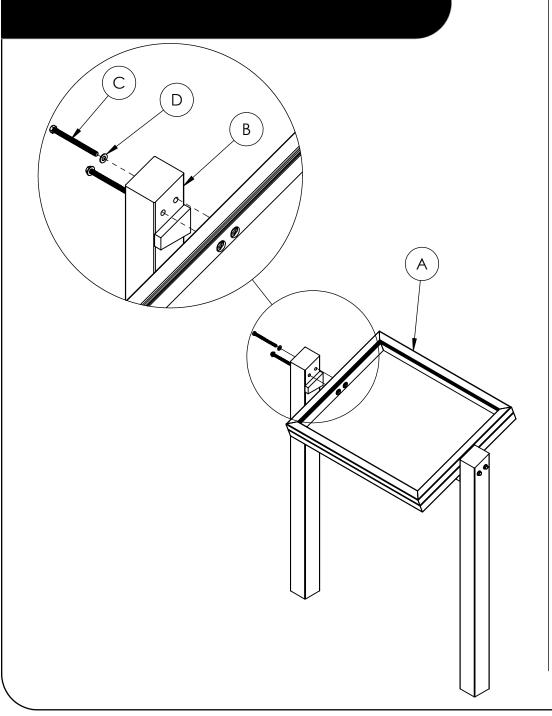

RECOMMEND FILLING HOLES WITH CONCRETE

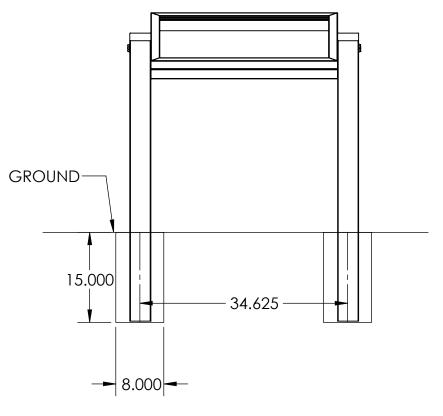


ATTACH POSTS TO VIEWING CENTER

2/4

#### **REMOVE GLASS** COVERING

#### **REMOVE GLASS COVERING**

- Take a razor blade and score as close as possibe to the frame, cutting the covering In a corner, peel back the the covering using the point of the
- knife blade
- Pull the covering off the glass Repeat for the other side

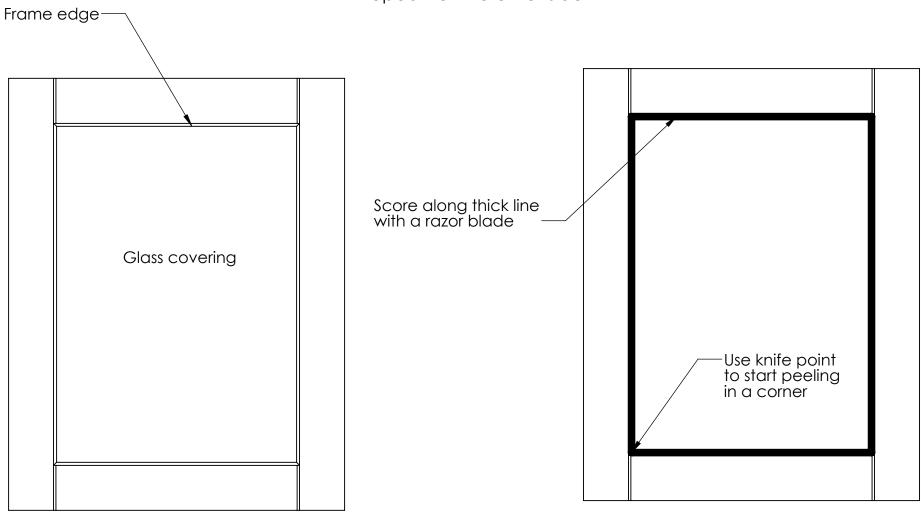

### **SPECIFICATIONS**

