



# KSH1000/1002 SHELTER INSTRUCTIONS


KSH1000 REV# 2  
01/2021

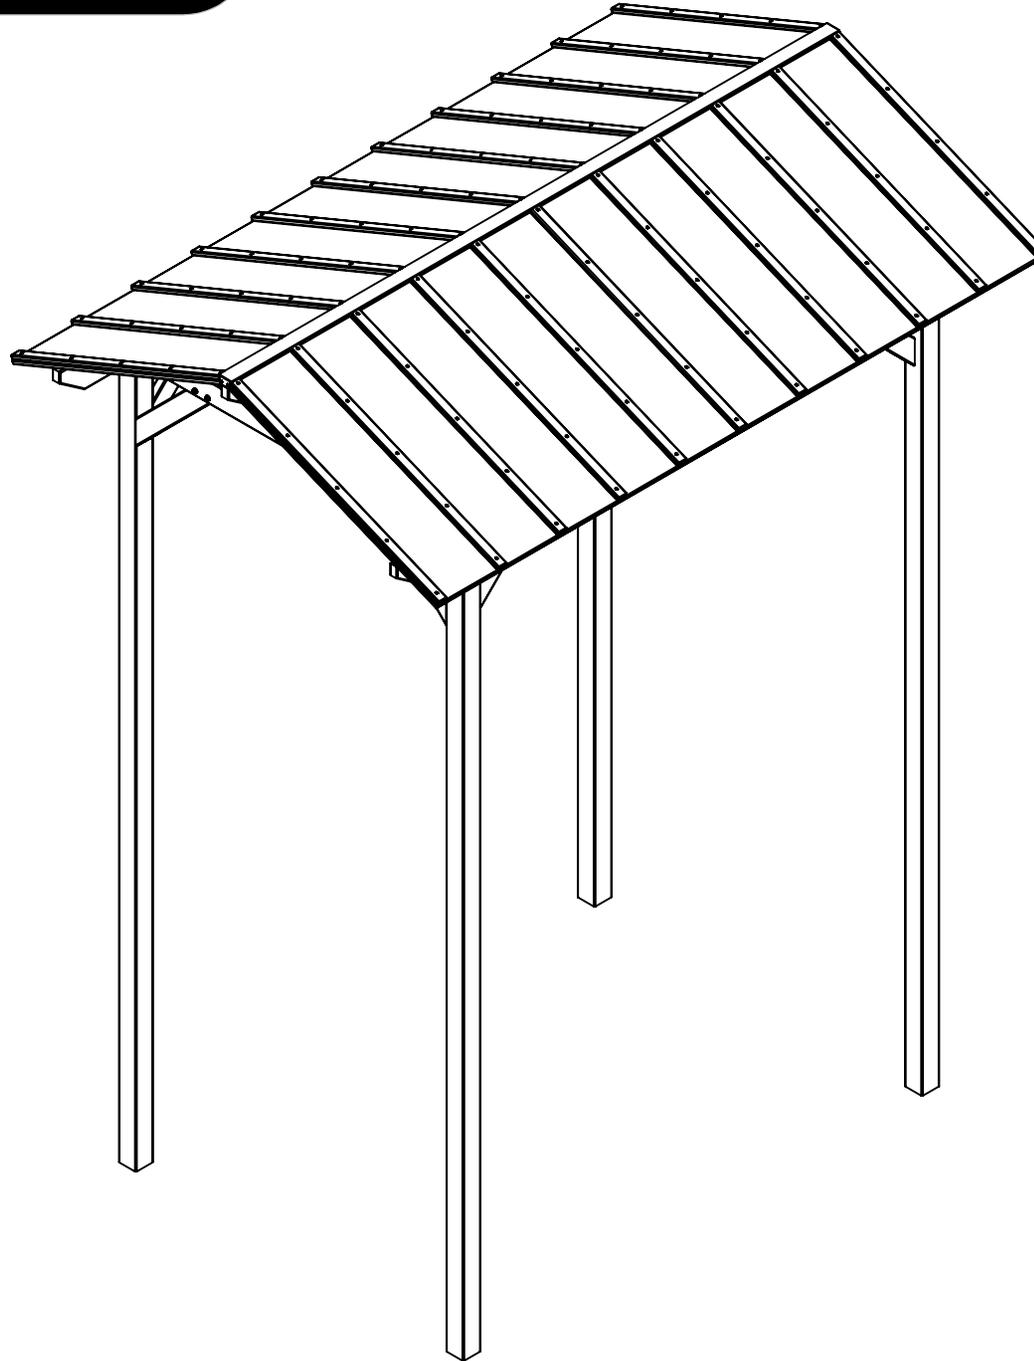


# KSH1000/1002 SHELTER INSTRUCTIONS

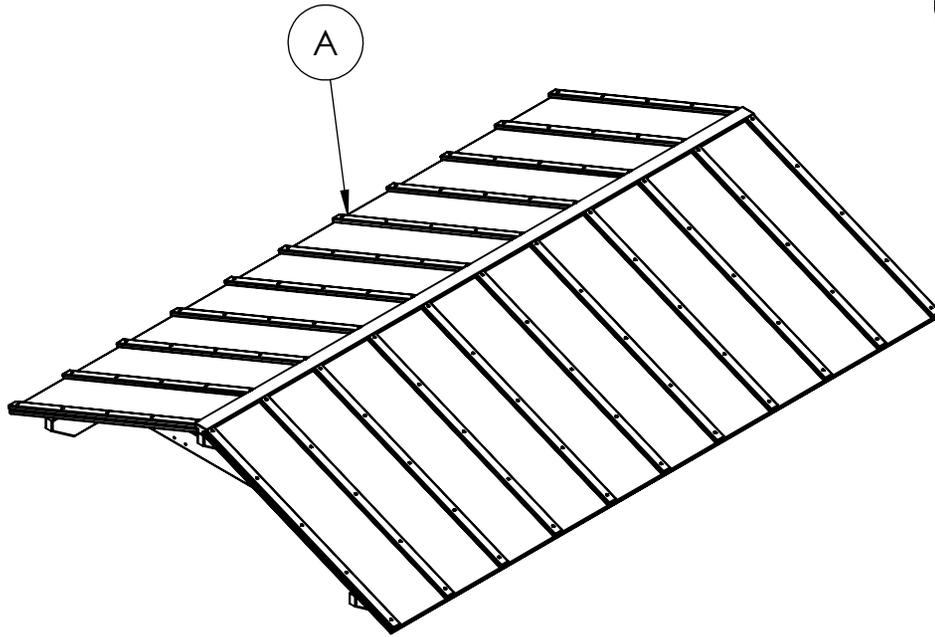


1  
Roof Assembly

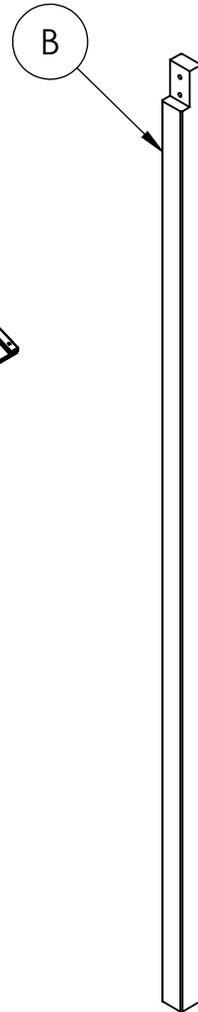

4  
Posts

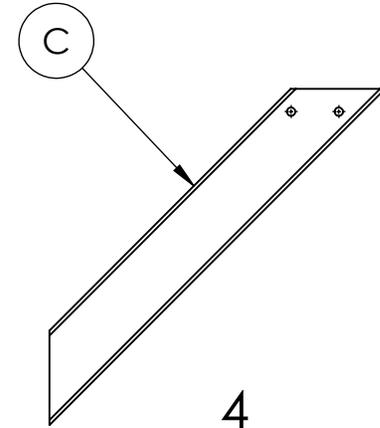

4  
25" Angle Gusset

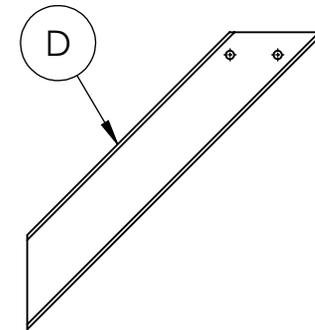

4  
22" Angle Gusset


**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/7**


# KSH1000/1002 SHELTER INSTRUCTIONS




8  
.375" x 4.5" Hex Bolt

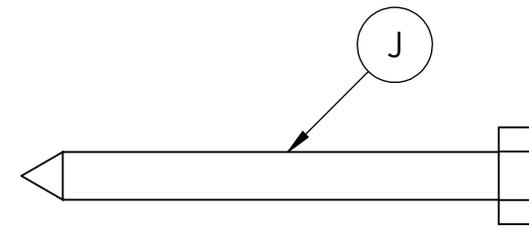


8  
.25" x 2.5" Lag Screws

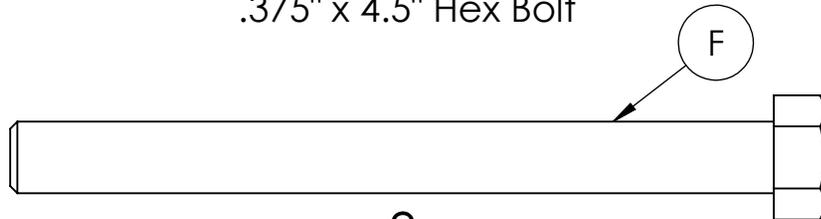


8  
.375" x 4" Hex Bolt

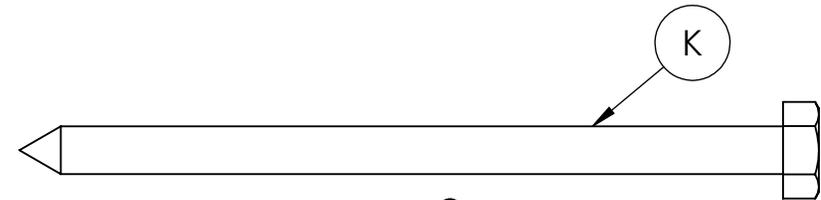


8  
.25" x 4.5" Lag Screws

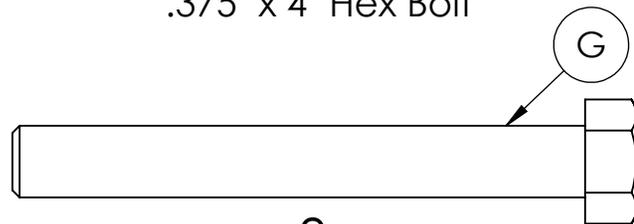


8  
.375" x 3" Hex Bolt

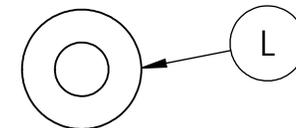

16  
.25" Flat Washer

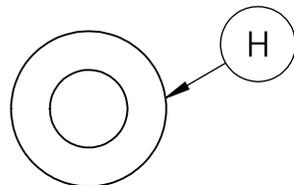

48  
3/8" Flat Washer

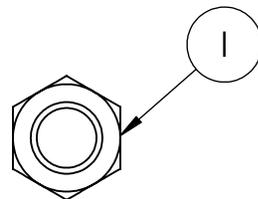


24  
3/8" Hex Nuts

**NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED**

**HARDWARE & TOOLS REQUIRED FOR ASSEMBLY**



**3/7**

# KSH1000/1002 SHELTER INSTRUCTIONS

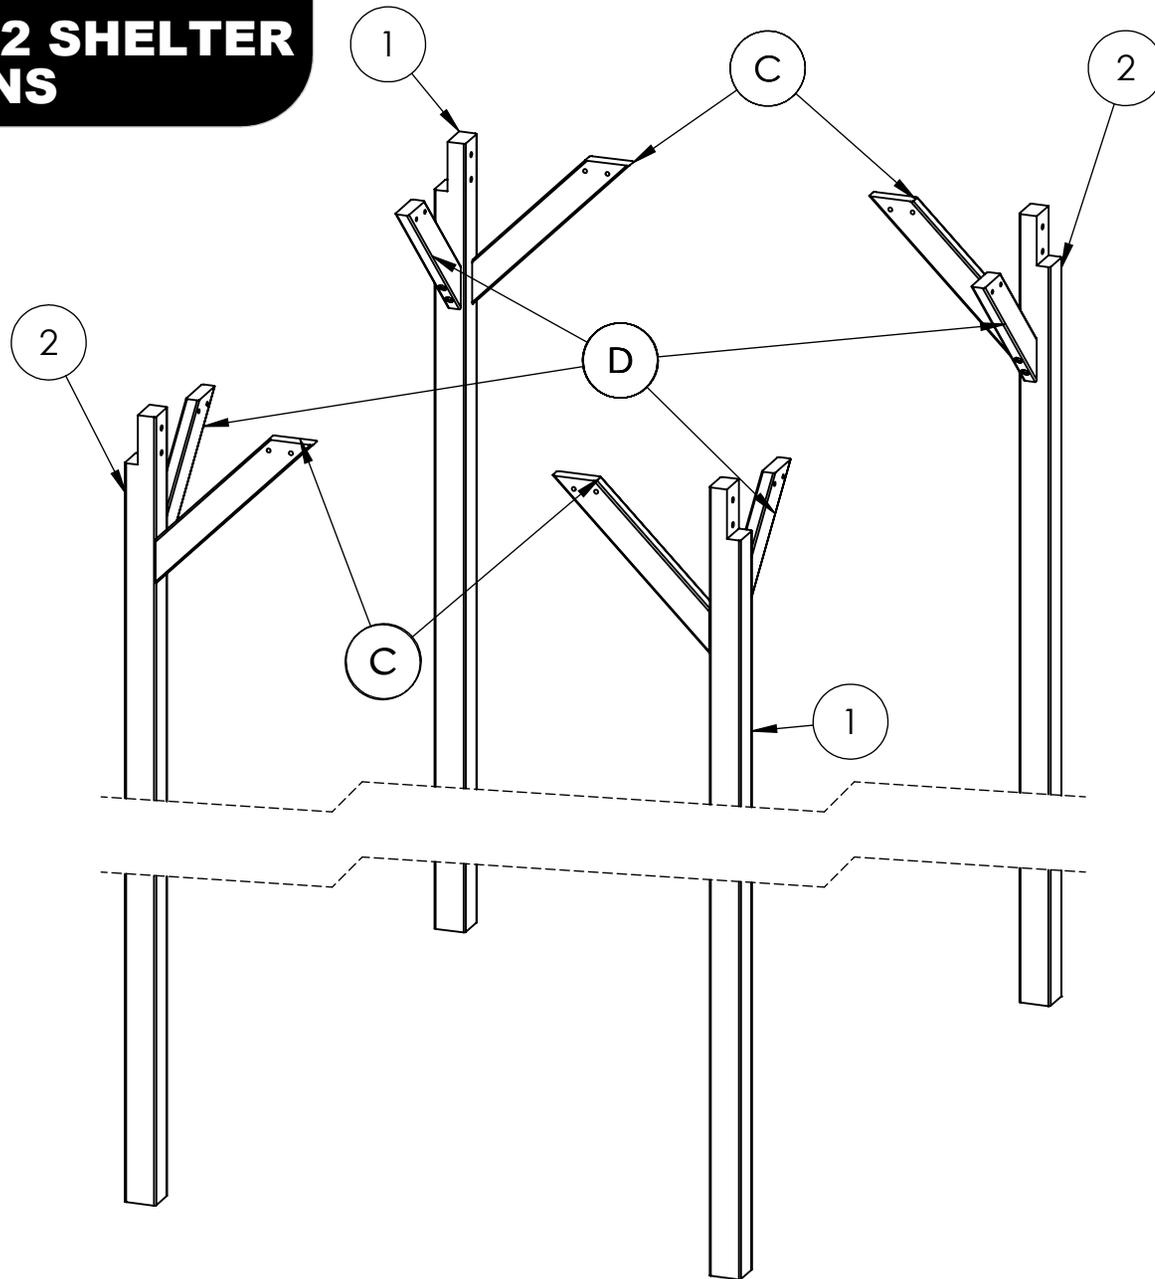

- Posts labeled 1 above will be assembled the same
- Posts labeled 2 above will be assembled the same

# KSH1000/1002 SHELTER INSTRUCTIONS

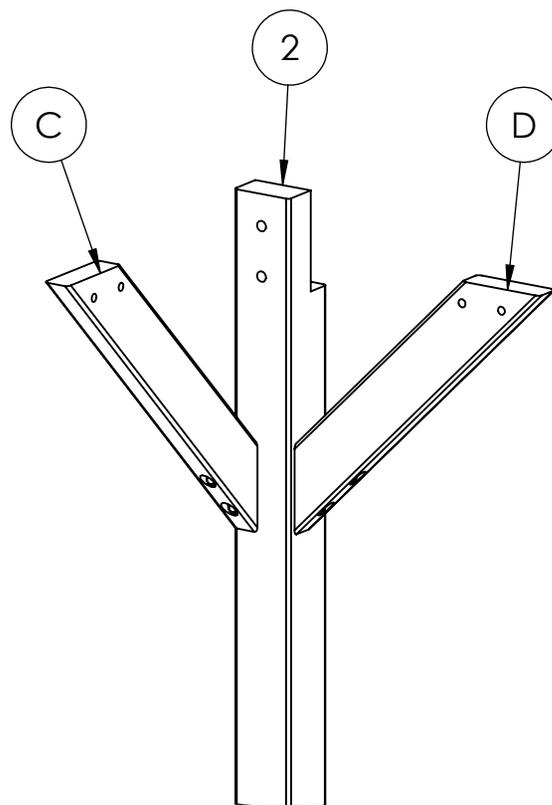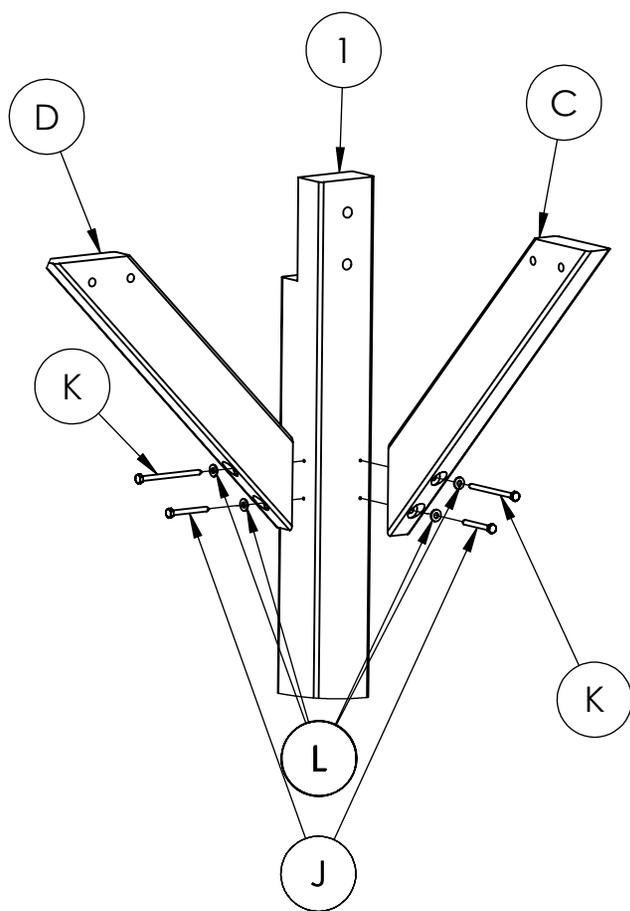

Note: Do NOT attach boards C or D where there are no pilot holes. Follow the pilot holes



# KSH1000/1002 SHELTER INSTRUCTIONS



1. Safely lift roof assembly to attach legs

# KSH1000/1002 SHELTER INSTRUCTIONS

1. Attach post to roof assembly, do not fully tighten
2. Attach gussets, do not fully tighten
3. Once all posts and gussets are attached, fully tighten all bolts

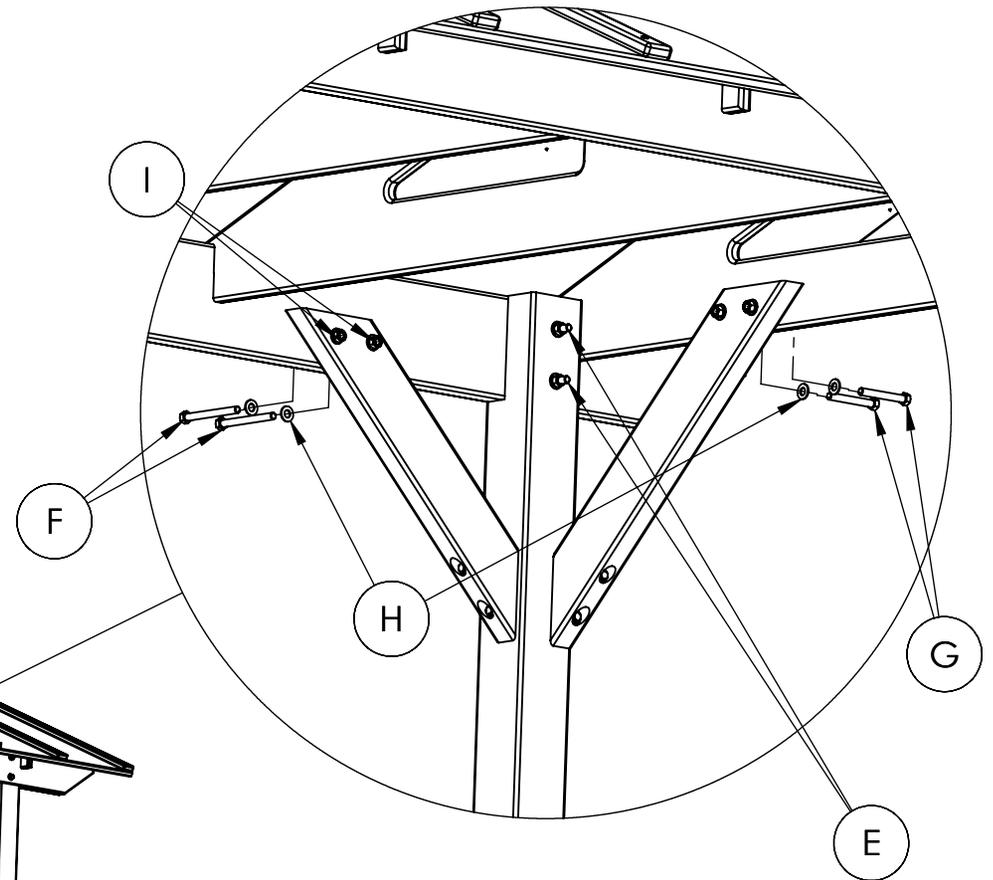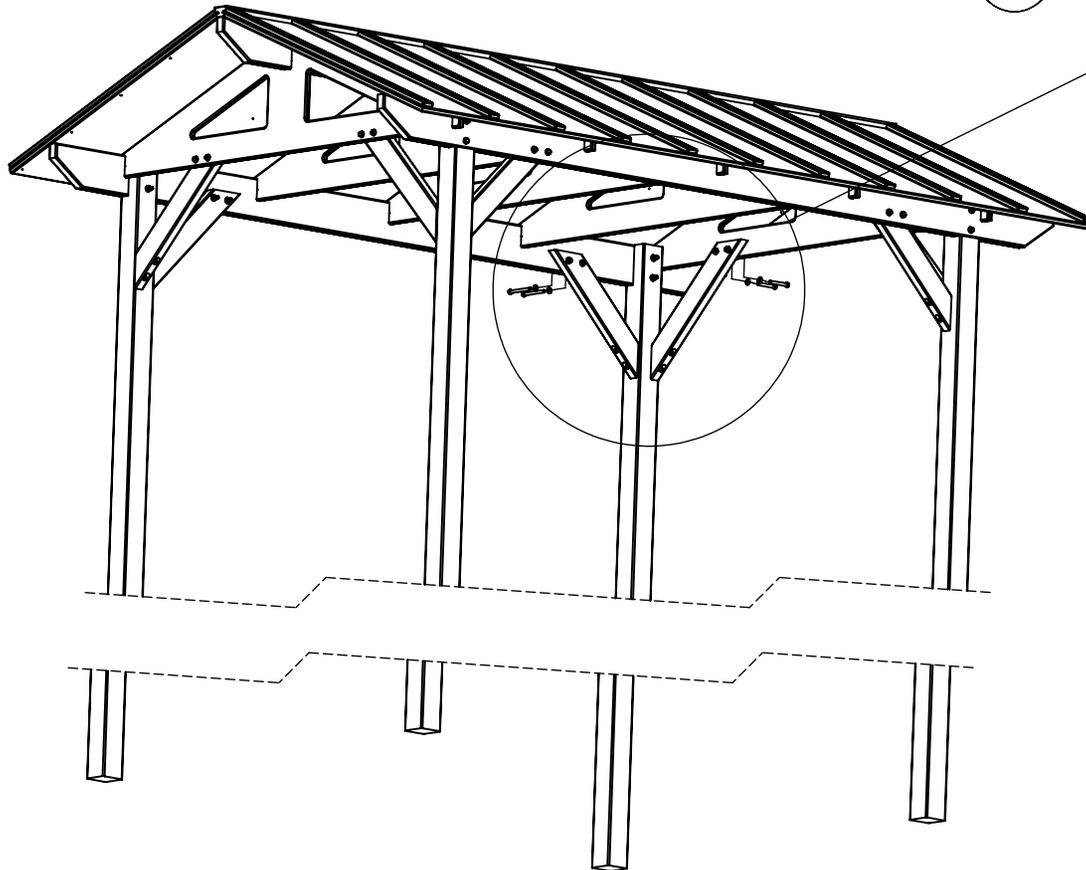

For inground posts: follow local guidelines on depth and use sakrete