

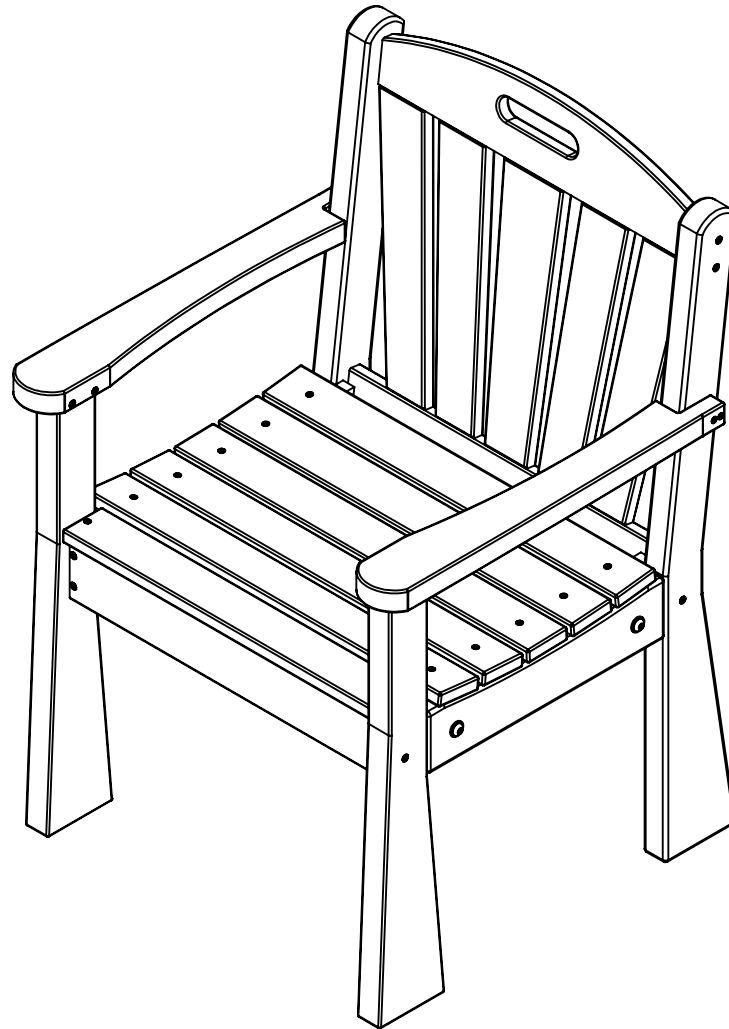
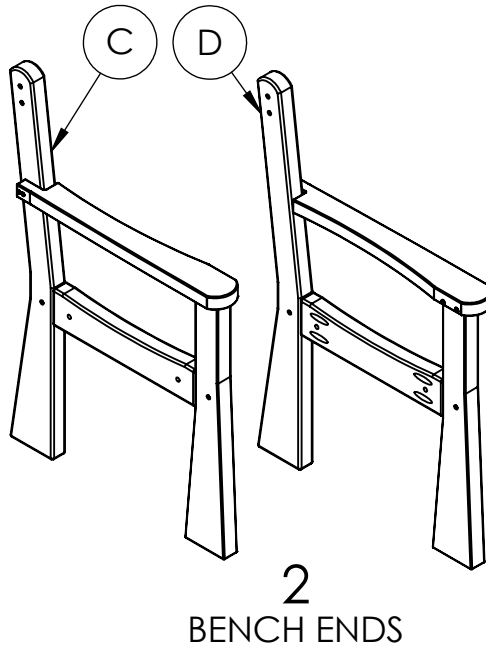


# CHAIR INSTRUCTIONS

CF1110 REV# 2  
9-12-2022

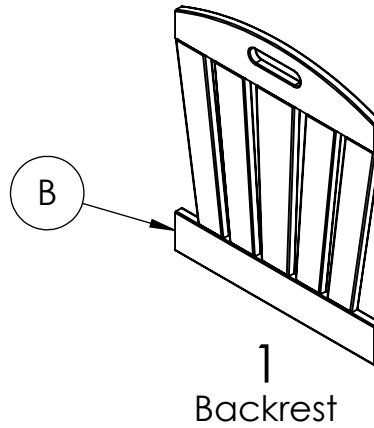

# CHAIR INSTRUCTIONS

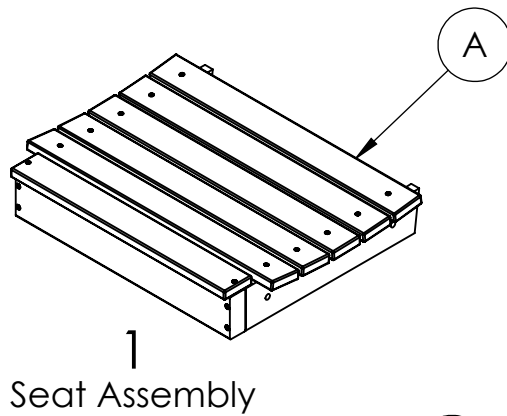


## REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- T30 TORX BIT


**NOTE: IT IS IMPORTANT TO KEEP ALL  
SCREWS LOOSE DURING ASSEMBLY  
UNTIL ENTIRE BENCH IS ASSEMBLED**




3/8" x 3" Button Head Cap Screws

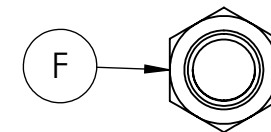

3/8" Hex Nuts

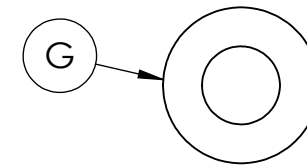

3/8" Flat Washer

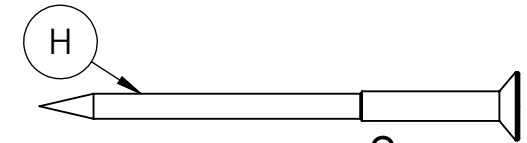


#10 x 2.5 Flat Head Screw

**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/5**


# CHAIR INSTRUCTIONS

## STEP 1

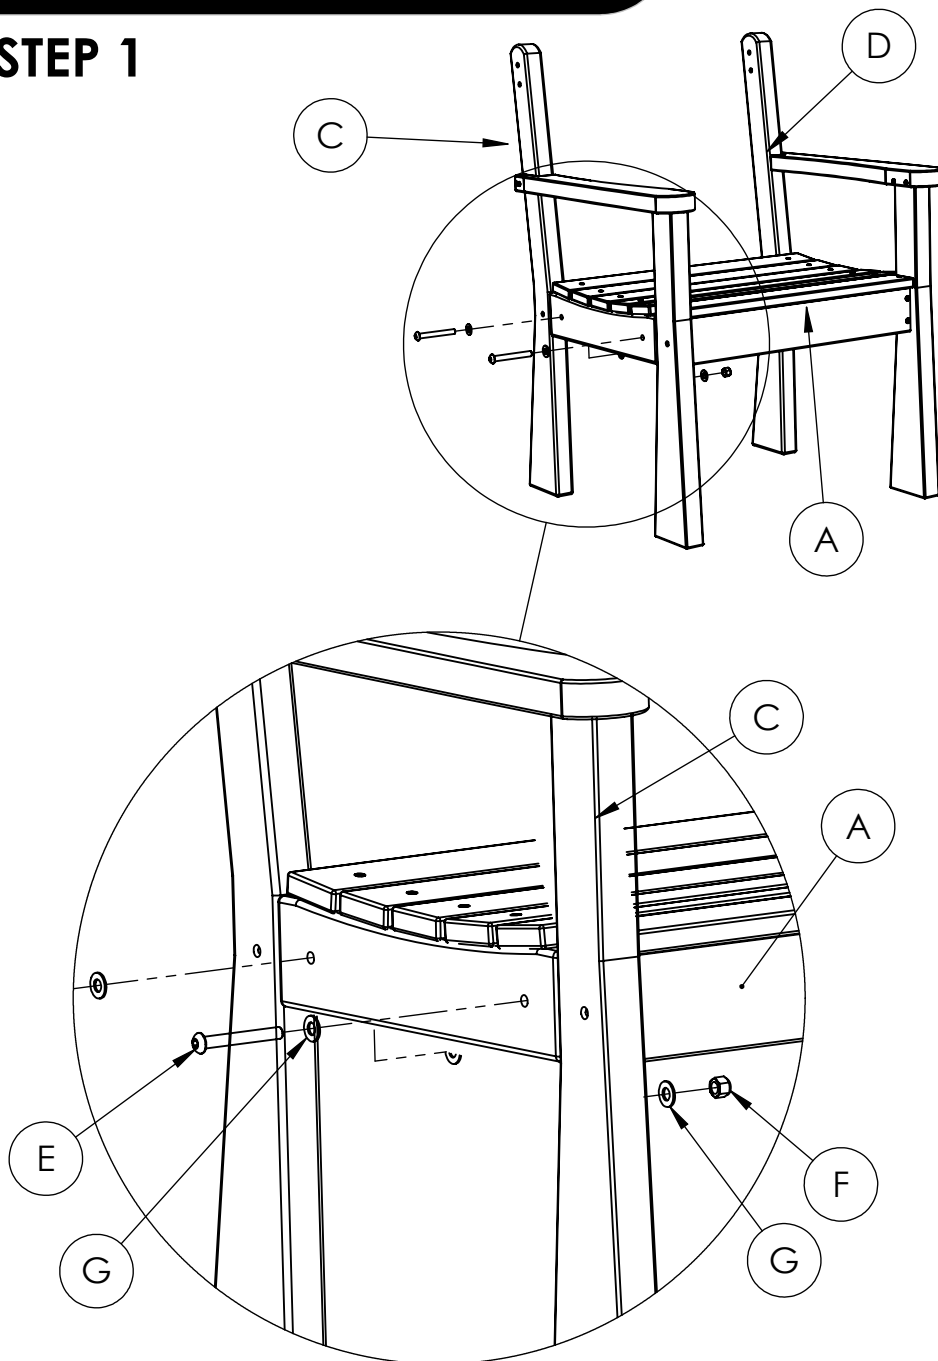

## STEP 2

PRE-MARKED  
HOLE LOCATIONS

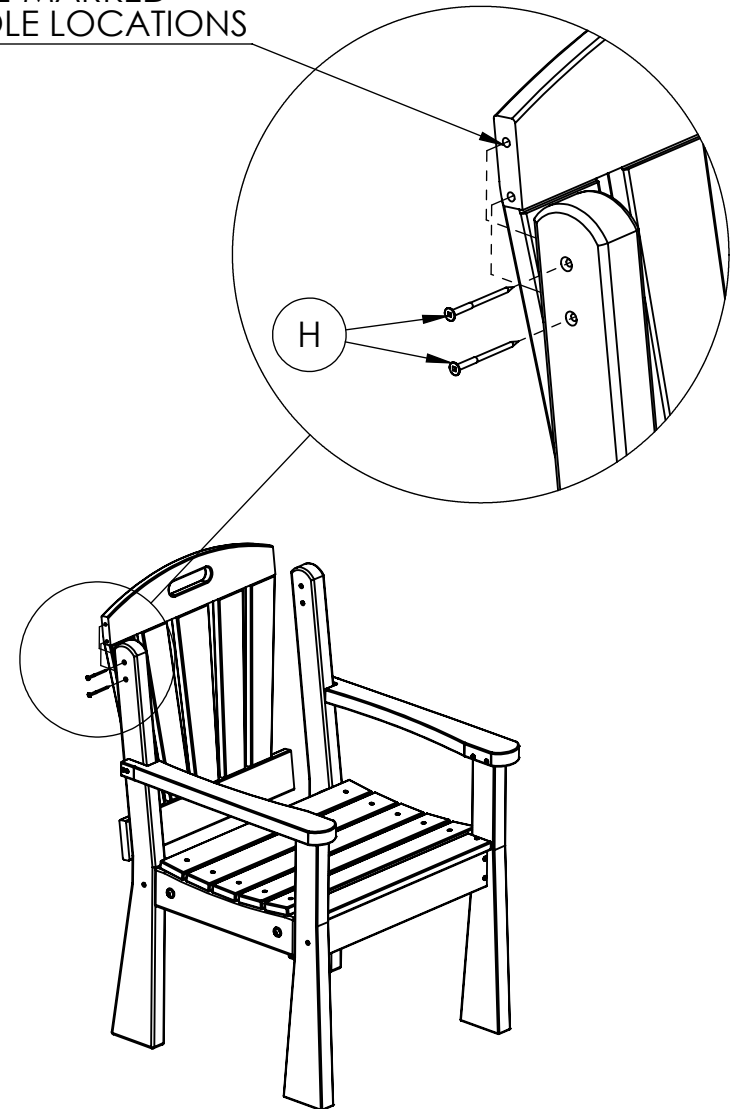


**ASSEMBLY**

**3/5**





# CHAIR INSTRUCTIONS

## STEP 3

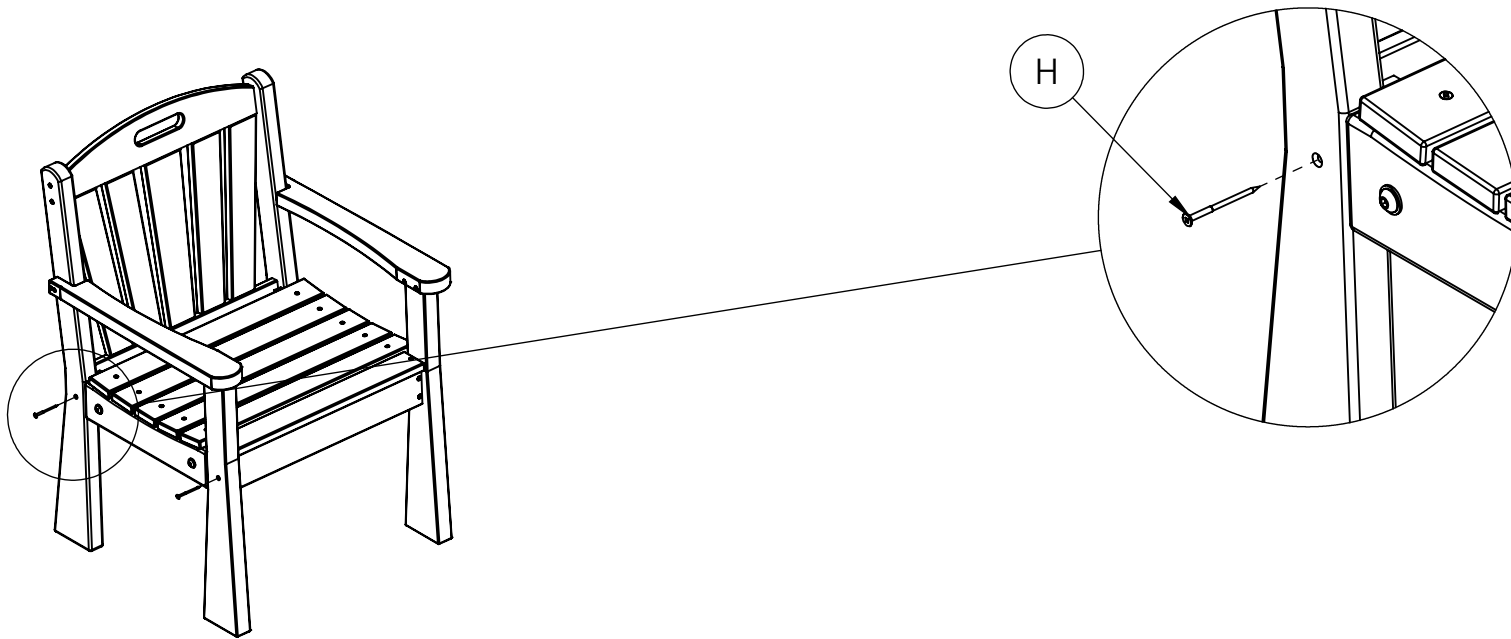

# CHAIR SPECIFICATIONS

CF1110 REV# 2  
9-12-2022

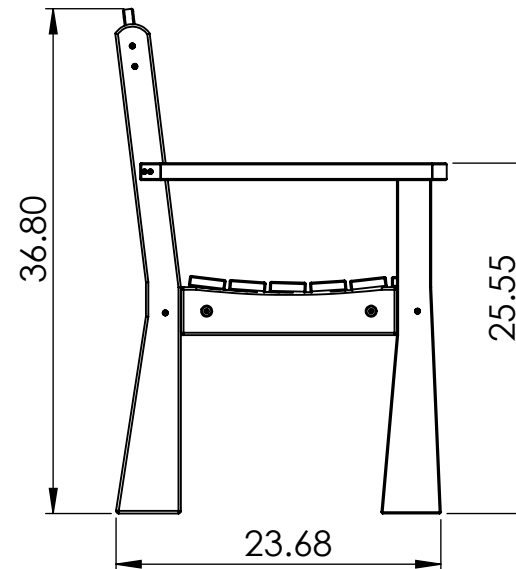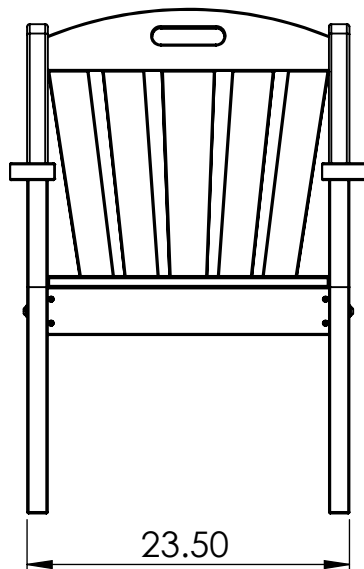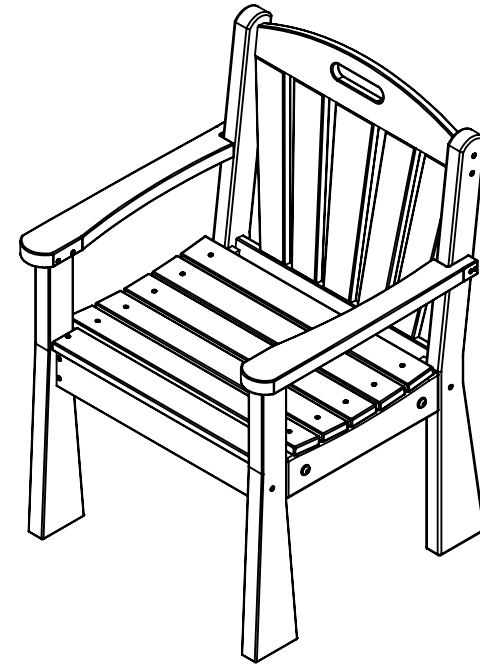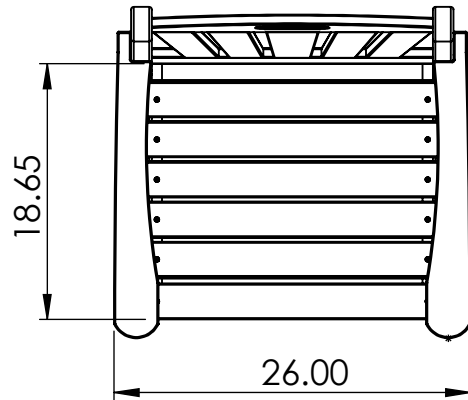

**CONSTRUCTION MATERIALS:**  
Recycled Plastic  
**HARDWARE:**  
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES