


CF1025

REV# 3 4-5-24

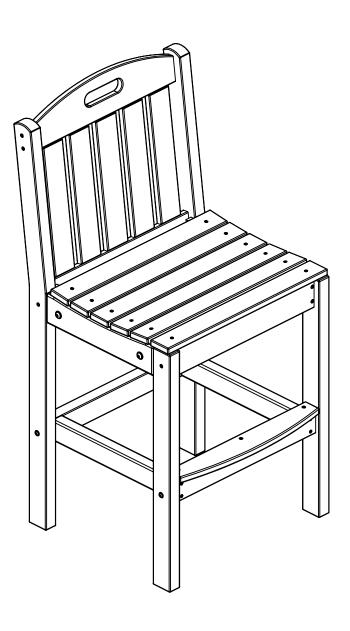

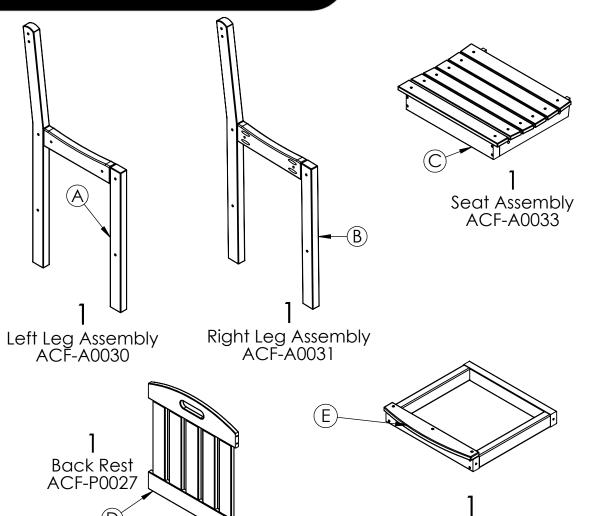

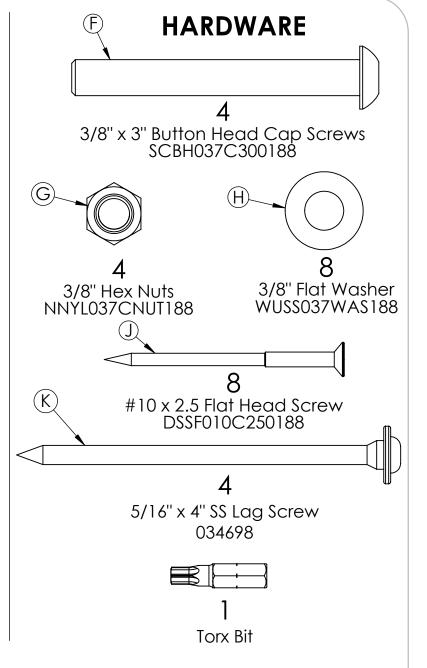

#### REQUIRED TOOLS (NOT INCLUDED)


- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- #2 SQUARE DRIVE


NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED

Leg Apron Assembly ACF-A0032

HARDWARE & TOOLS REQUIRED FOR ASSEMBLY


2/6

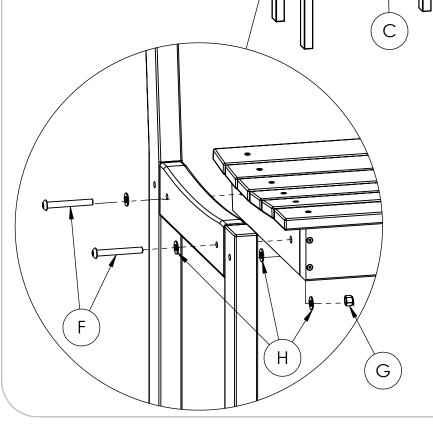

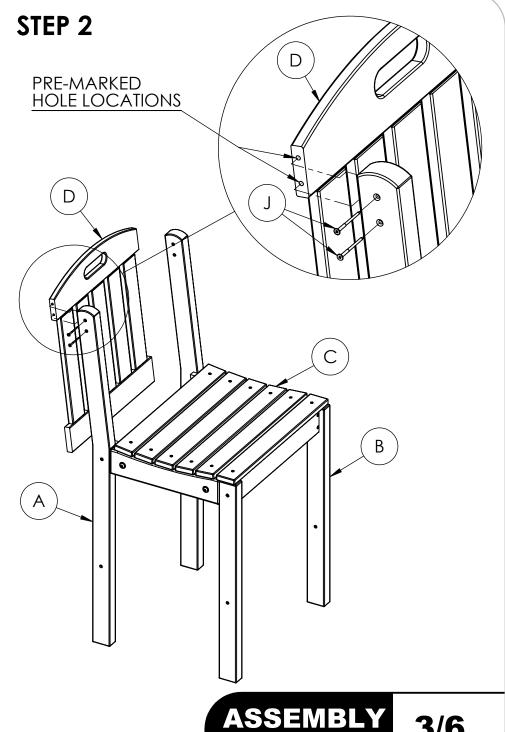


3/6

#### STEP 3

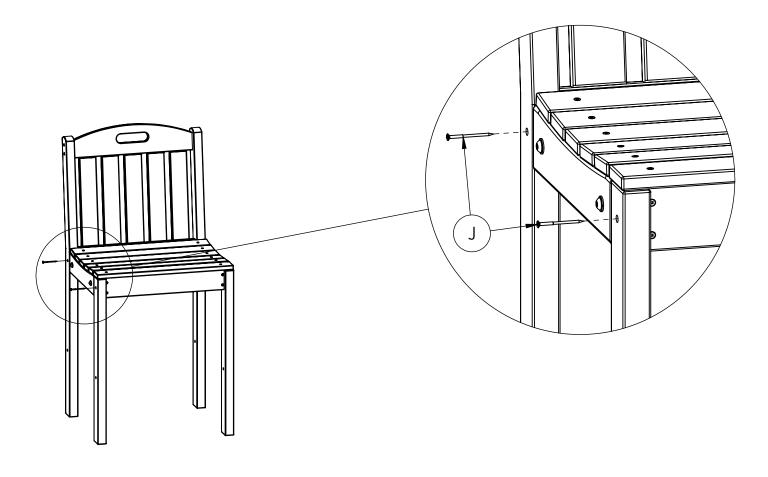



#### STEP 4

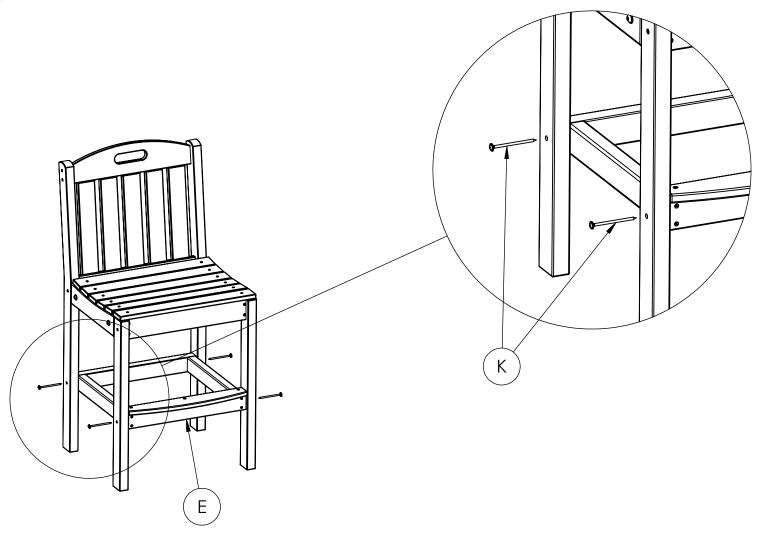


### BAR HEIGHT SIDE CHAIR SPECIFICATIONS

CF1025 REV# 3 4/5/24

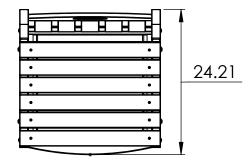

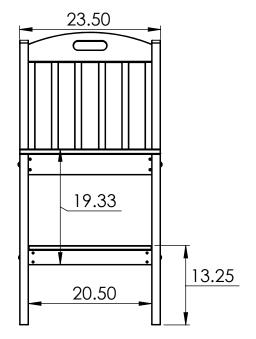

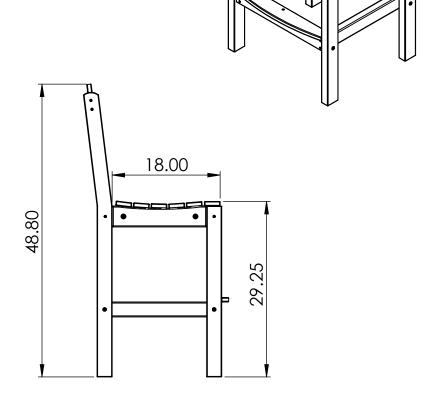

**CONSTRUCTION MATERIALS:** 

Recycled Plastic HARDWARE: Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES