



BAR HEIGHT SIDE CHAIR INSTRUCTIONS

CF1125


REV# 3
4-26-2024

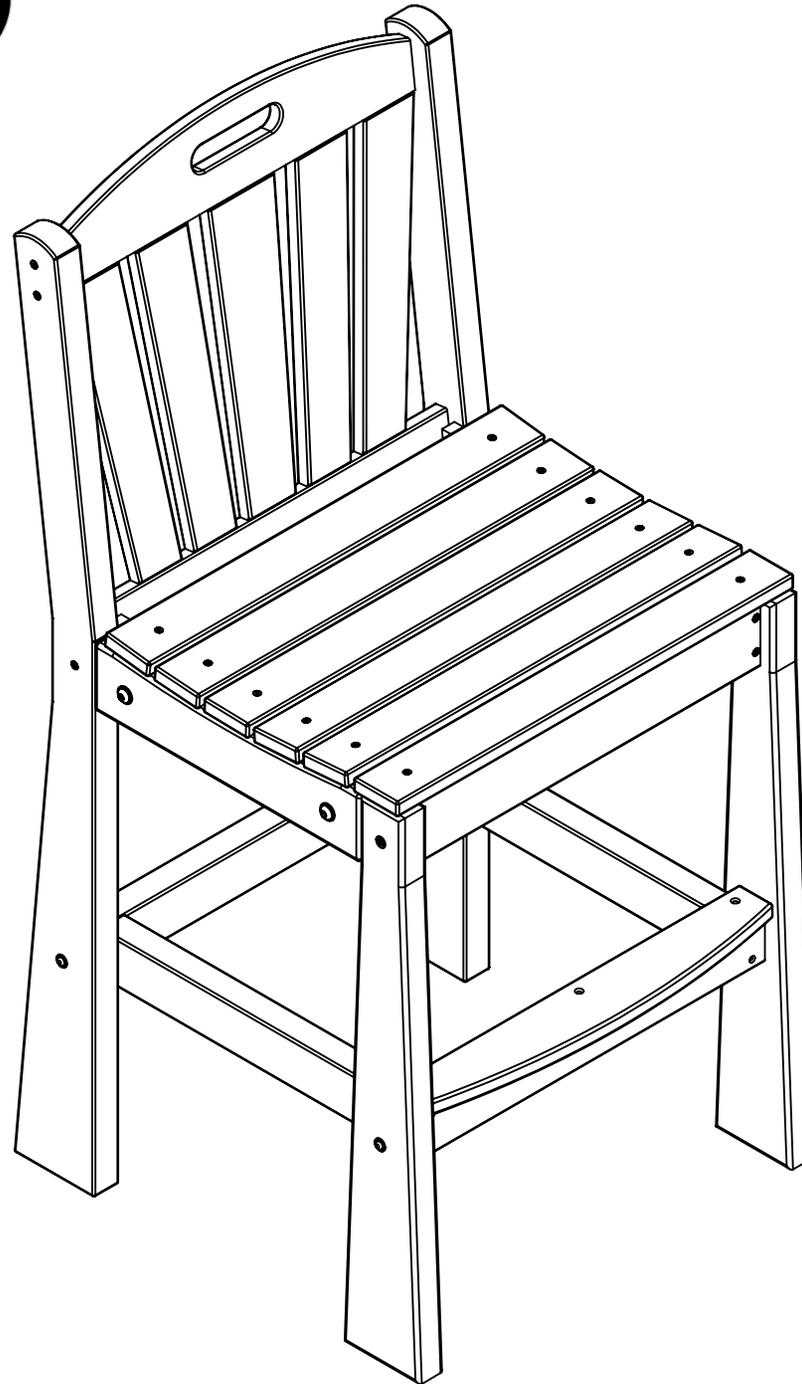


BAR HEIGHT SIDE CHAIR INSTRUCTIONS

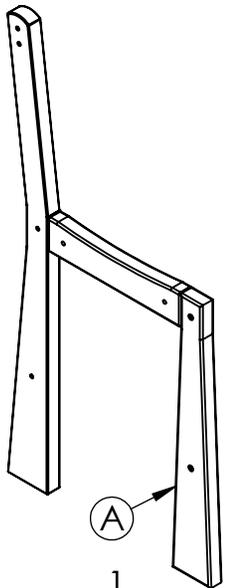

1
Left Leg Assembly
ACF-A0034

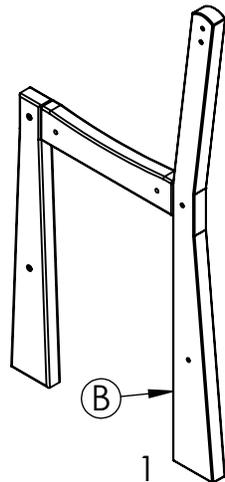


1
Right Leg Assembly
ACF-A0035

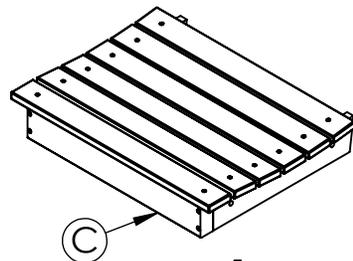

1
Seat Assembly
ACF-A0033



1
Back Rest
ACF-P0026

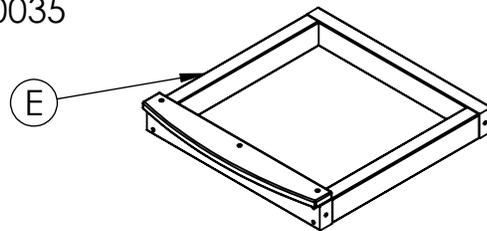


1
Leg Apron Assembly
ACF-A0032

REQUIRED TOOLS (NOT INCLUDED)


- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- #2 SQUARE DRIVE

NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED


HARDWARE

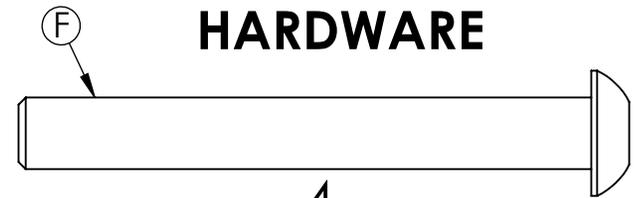


4
3/8" x 3" Button Head Cap Screws
SCBH037C300188

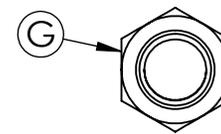

4
3/8" Hex Nuts
NNYL037CNUT188

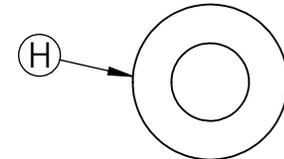

8
3/8" Flat Washer
WUSS037WAS188

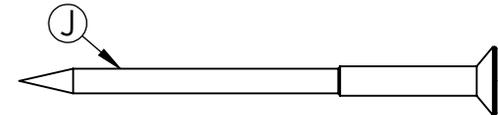

8
#10 x 2.5 Flat Head Screw
DSSF010C250188




4
5/16" x 4" SS Lag Screw
034698

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/6


BAR HEIGHT SIDE CHAIR INSTRUCTIONS

STEP 1

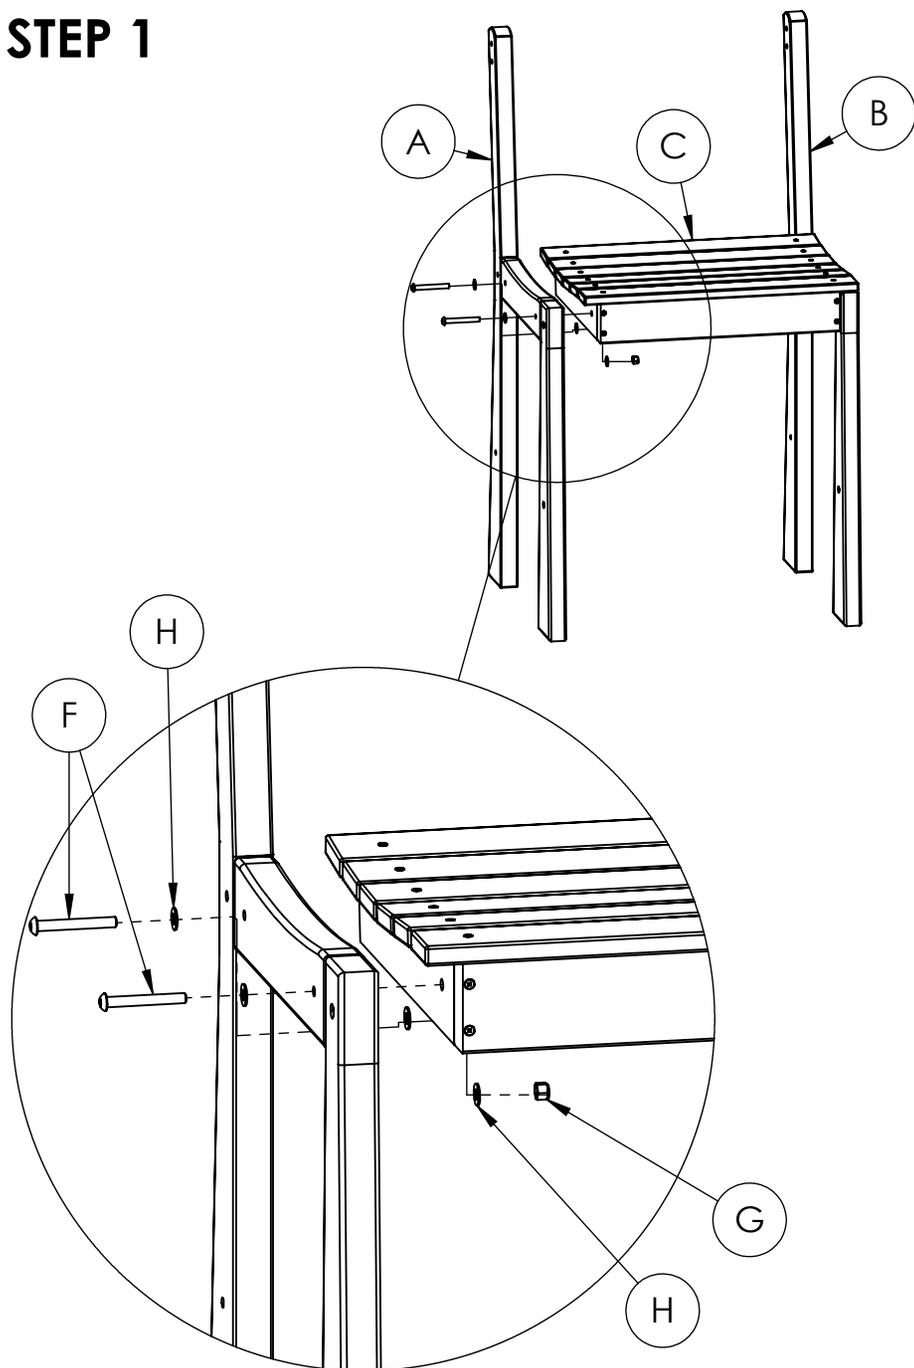

STEP 2

PRE-MARKED HOLE LOCATIONS

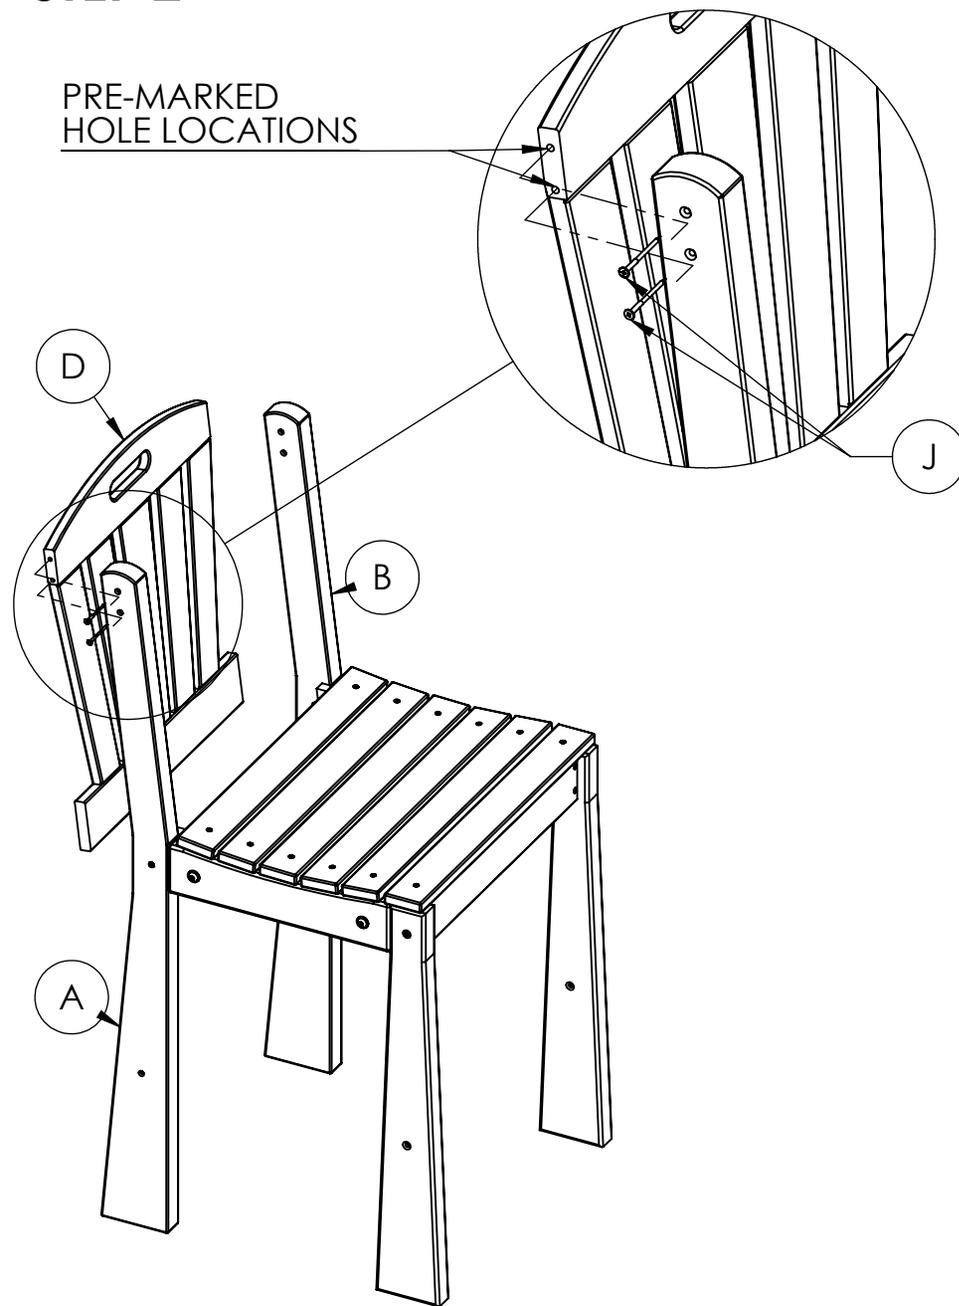


ASSEMBLY

3/6



BAR HEIGHT SIDE CHAIR INSTRUCTIONS

STEP 3

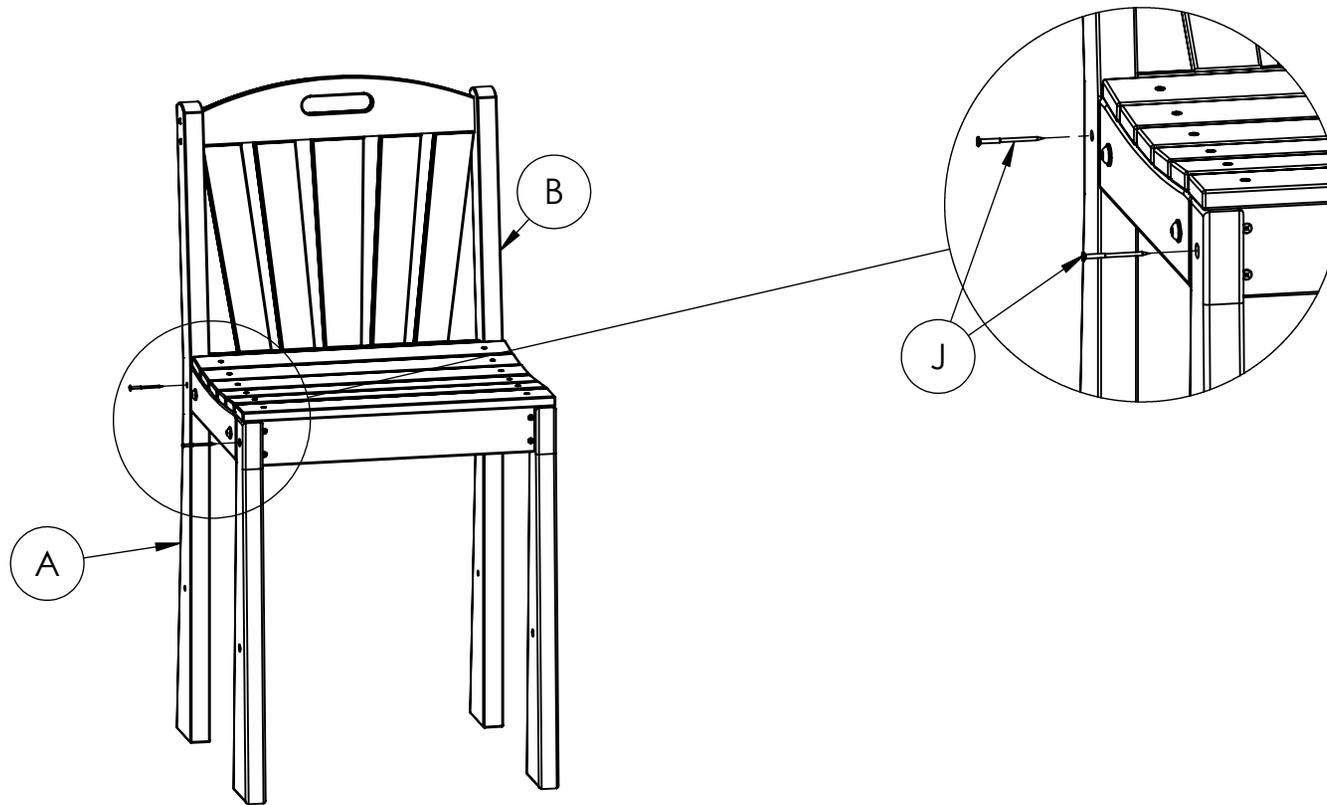

BAR HEIGHT SIDE CHAIR INSTRUCTIONS





STEP 4

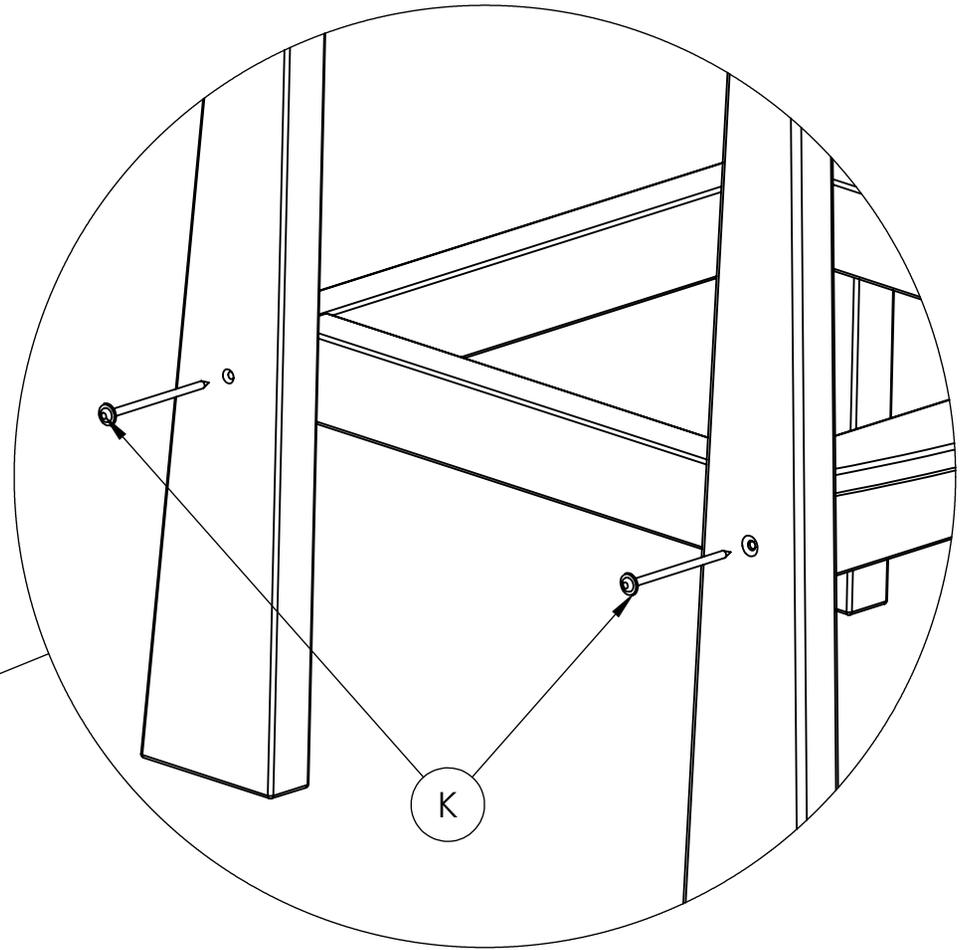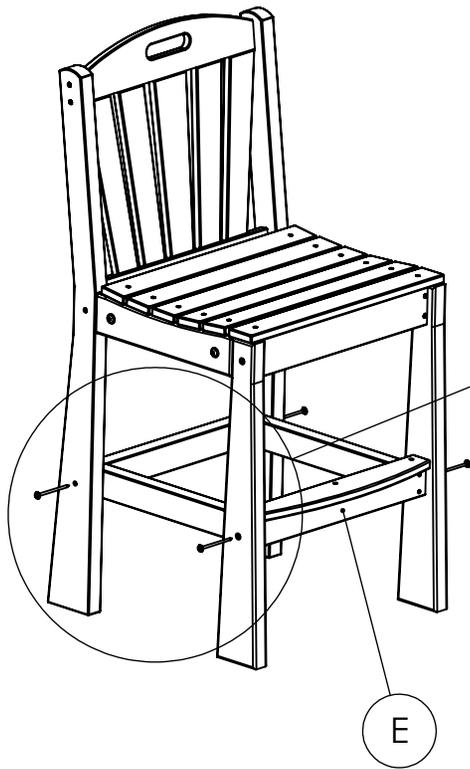

BAR HEIGHT SIDE CHAIR SPECIFICATIONS

REV# 3
4-26-2024

CF1125

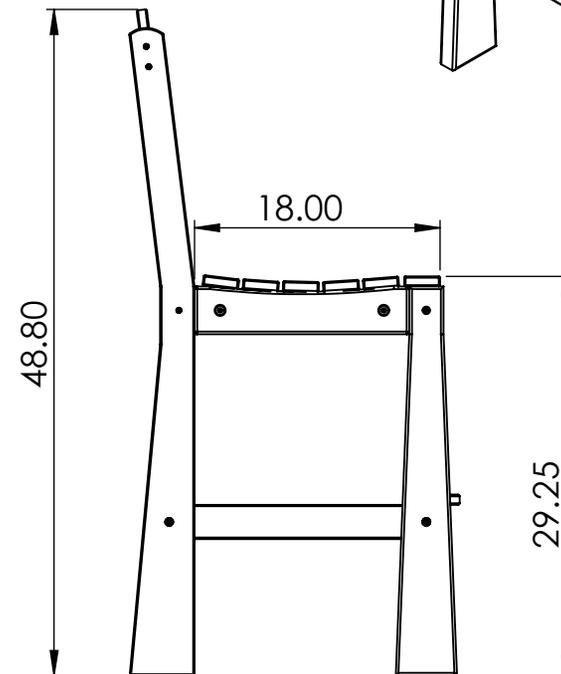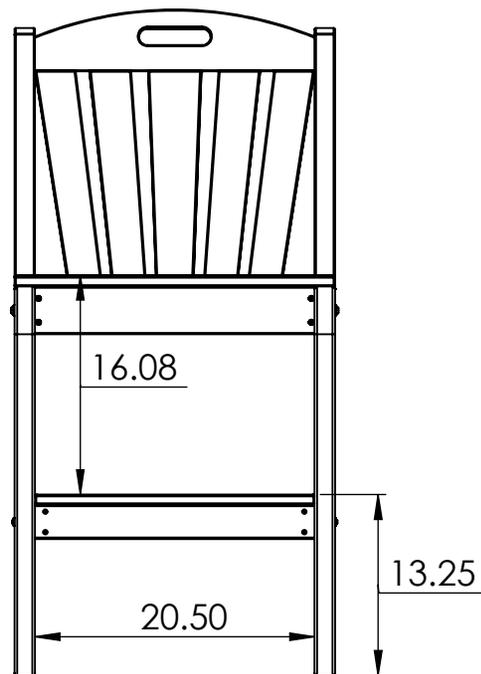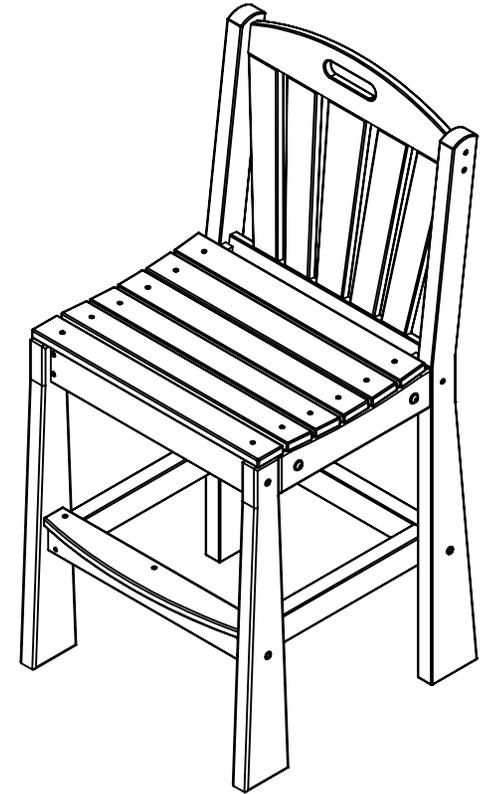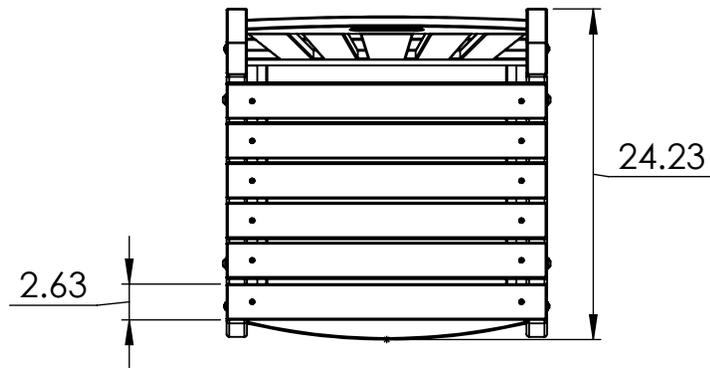

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES