







BAR HEIGHT SIDE CHAIR INSTRUCTIONS

CF1225


REV# 3
4-26-2024

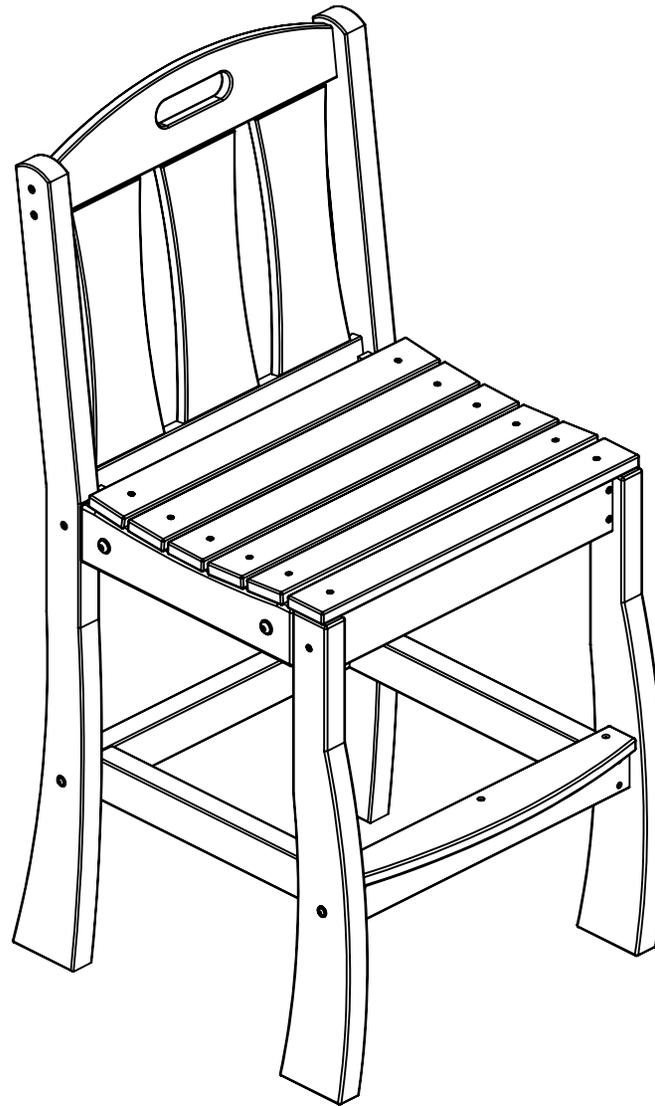


BAR HEIGHT SIDE CHAIR INSTRUCTIONS

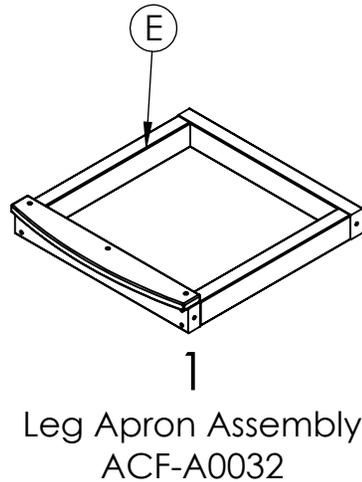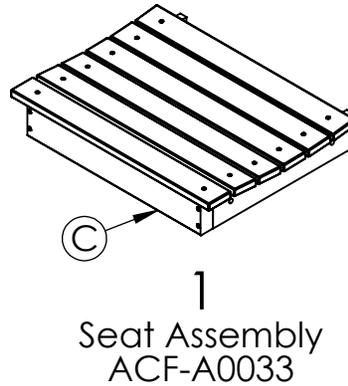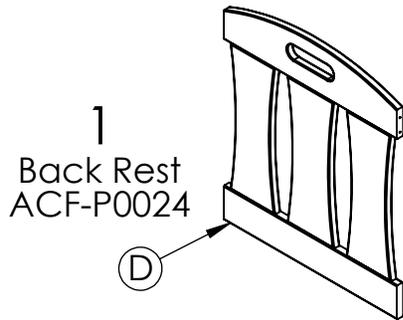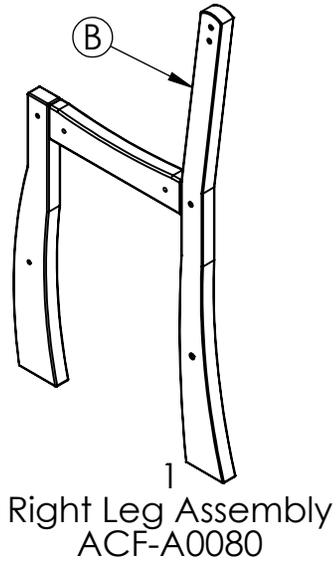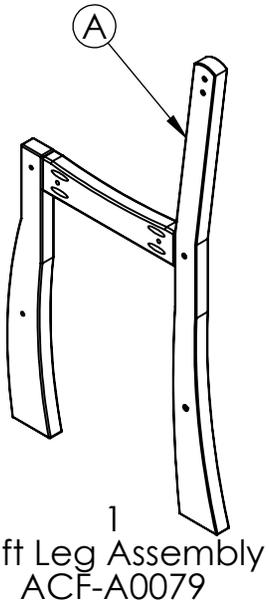


HARDWARE

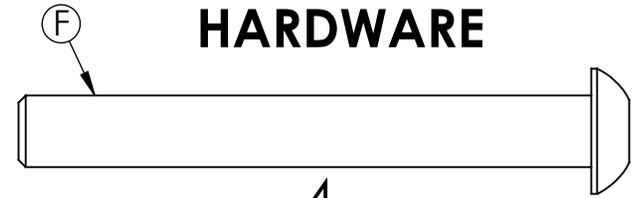


3/8" x 3" Button Head Cap Screws
SCBH037C300188

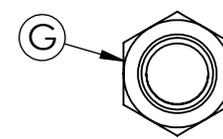

3/8" Hex Nuts
NNYL037CNUT188

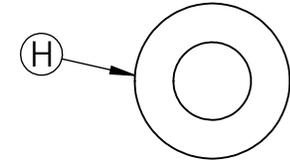

3/8" Flat Washer
WUSS037WAS188



#10 x 2.5 Flat Head Screw
DSSF010C250188



5/16" x 4" SS Lag Screw
034698

REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- #2 SQUARE DRIVE


NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/6


BAR HEIGHT SIDE CHAIR INSTRUCTIONS

STEP 1

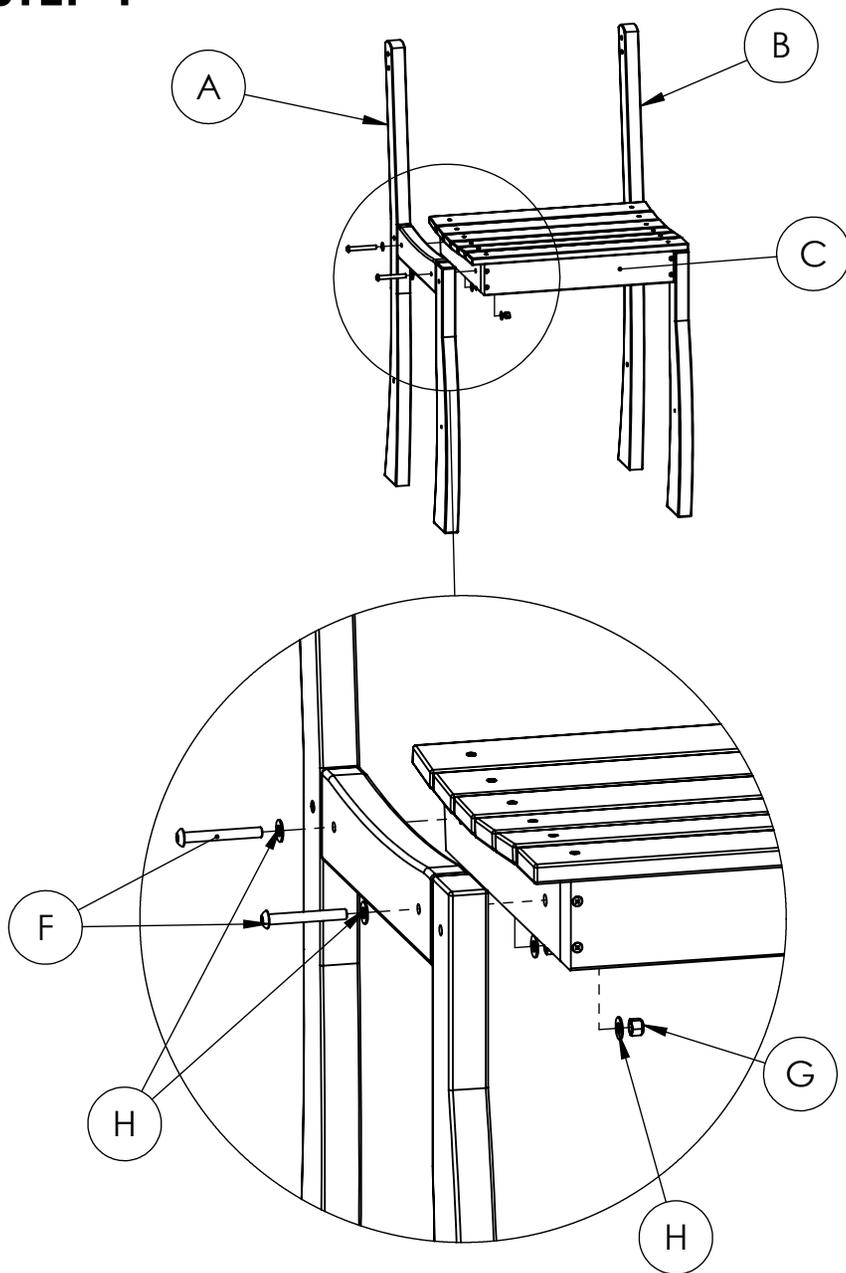

STEP 2

PRE-MARKED HOLE LOCATIONS


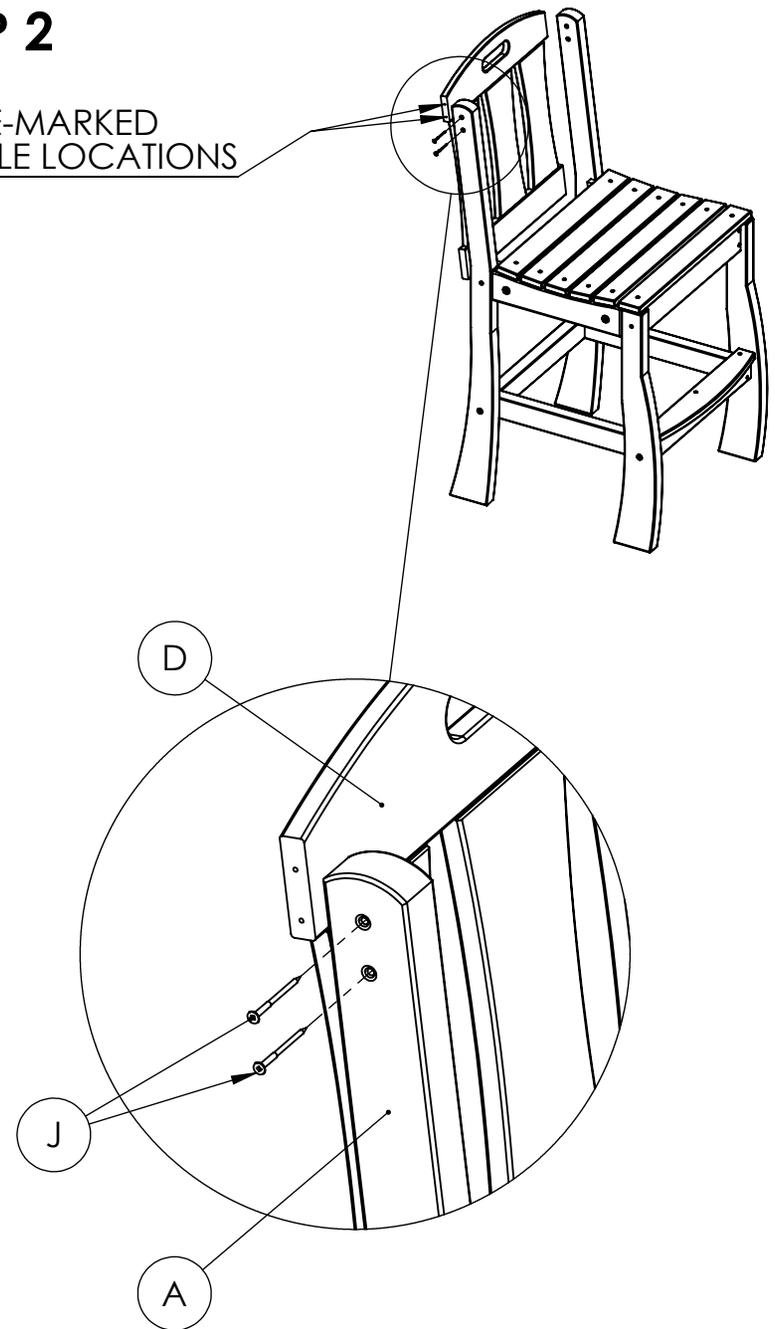


ASSEMBLY



3/6

BAR HEIGHT SIDE CHAIR INSTRUCTIONS

STEP 3

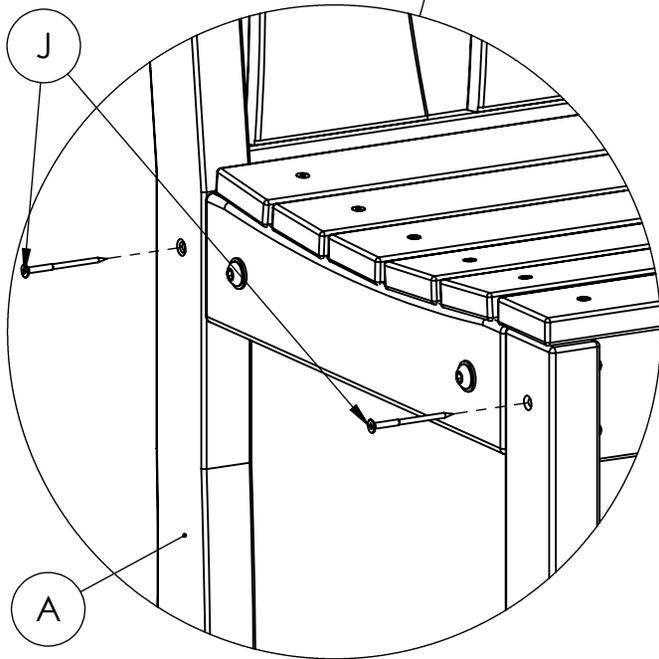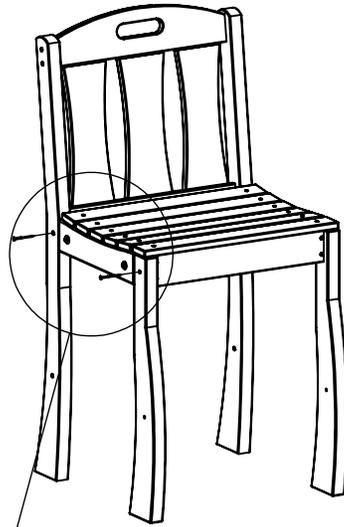





STEP 4

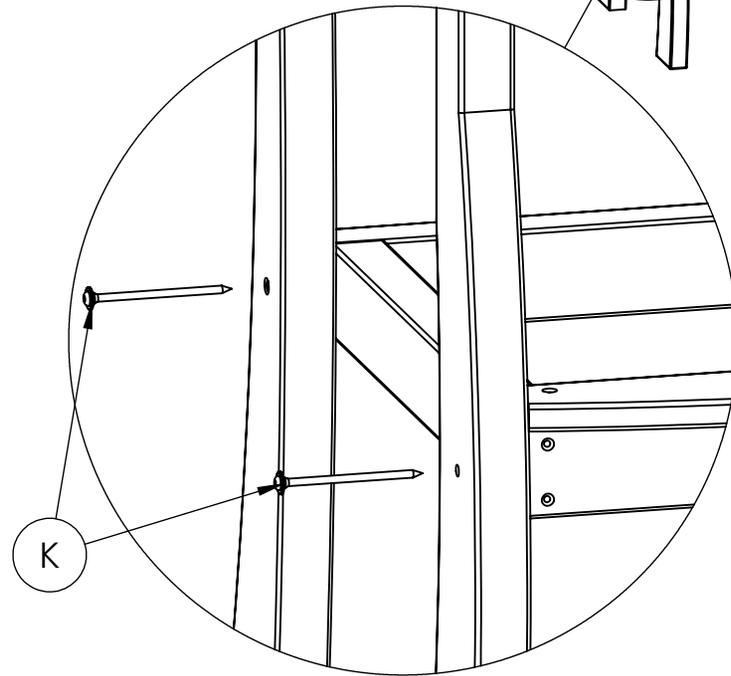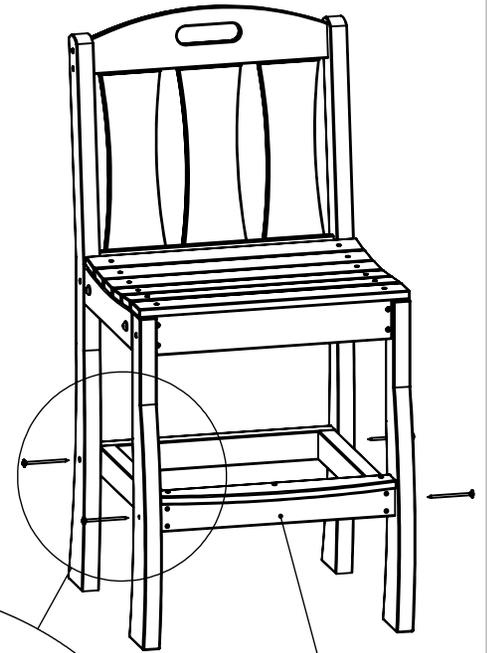

BAR HEIGHT SIDE CHAIR SPECIFICATIONS

REV# 3
4-26-2024

CF1225

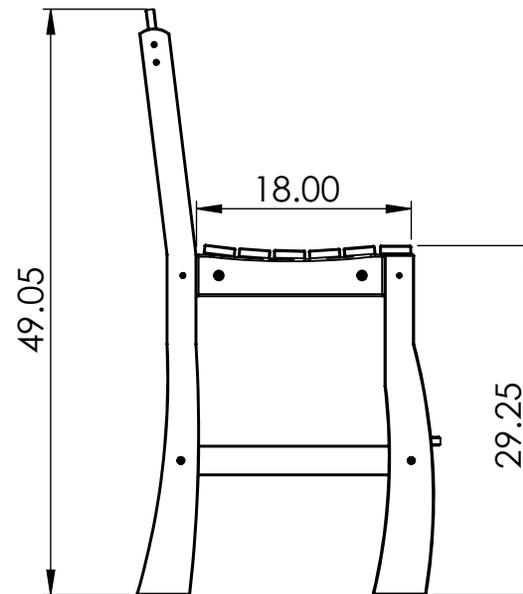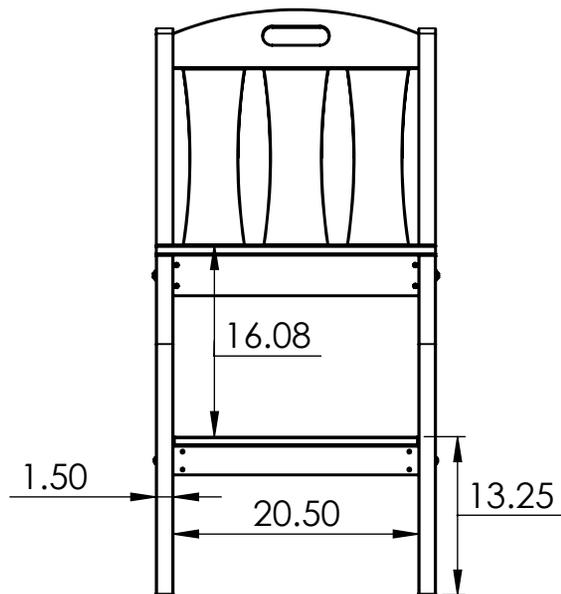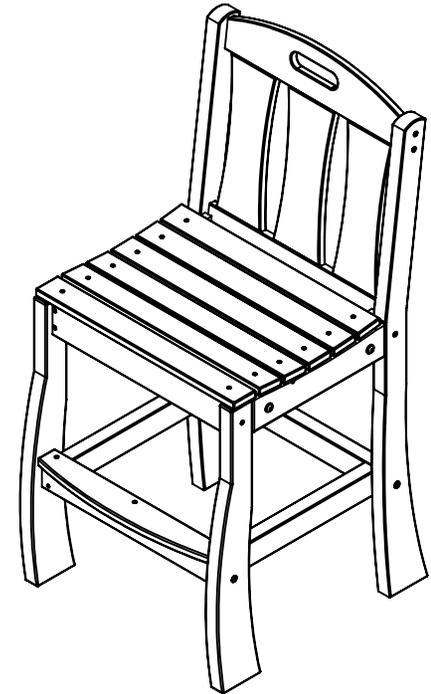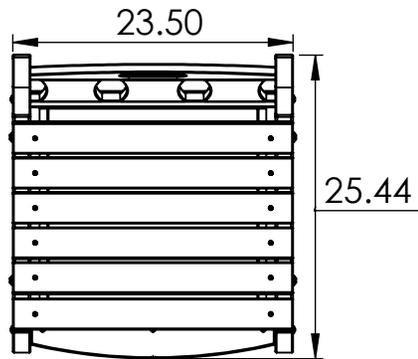

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES