


BENCH ANCHOR KIT INSTRUCTIONS WOOD OR NON-CONCRETE

Included Components

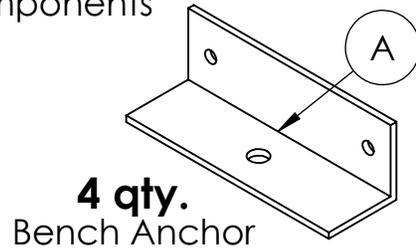


4 qty.
Bench Anchor



4 qty.
#12 x 2" Screw



8 qty.
#8 x 1.625" Screw

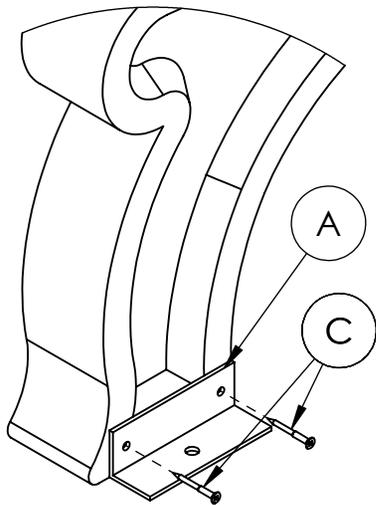



Step A

Position bench with anchor (A) in place. Mark position of anchors on bench leg and mounting surface. Screw 1-5/8" screws (B) into bench leg.

REQUIRED TOOLS NOT INCLUDED

- Power Drill
- #2 Square bit

KBC9403

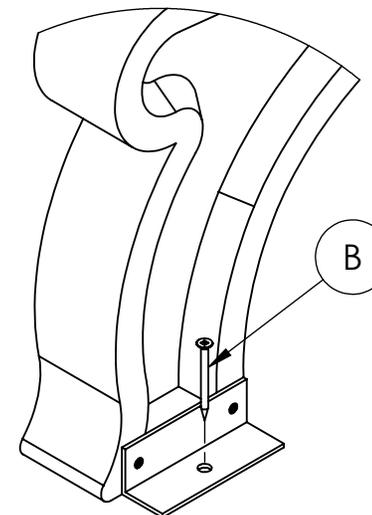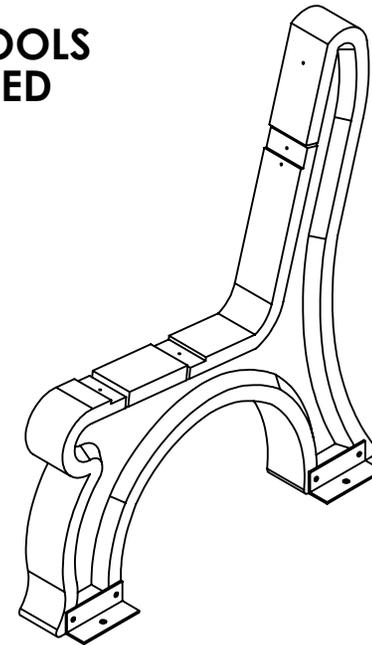


Step B

Screw 2" screws (C) into mounting surface.

BENCH ANCHOR KIT INSTRUCTIONS CONCRETE

Included Components

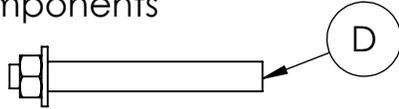


4 qty.
Sleeve Anchors
(Concrete Installation)

REQUIRED TOOLS NOT INCLUDED


- HAMMER DRILL
- 5/16" MASONRY DRILL BIT
- HAMMER
- 7/16" SOCKET OR WRENCH

KBC9403

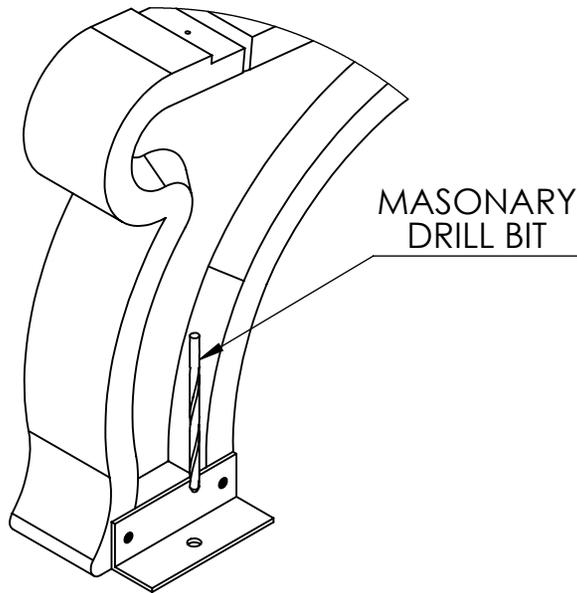

Step C

Using a hammer drill and 5/16" masonry bit, drill a hole for each bench anchor in the concrete.

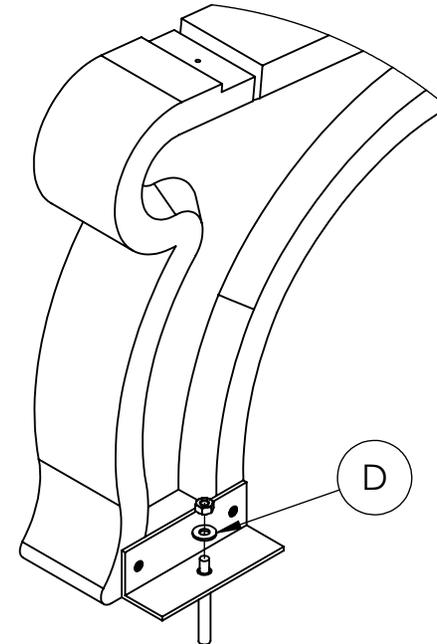

Step D

Insert a sleeve anchor into the hole. You may need to tap the anchor down with a hammer to seat the bolt. Tighten the nut to engage the anchor mechanism. If desired, the exposed threads can be cut off when tight.