

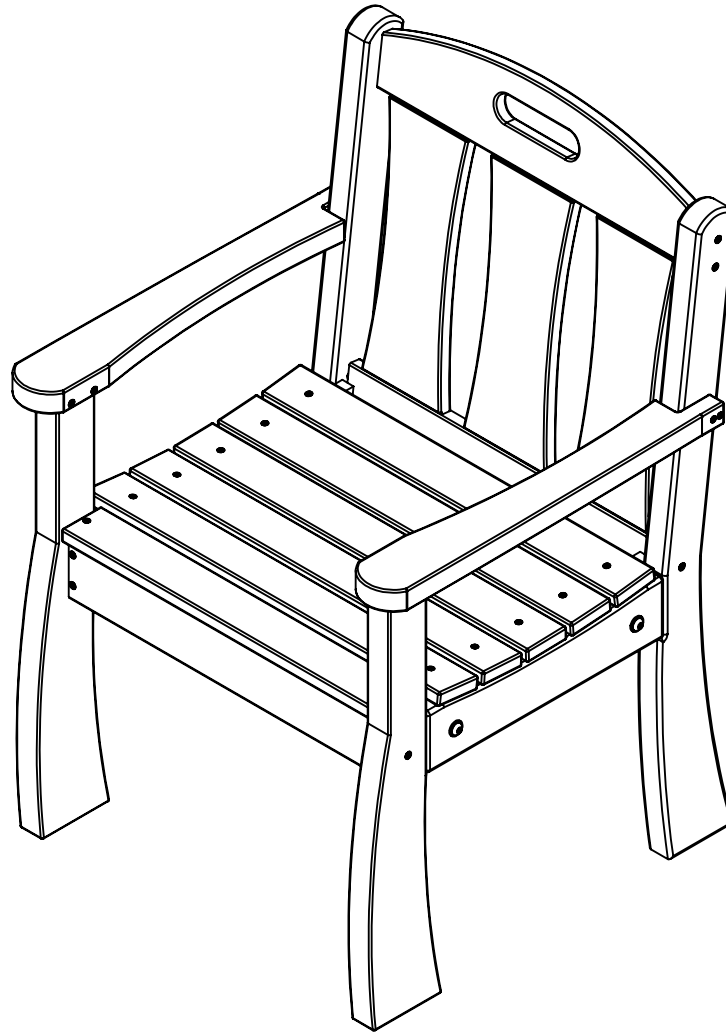
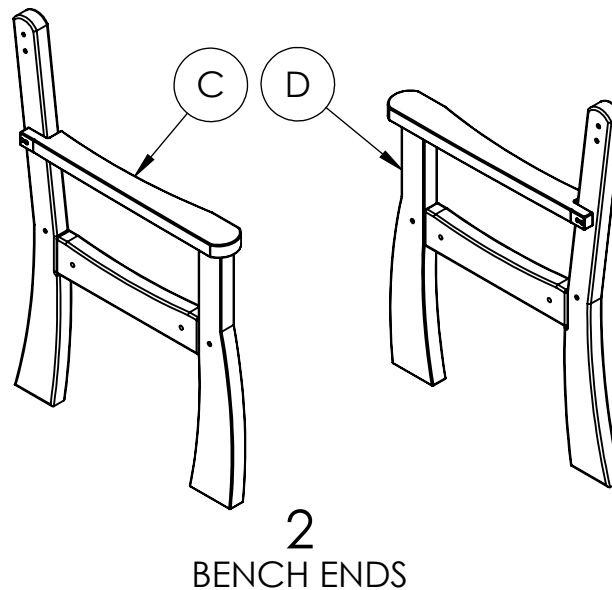


CHAIR INSTRUCTIONS

CF1210 REV# 2
9-12-2022

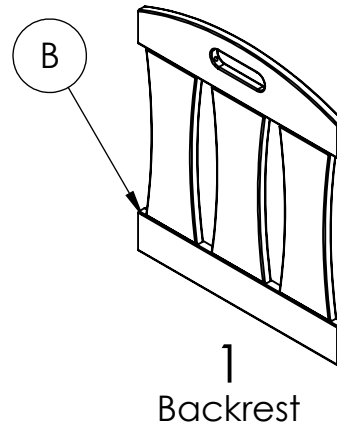

CHAIR INSTRUCTIONS

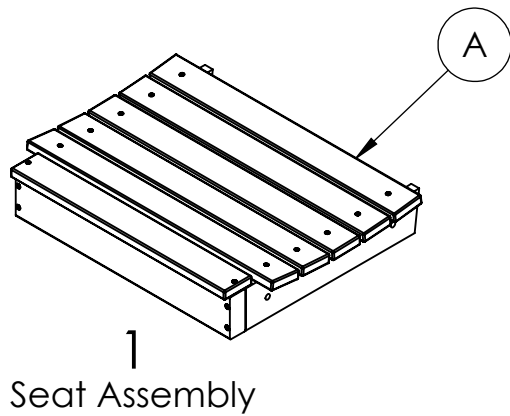

REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- 7/32 ALLEN WRENCH
- 9/16 WRENCH
- T30 TORX BIT


**NOTE: IT IS IMPORTANT TO KEEP ALL
SCREWS LOOSE DURING ASSEMBLY
UNTIL ENTIRE BENCH IS ASSEMBLED**



HARDWARE


4

3/8" x 3" Button Head Cap Screws

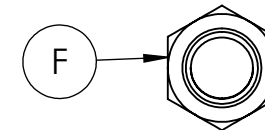


4

3/8" Hex Nuts

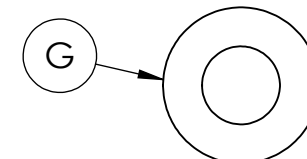

8

3/8" Flat Washer

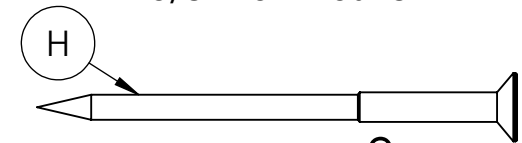

8


#10 x 2.5 Flat Head Screw

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

2/5


CHAIR INSTRUCTIONS

STEP 1

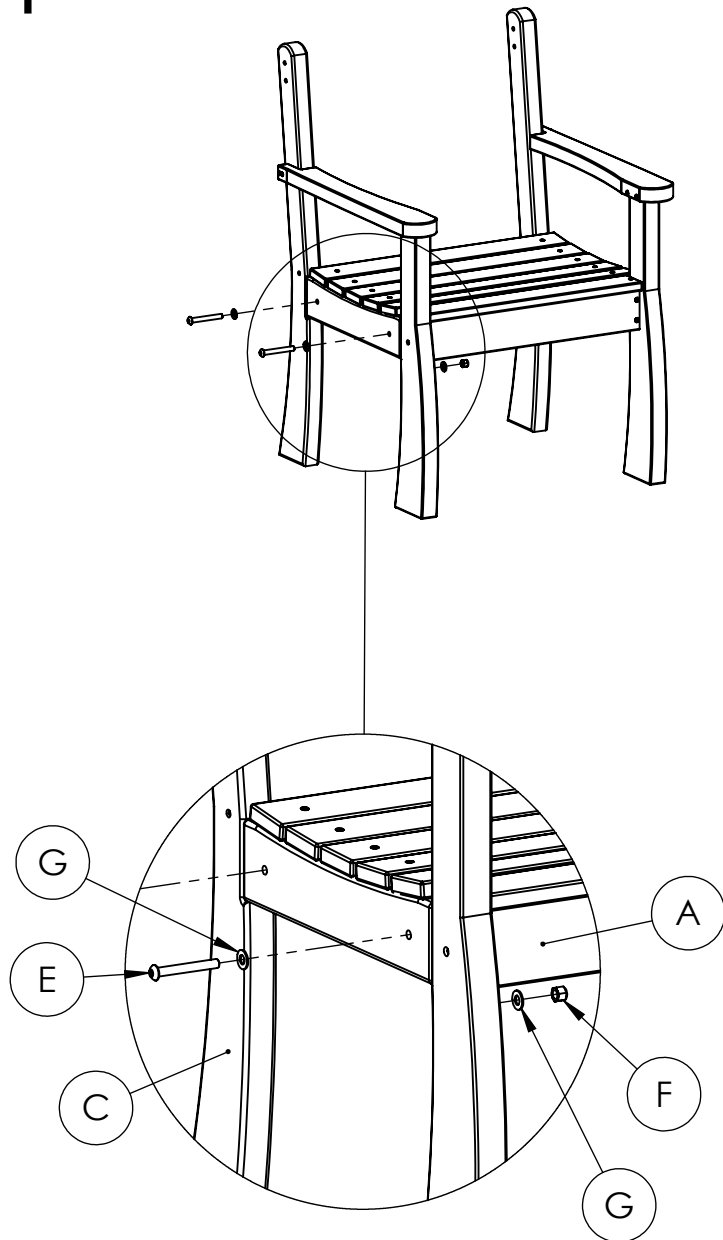

STEP 2

PRE-MARKED
HOLE LOCATIONS

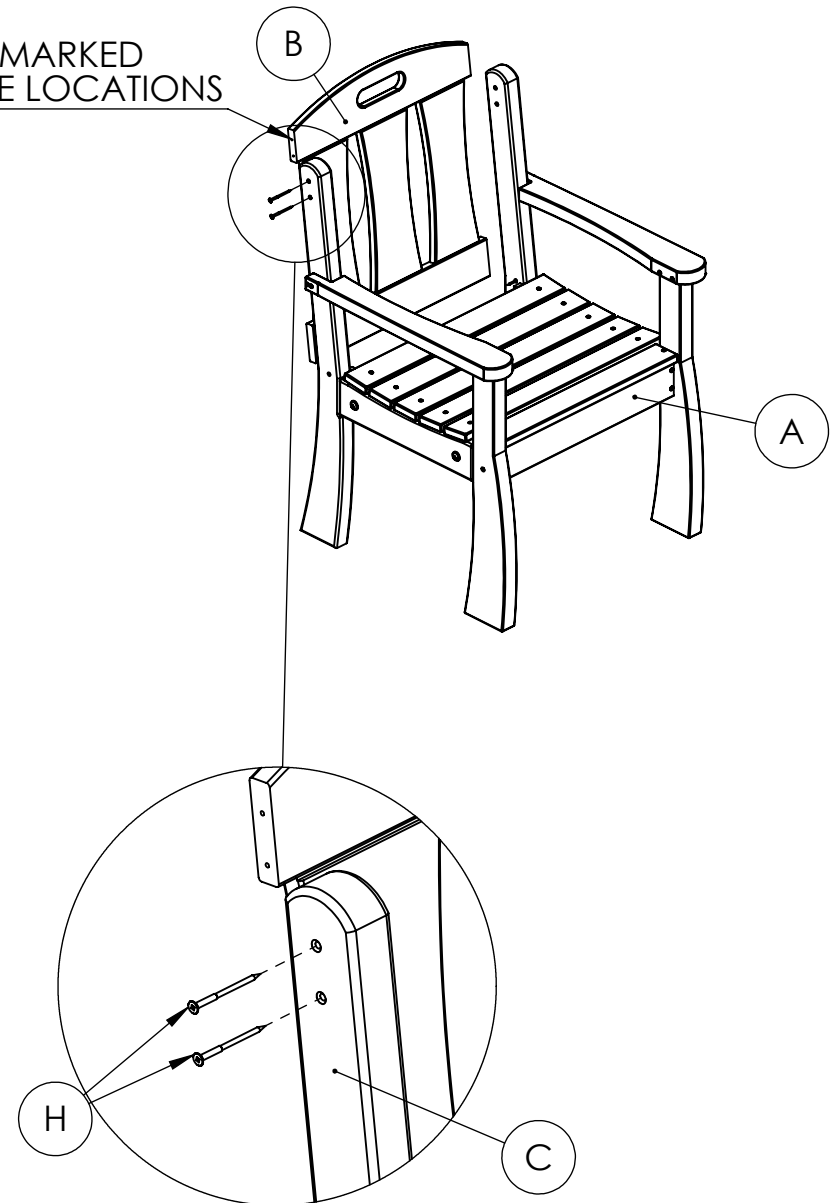


ASSEMBLY

3/5





CHAIR INSTRUCTIONS

STEP 3

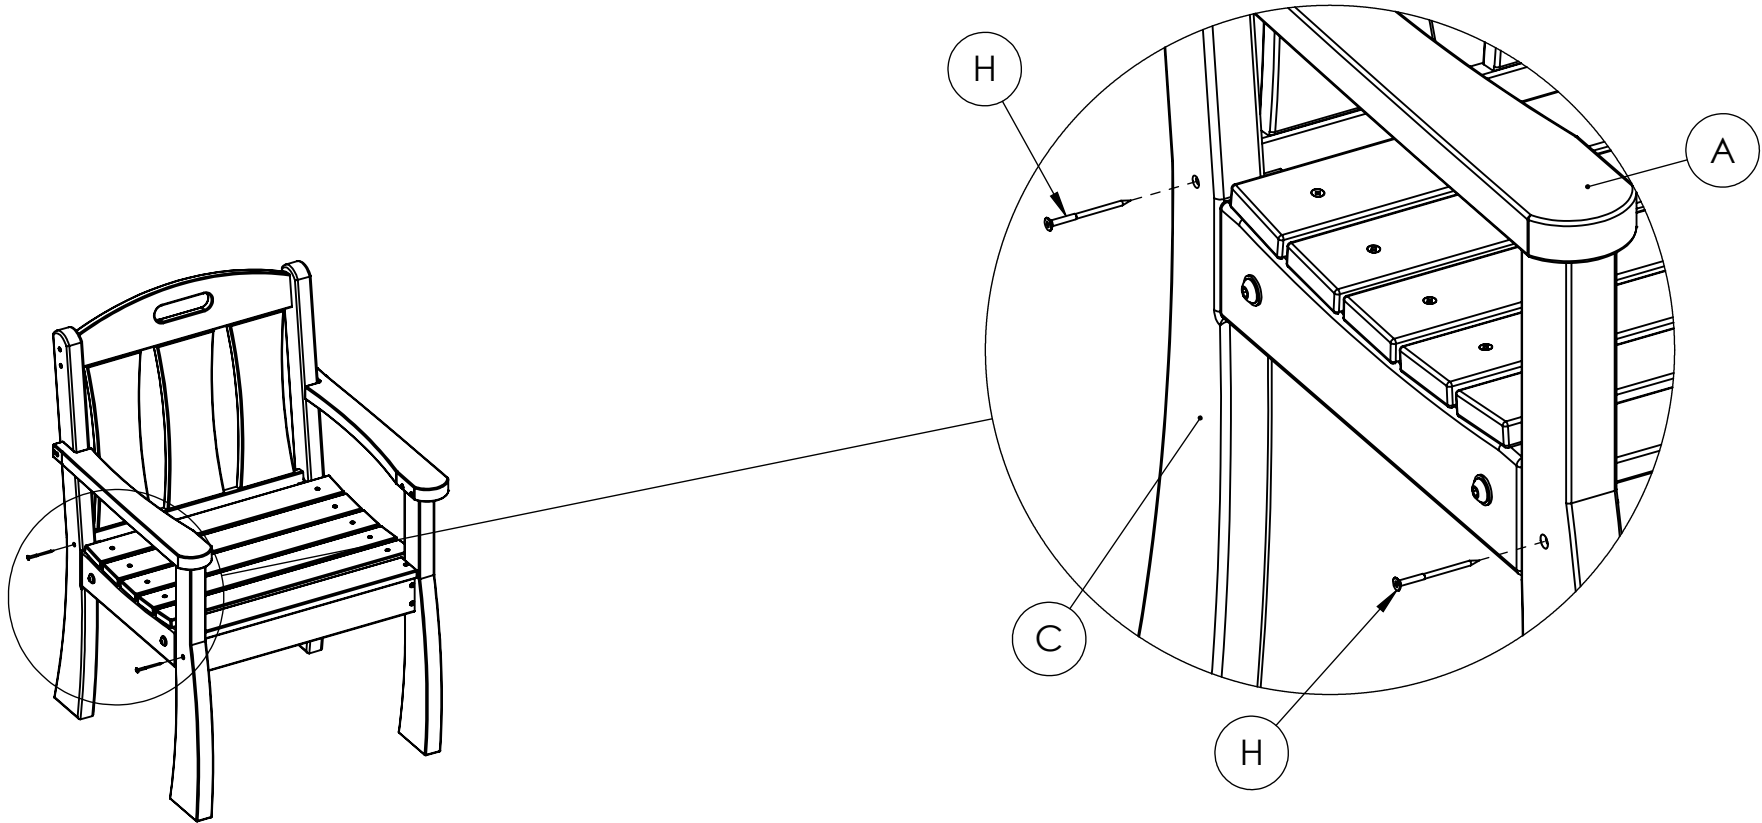

CHAIR SPECIFICATIONS

CF1210 REV# 2
9-12-2022

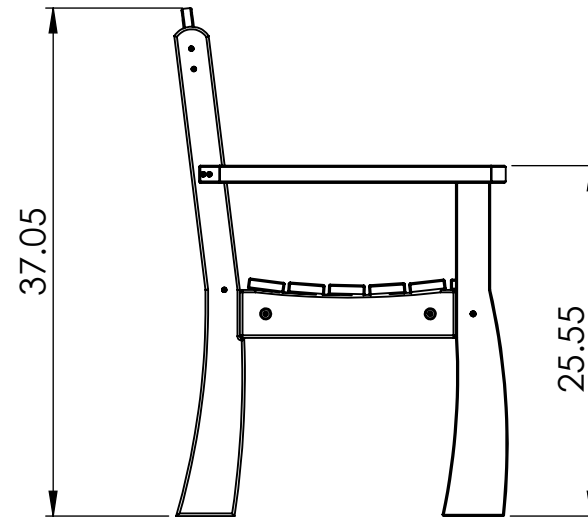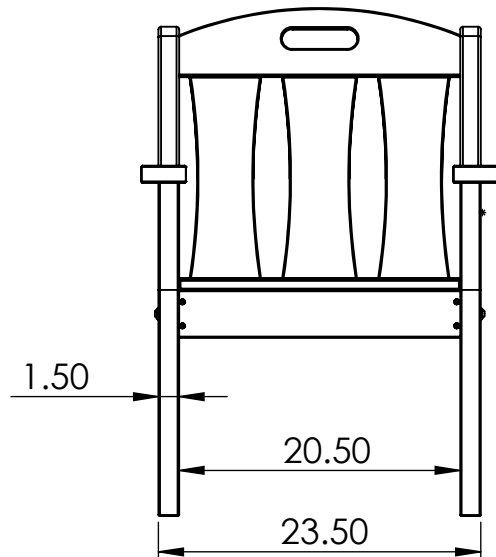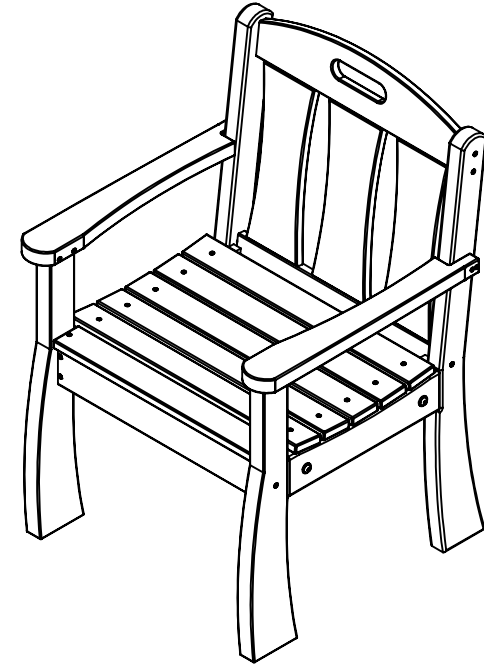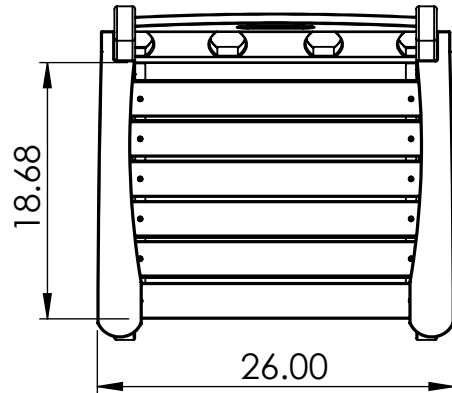

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES