


BENCH INSTRUCTIONS


BC1390

REV# 2
1/22/18

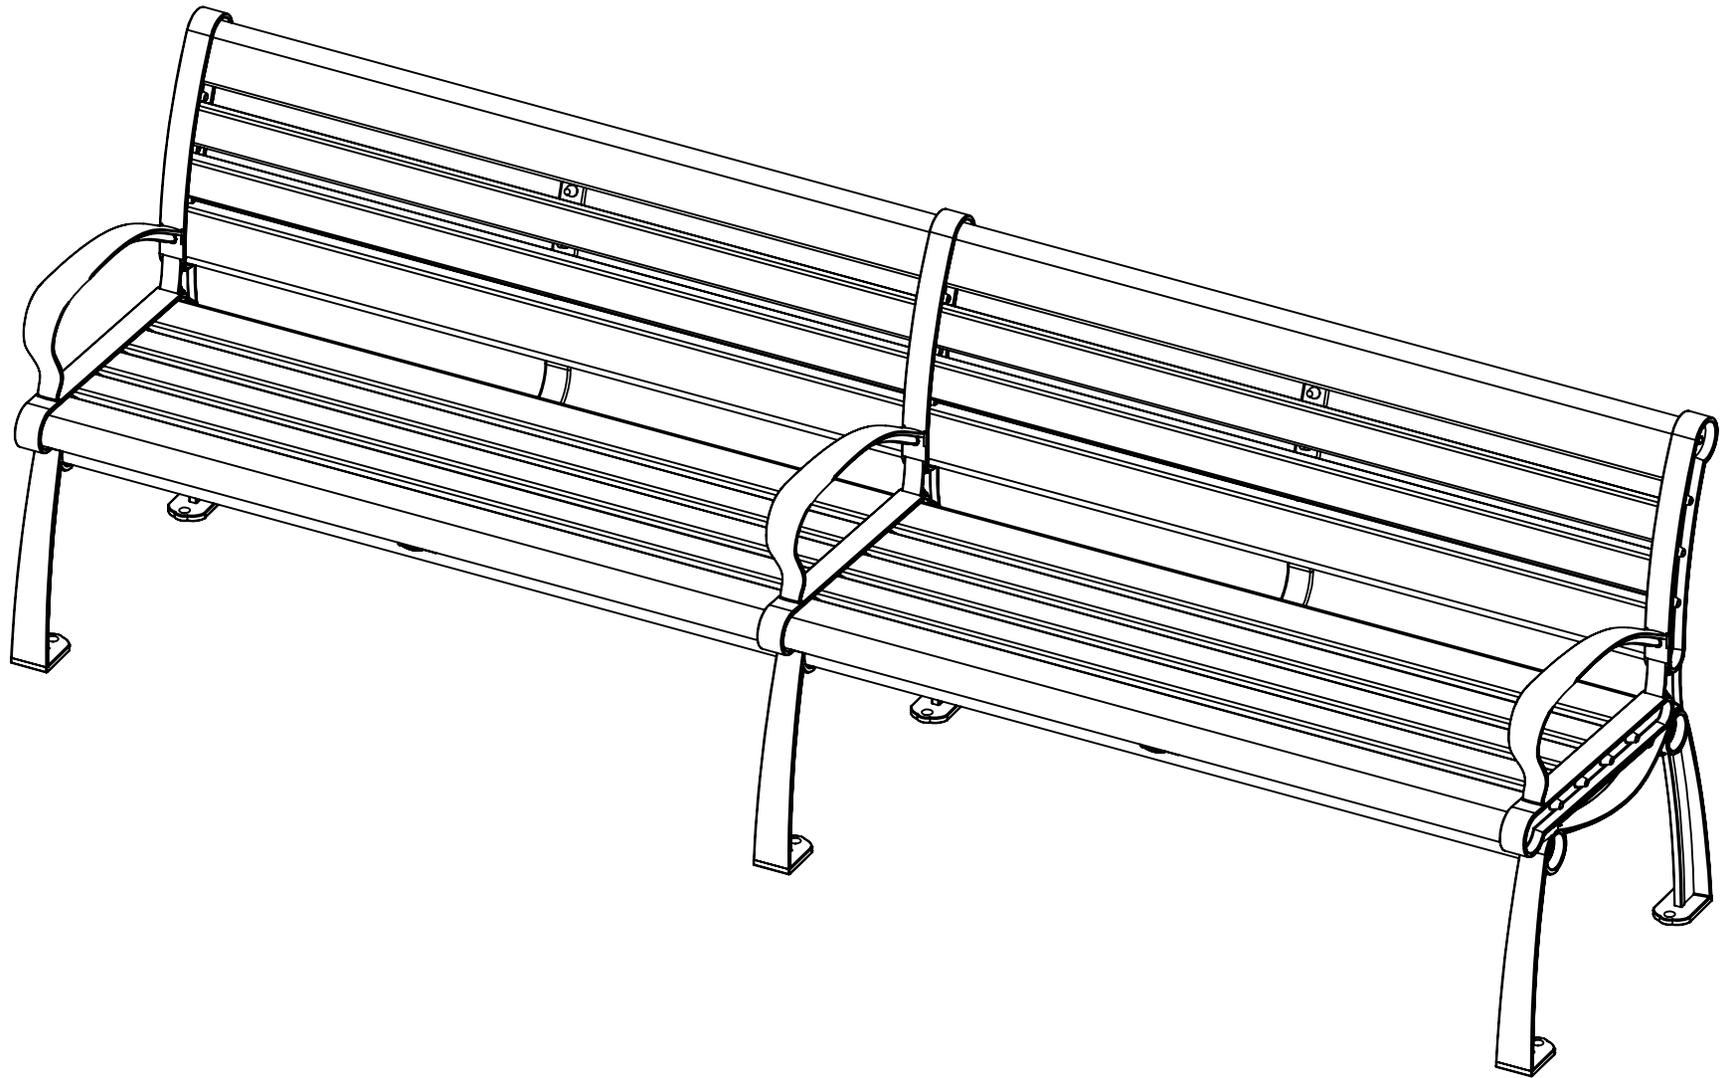


BENCH INSTRUCTIONS


BC1390

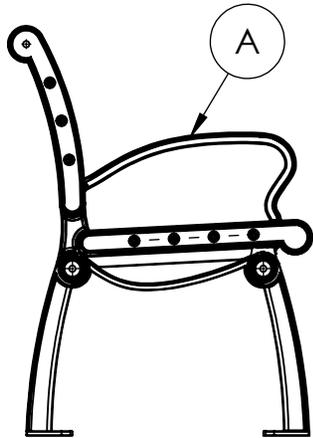

3
Bench ends

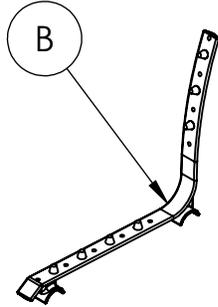



2
Seat Support

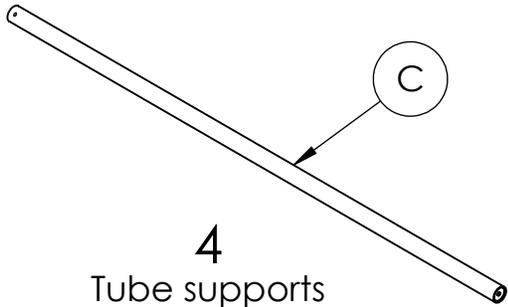


4
Tube supports




10
Square plastic boards

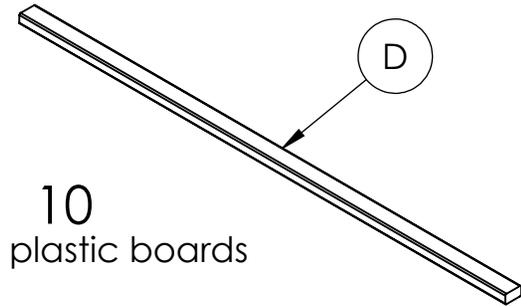

4
Bull nose plastic boards

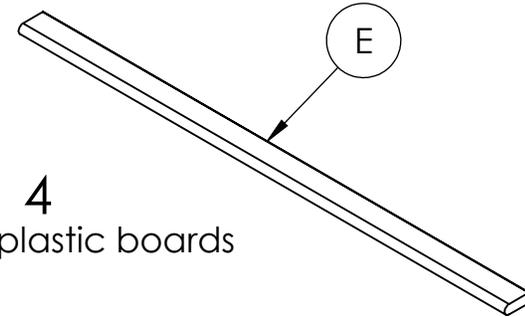

4
Tear drop plastic boards

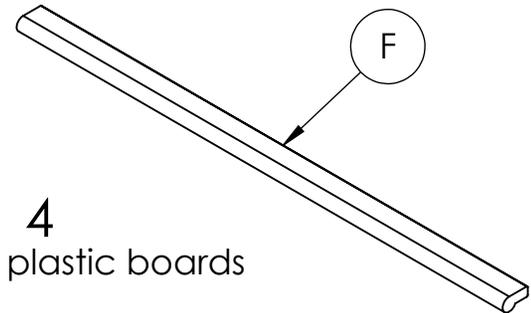


**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**


2/10

BENCH INSTRUCTIONS


BC1390

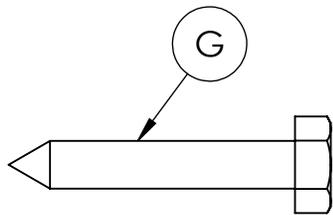


2
1/4" x 1-1/12" Lag screw

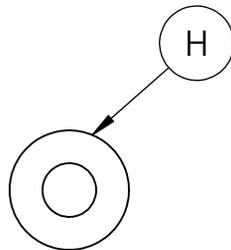


2
1/4" Flat washer

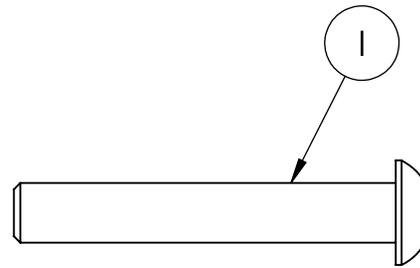


4
M10 x 40mm Button Head
Cap Screw

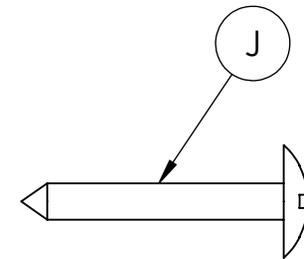

26
#10 x 30mm
Pan Head Screws

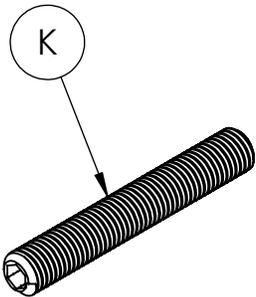

2
M10 x 60mm Set Screw
with Hex End

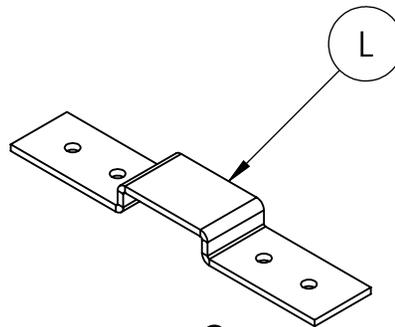

2
Center Bracket

REQUIRED TOOLS (NOT INCLUDED)

- 1 - 7/16" SOCKET WRENCH
 - 1 - 6mm ALLEN WRENCH
 - 1 - 5mm ALLEN WRENCH
 - 1 - PHILLIPS HEAD BIT
 - 1 - 1/8" DRILL BIT
 - 1 - #2 SQUARE DRIVE BIT
- POWER DRILL


**NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE
DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED**

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**

3/10

BENCH INSTRUCTIONS BC1390



- Thread set screw (K) into tube (C) until it stops
- Place thru bench end (A) and twist on other tube
- **FULLY TIGHTEN**

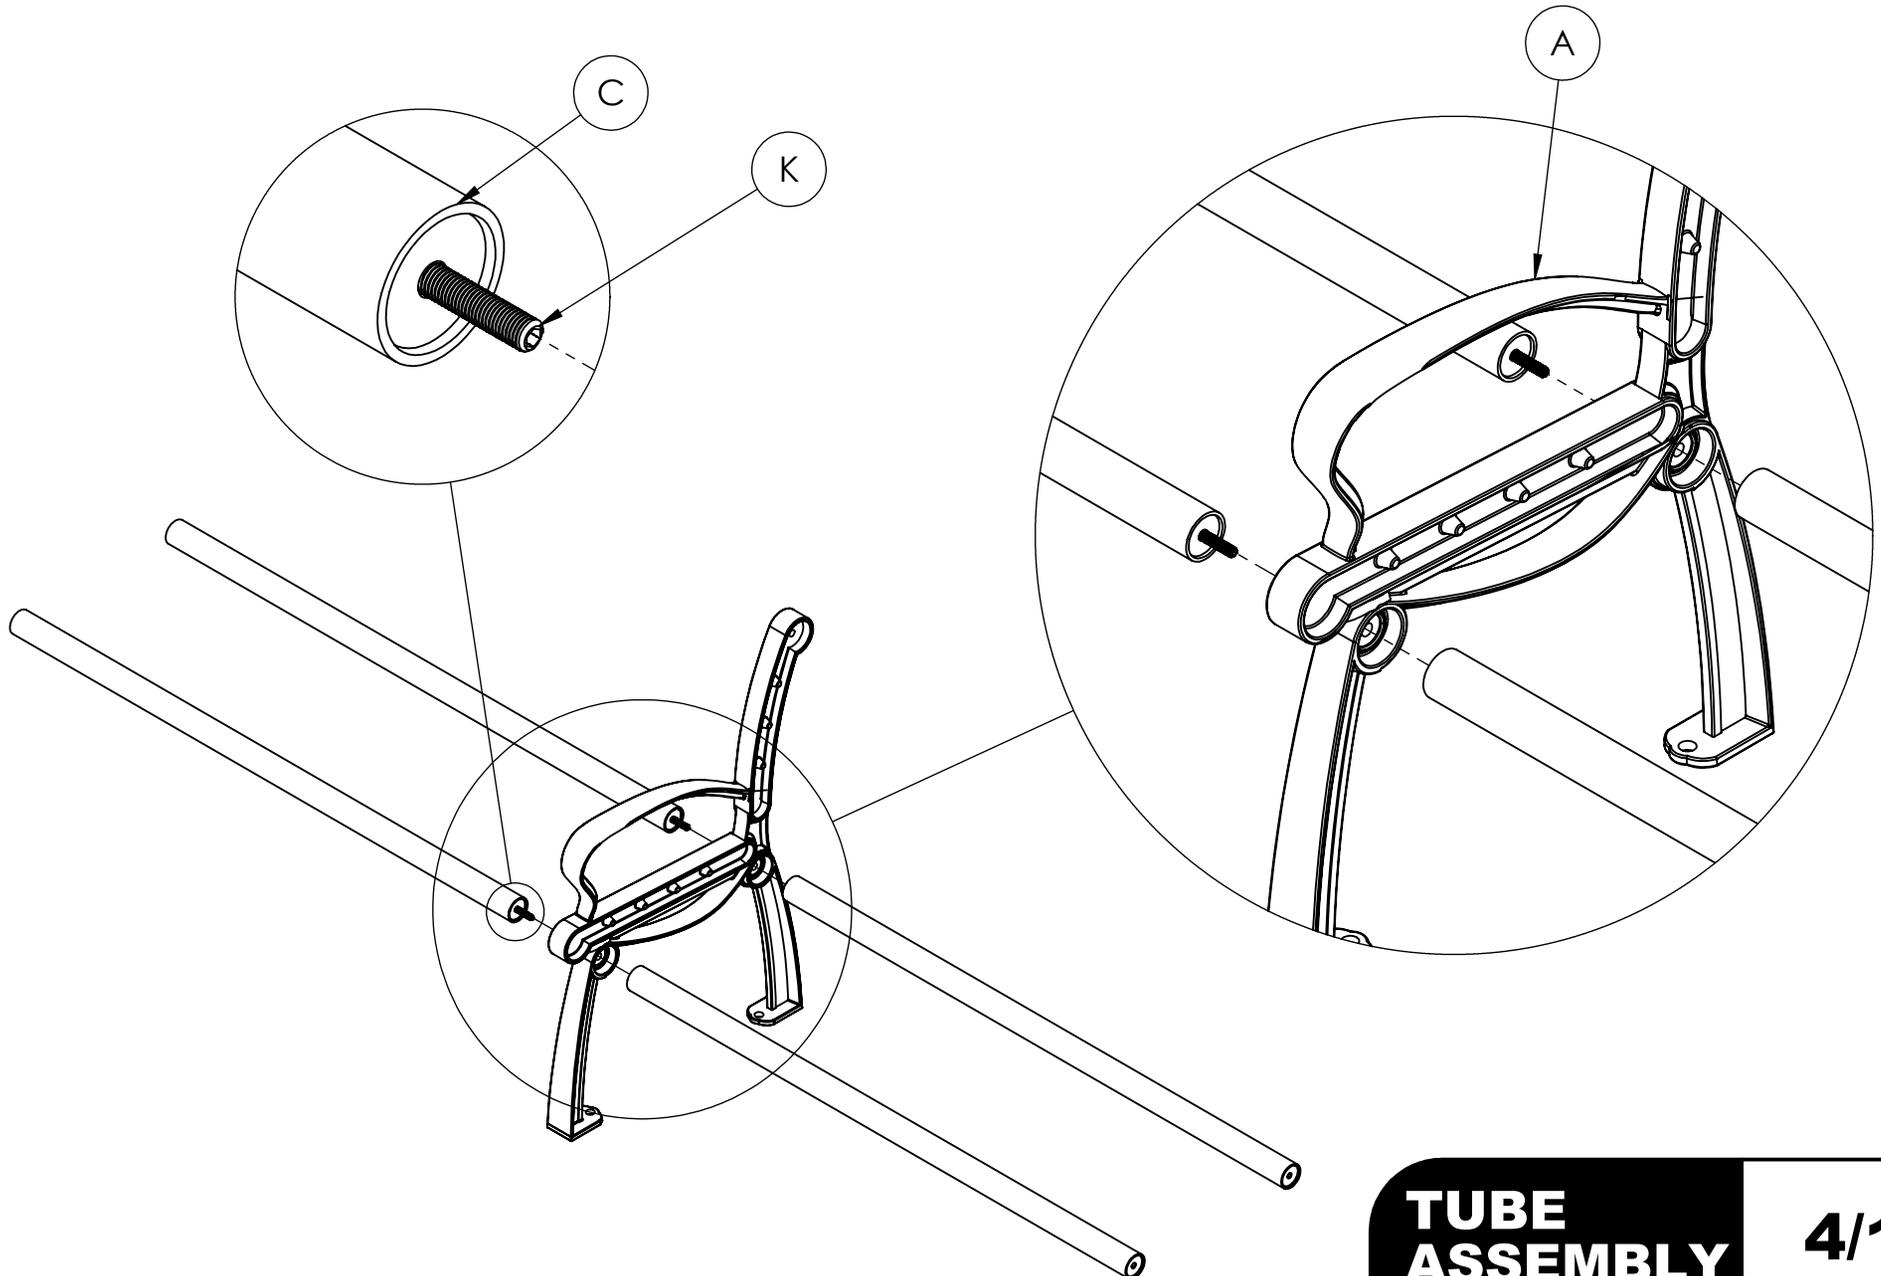

BENCH INSTRUCTIONS

BC1390

NOTE: IT IS IMPORTANT TO KEEP THESE BOLTS (I) LOOSE DURING ASSEMBLY

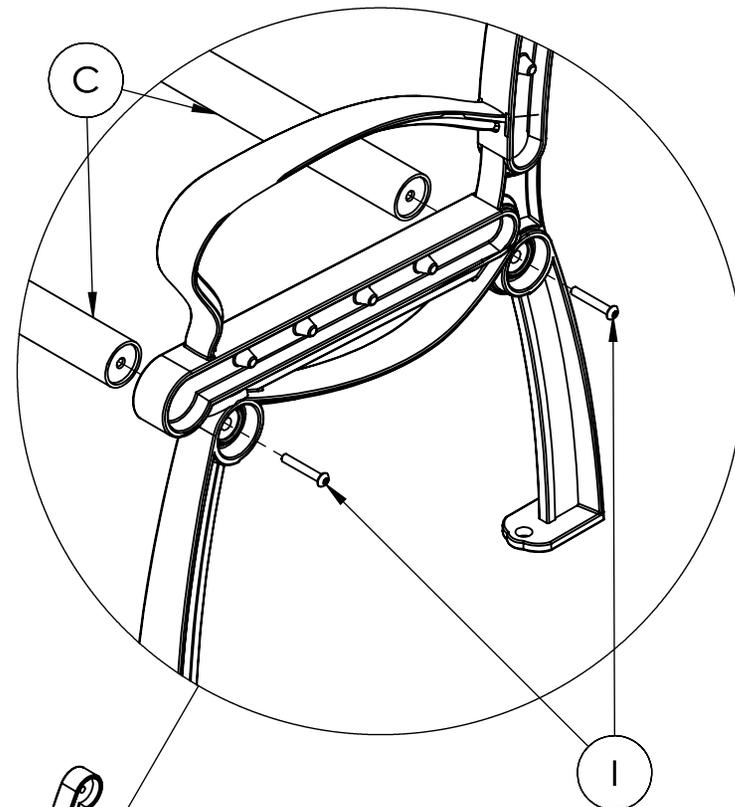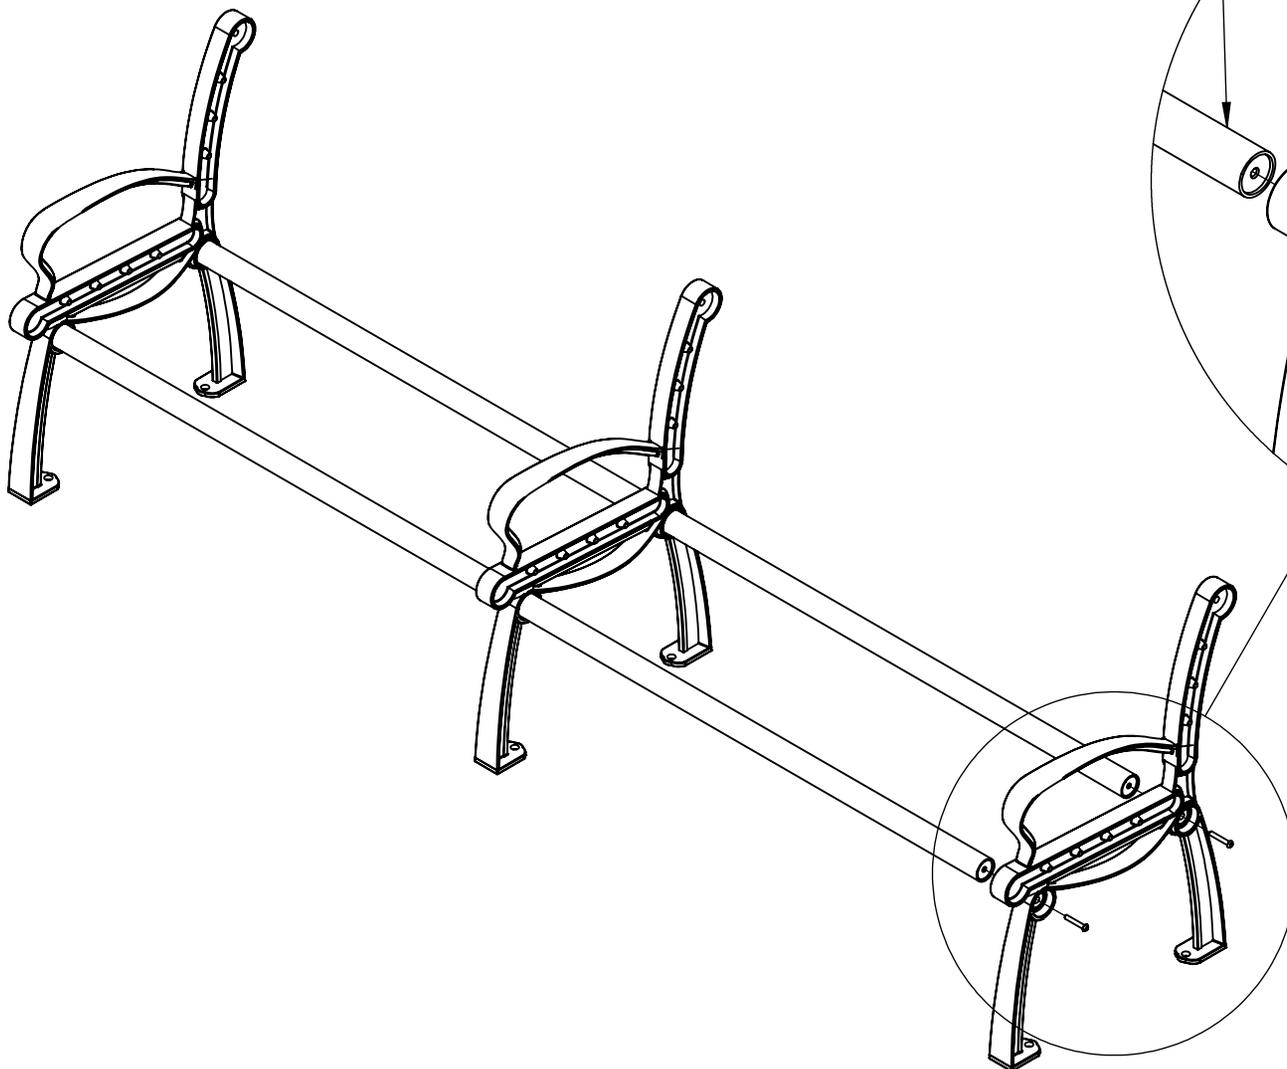

DO NOT FULLY TIGHTEN


**TUBE
ASSEMBLY**

5/10

BENCH INSTRUCTIONS


BC1390

With outer bench ends loose, place seat boards inside frame pockets

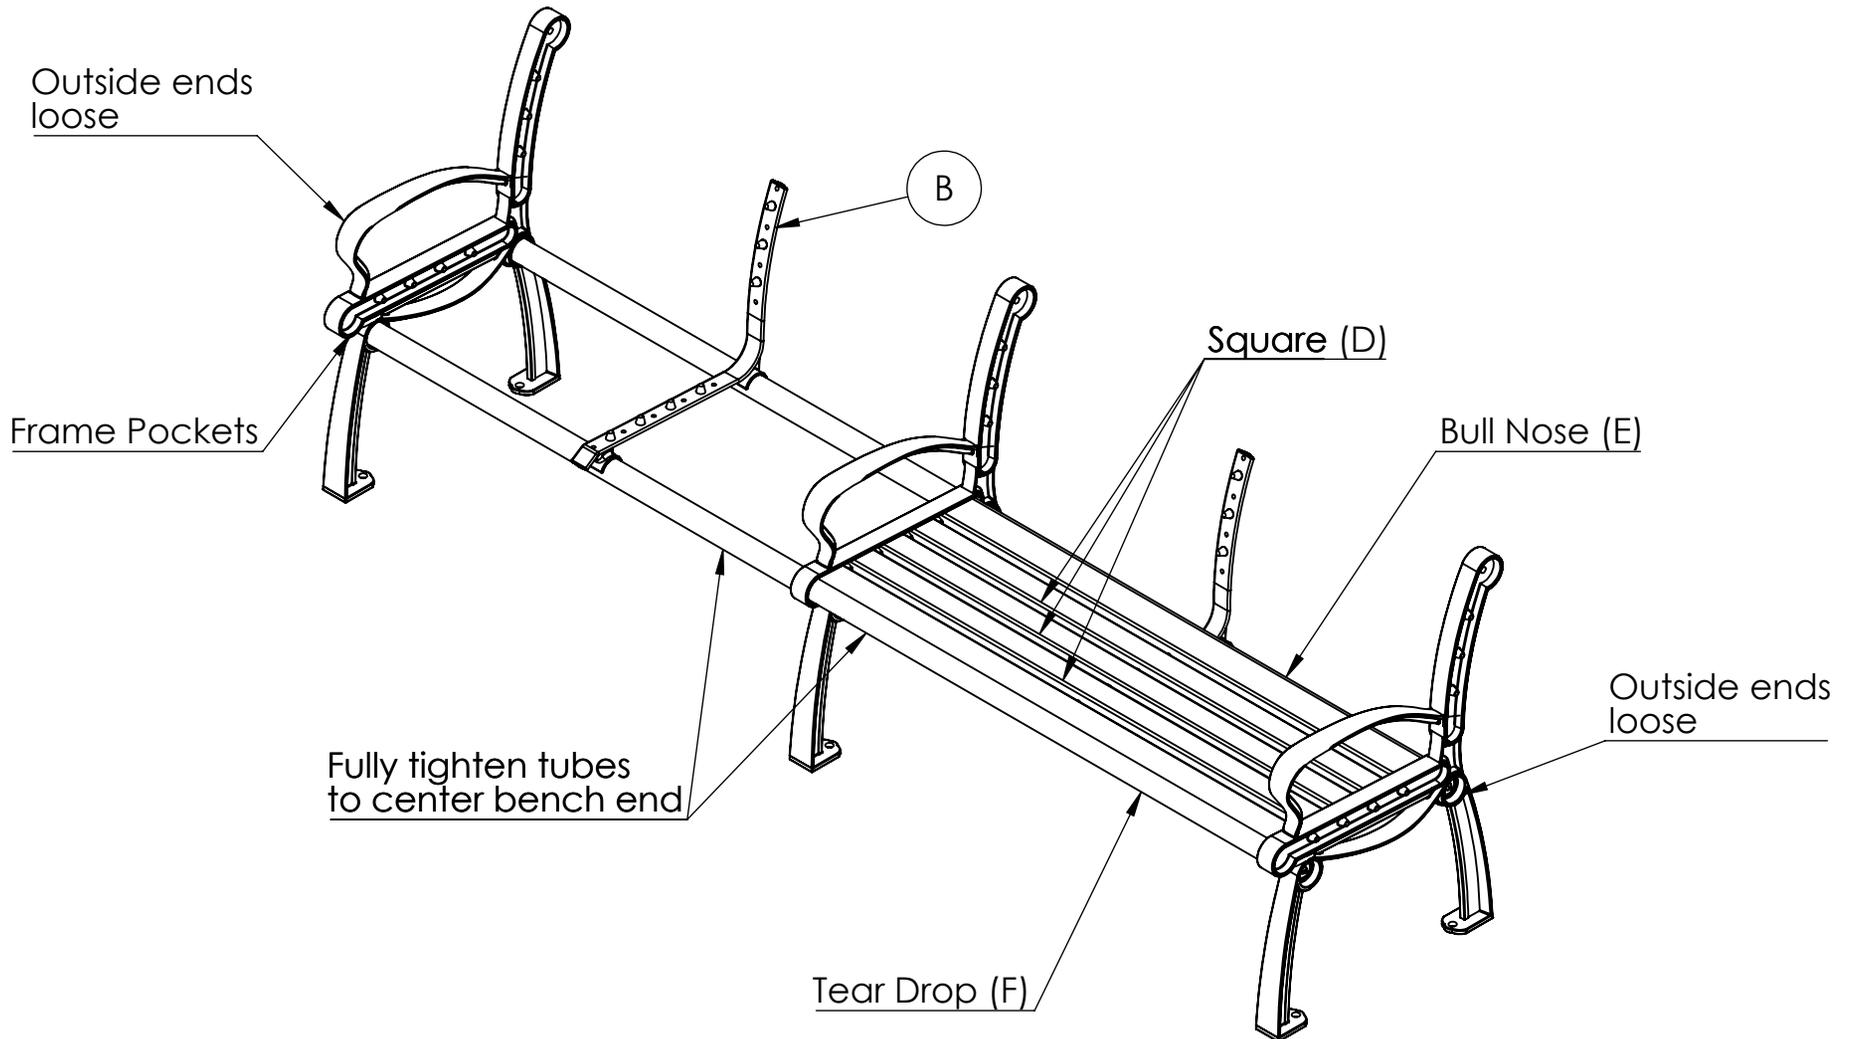

BENCH INSTRUCTIONS

BC1390


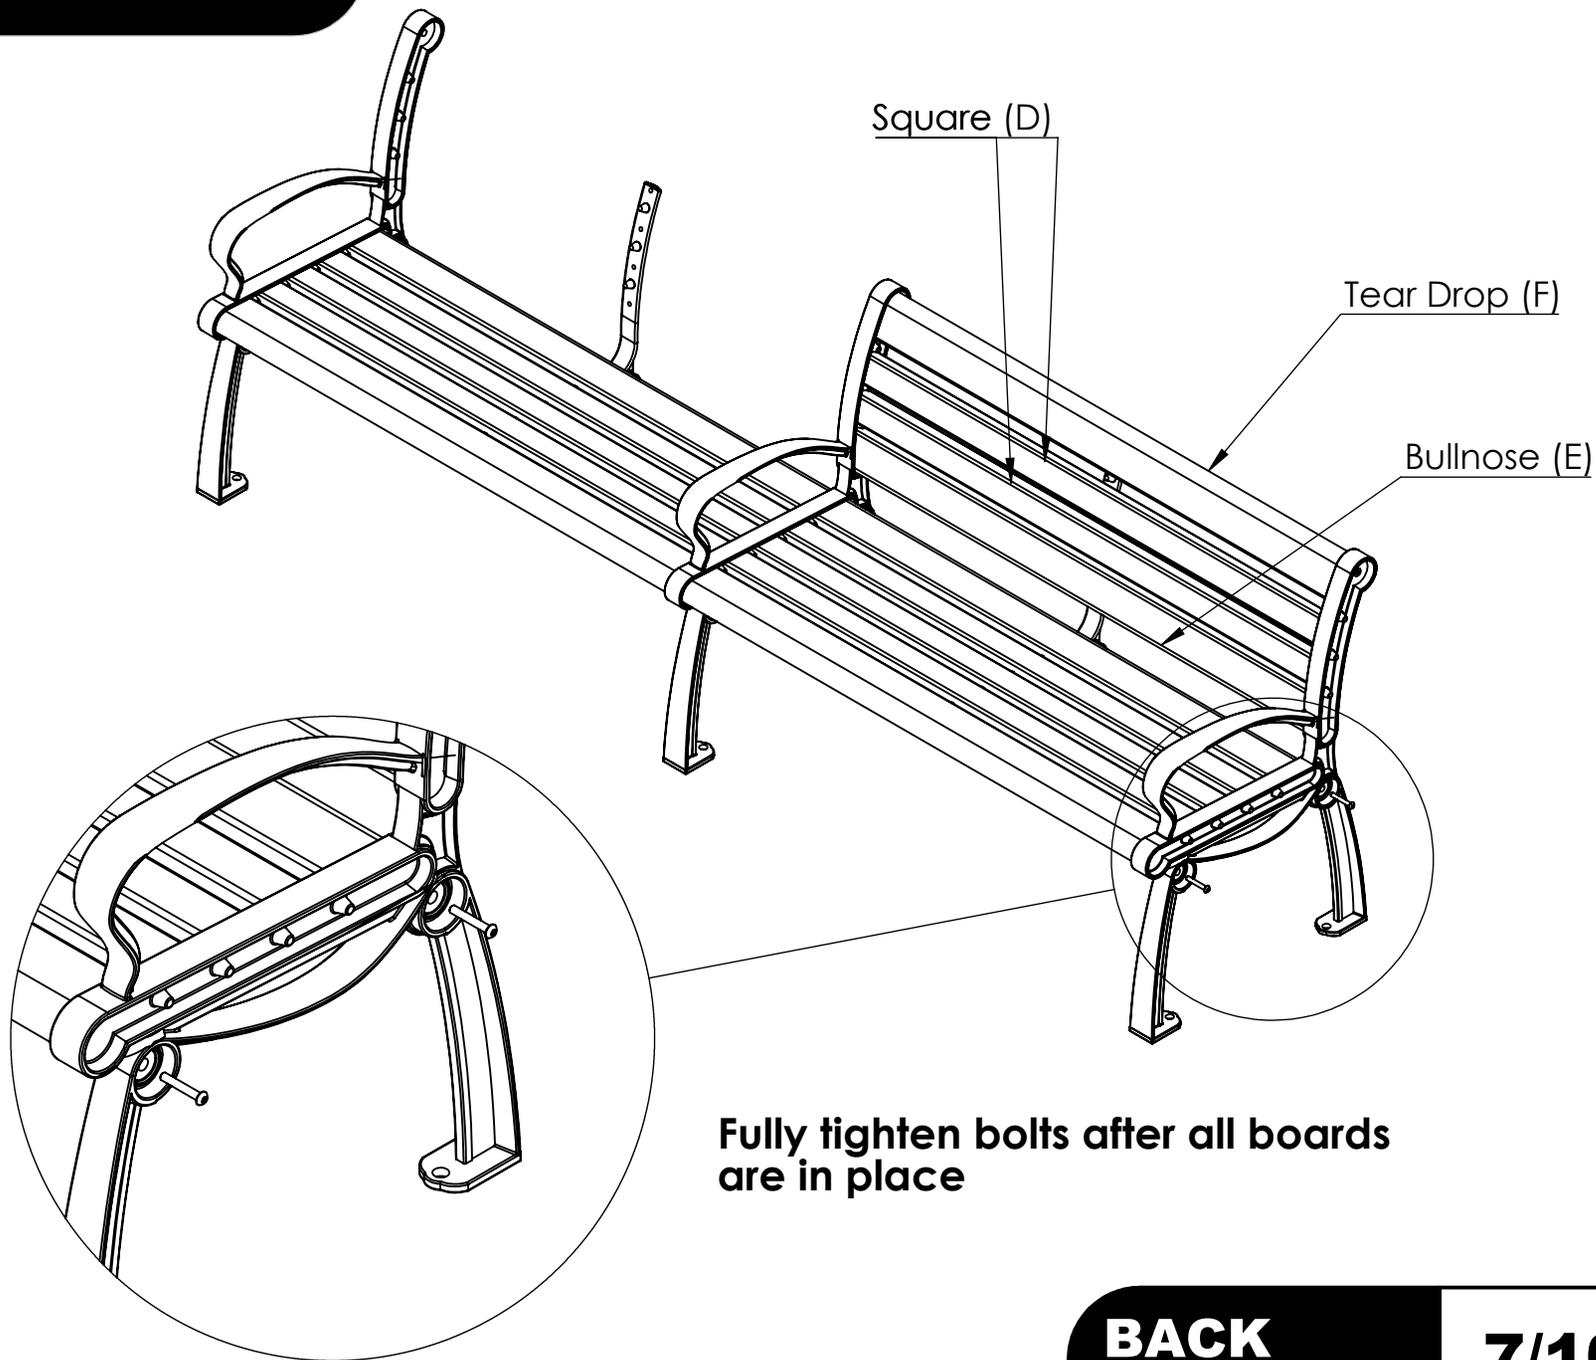


Fully tighten bolts after all boards are in place

BENCH INSTRUCTIONS

BC1390

Push the top boards tight against the center bench end and attach the center bracket first to the top board. Then attach the center bracket to the second board from the top. Make sure the bracket is not visible below the board.



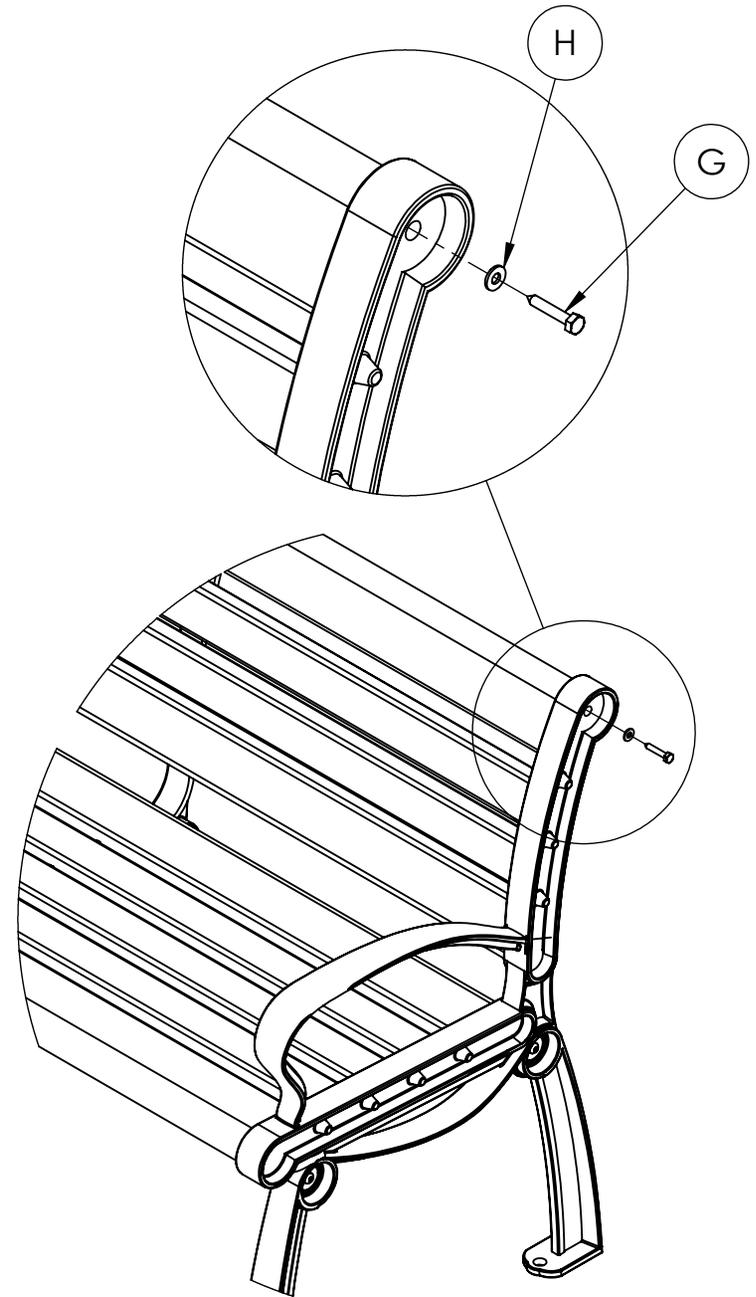
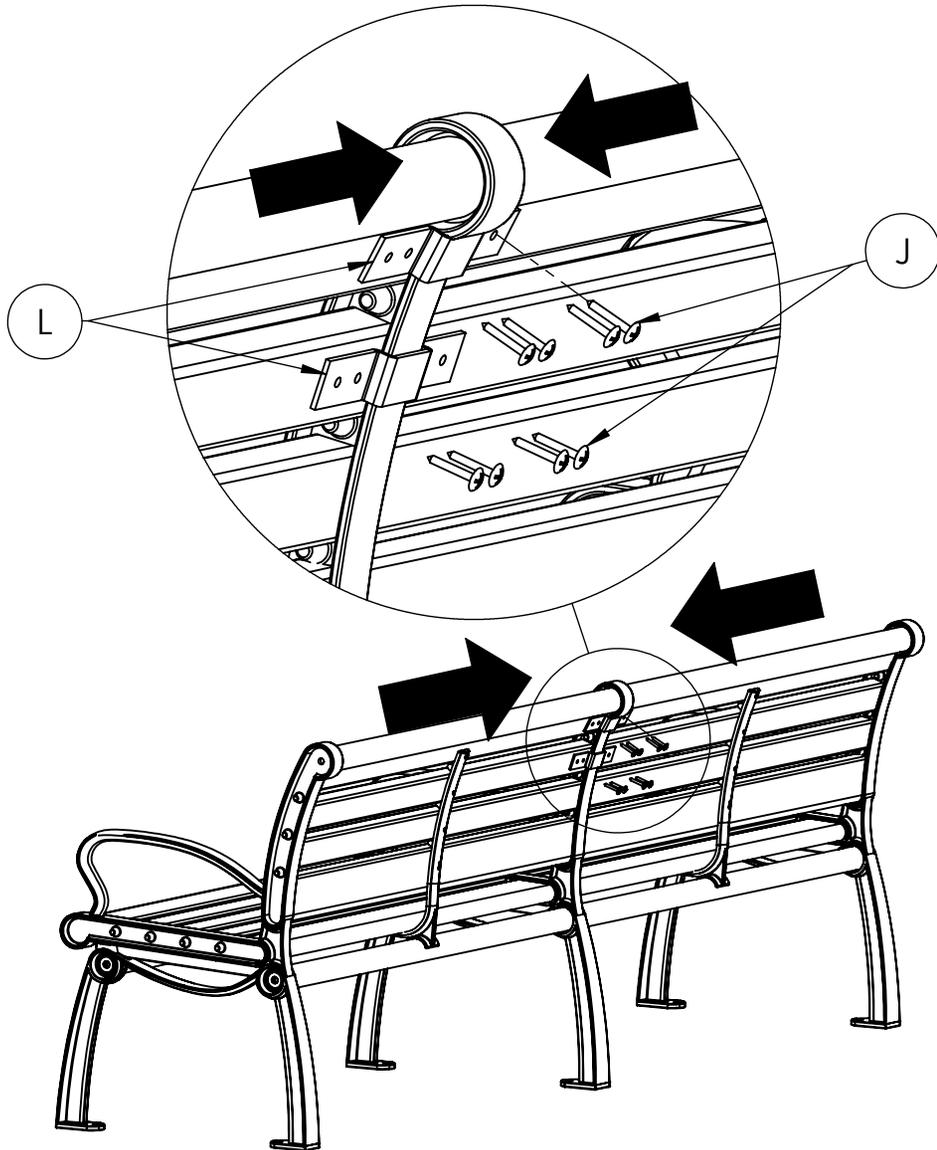


**CENTER
BRACKET**

8/10

BENCH INSTRUCTIONS

BC1390

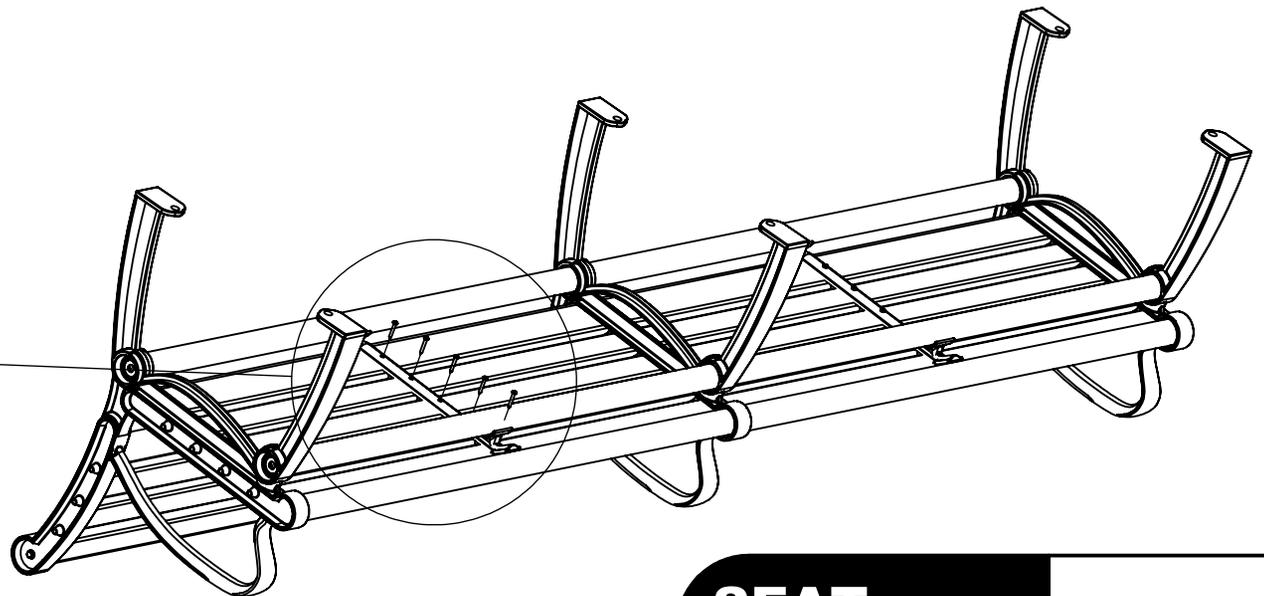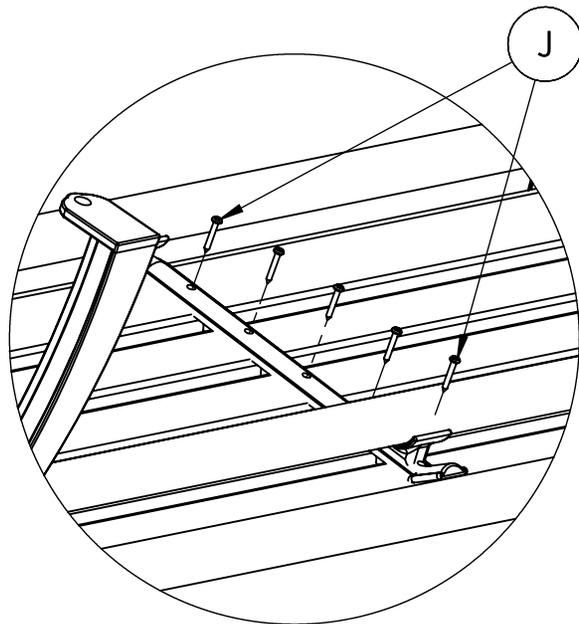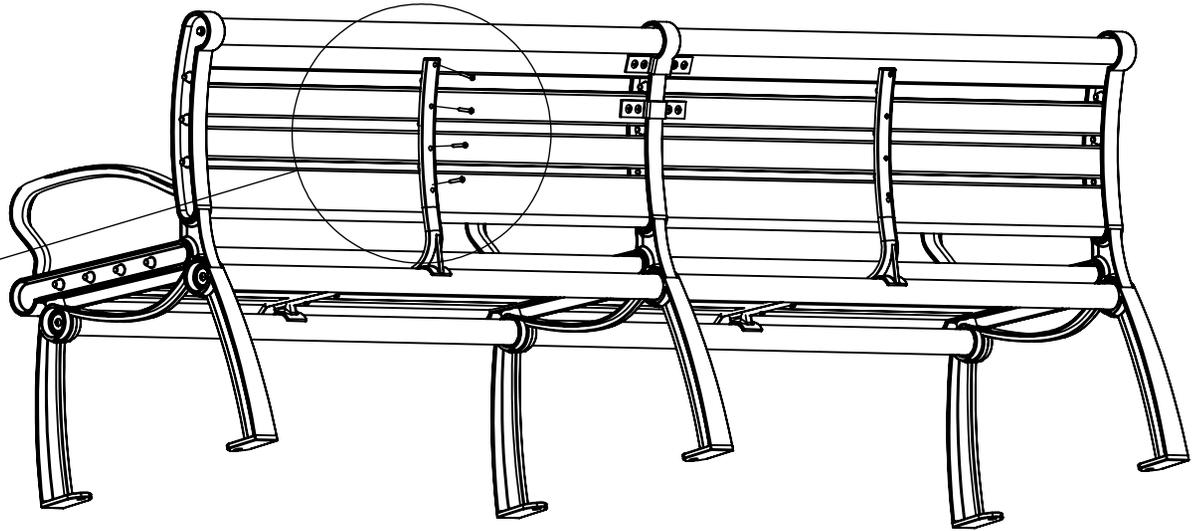
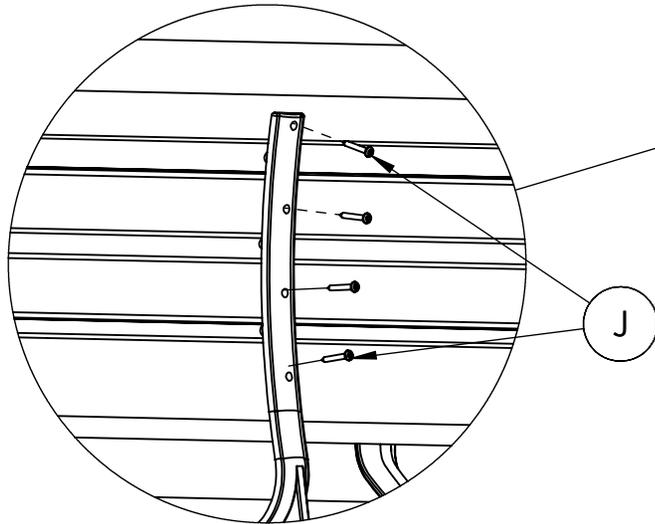


**SEAT
BRACKET**



9/10

BENCH SPECIFICATIONS BC1390

REV# 2
1/22/18

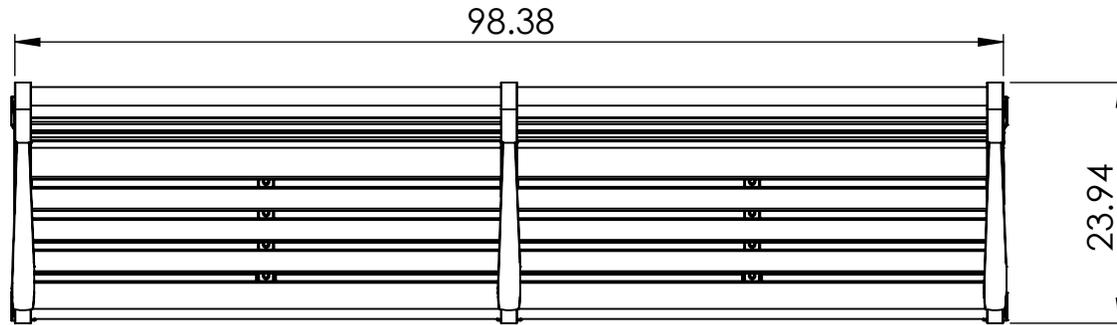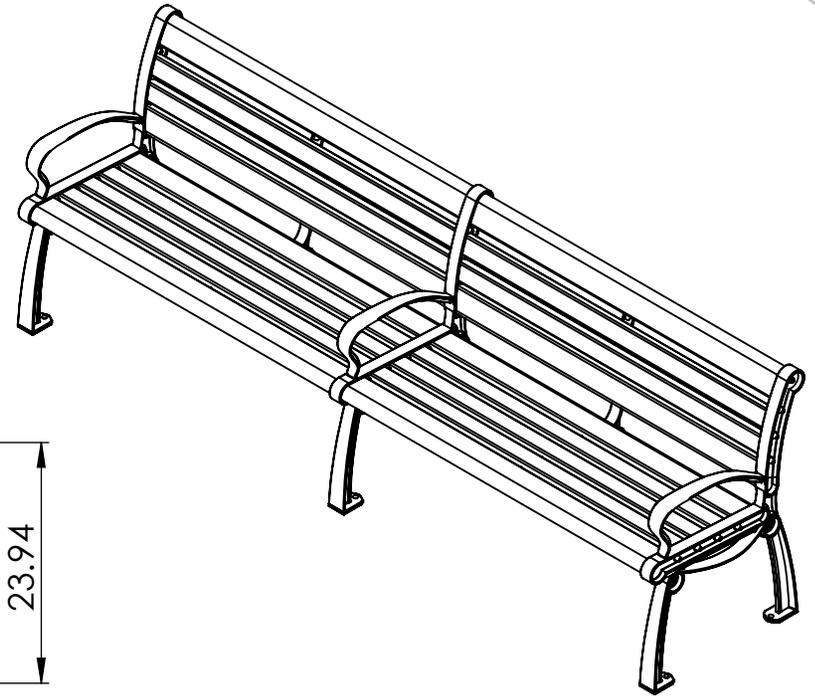

Tear drop board 3.75" x 1.34" 2.88" of flat surface on board
Bull nosed board 3.75" x 1.34" 3.00" of flat surface on board
Square board 2.36" x 1.34"

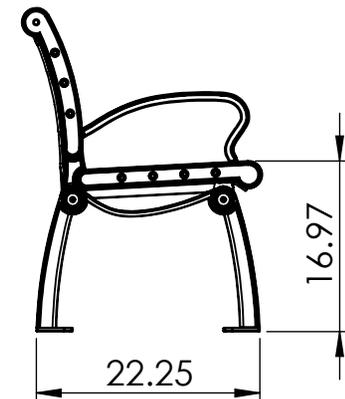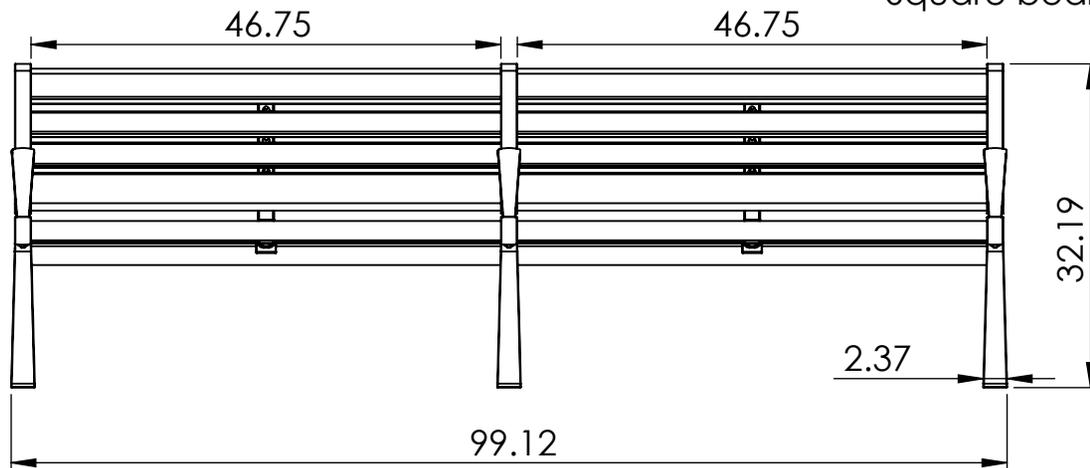

CONSTRUCTION MATERIALS:

Recycled Plastic
Cast Aluminum

HARDWARE:

Stainless Steel

ALL DIMENSIONS ARE SHOWN IN INCHES